






MOUNTAIN TOP® EV0m

Installation manual




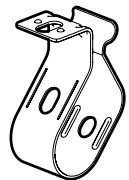
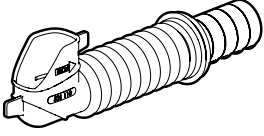
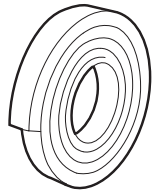
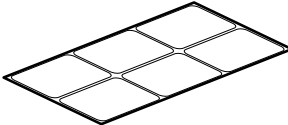
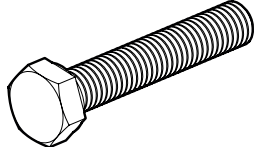

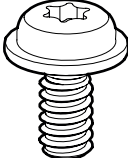
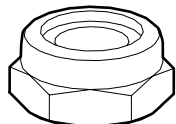


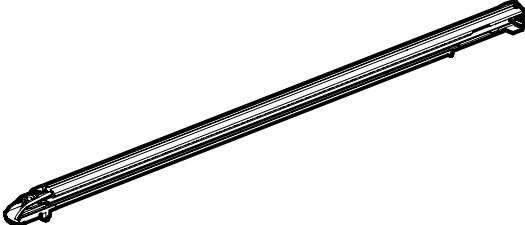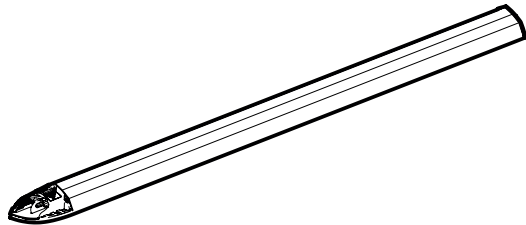
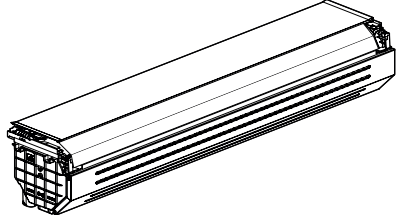
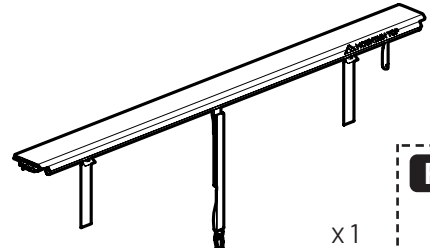


DOWNLOAD PDF

Parts

<p>A</p>  <p>x1</p>	<p>B</p>  <p>x1</p>
<p>C</p>  <p>x1</p>	<p>D</p>  <p>x1</p> <div style="border: 1px dashed black; padding: 2px; display: inline-block;"> <p>R2</p>  <p>x1</p> </div>

Kit
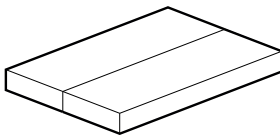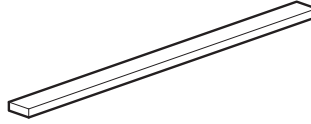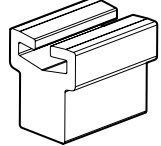
<p>E</p>  <p>LEFT x1</p>	<p>F</p>  <p>RIGHT x1</p>	<p>G</p>  <p>x12</p>	<p>H</p>  <p>x6</p>
<p>I</p>  <p>x2</p>	<p>J</p>  <p>x1</p>	<p>K</p>  <p>x1</p>	<p>L</p>  <p>x6</p>
<p>M</p>  <p>x6</p>	<p>N</p>  <p>x4</p>	<p>O</p>  <p>x6</p>	<p>P</p>  <p>x6</p>
<p>R</p>  <p>x6</p>	<p>S</p>  <p>x1</p>	<p>T</p>  <p>x2</p>	<p>U</p>  <p>x4</p>

Kit




Manual

x1



TÜV


x1

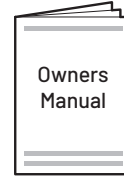

Owners
Manual


x1

Tools needed

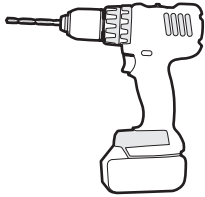

Ø3,5MM







1 - 25 Nm

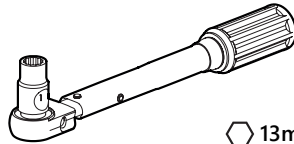


13mm
T30





Rust protection
Rostschutzmittel
Anti-rouille
Anti roest

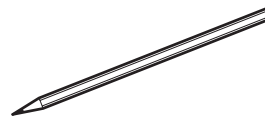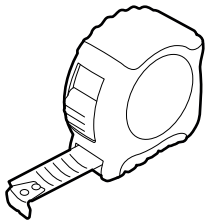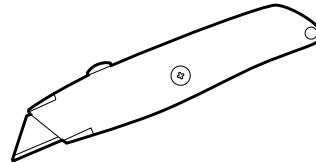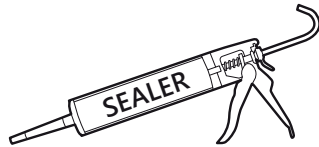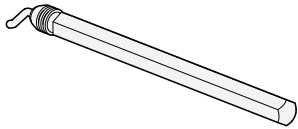


Applying rust protection


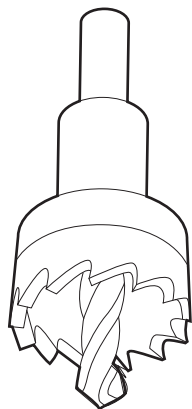


Ø32MM

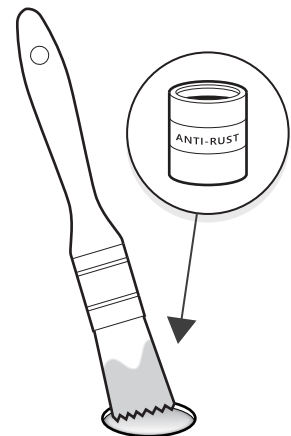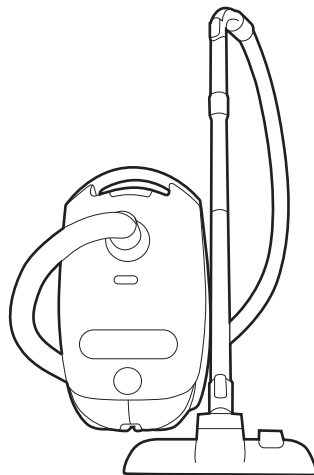


Sharp edge

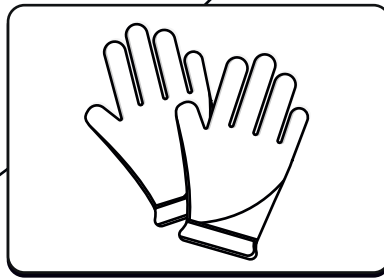


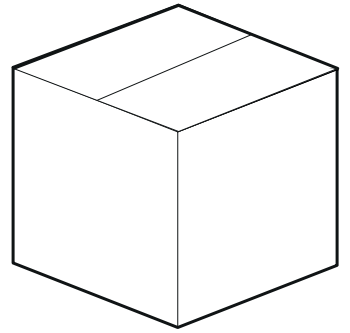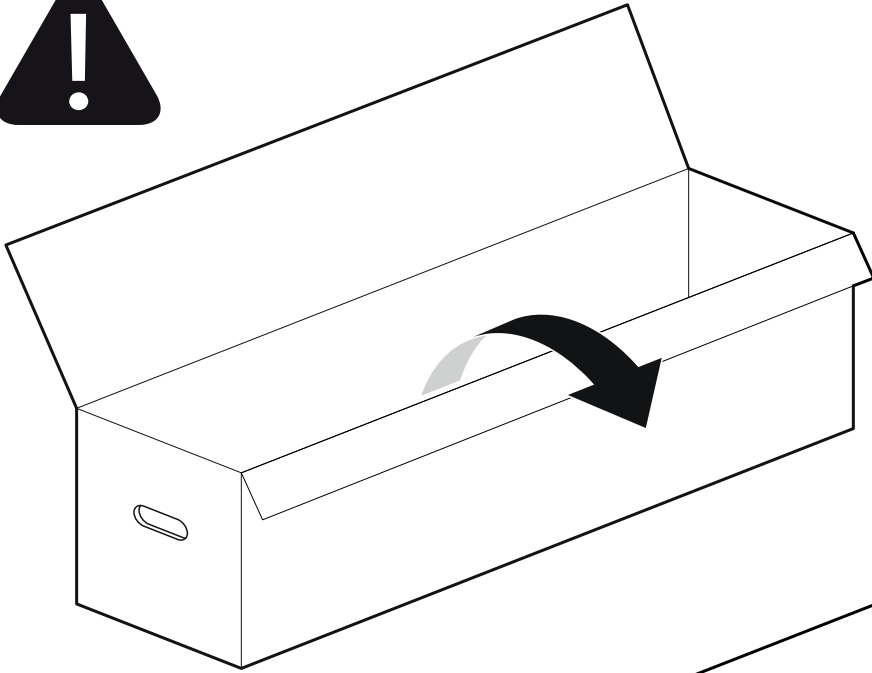


C

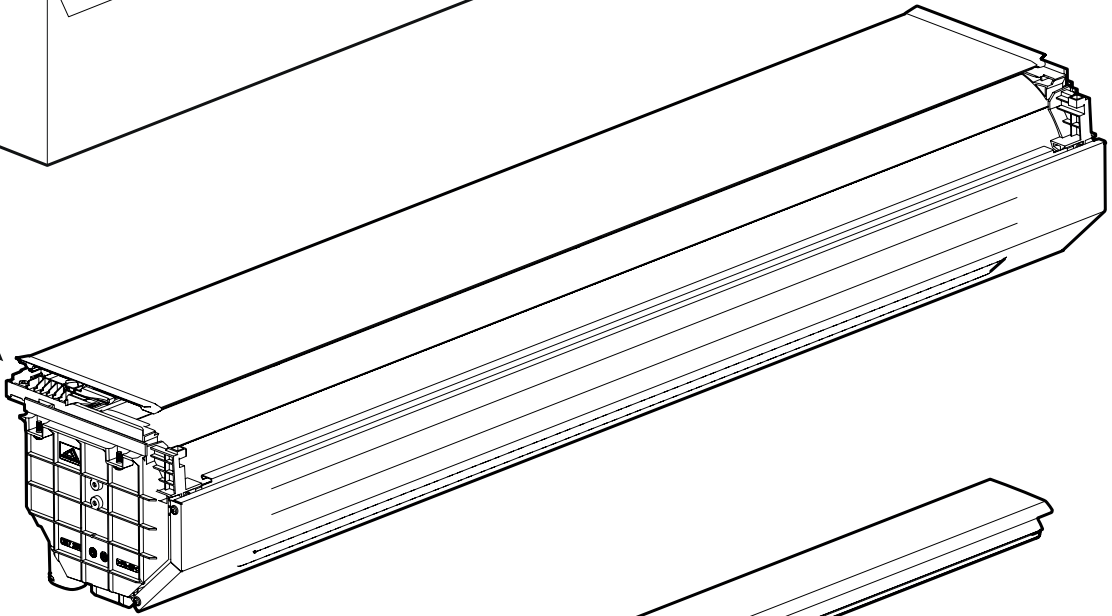

D

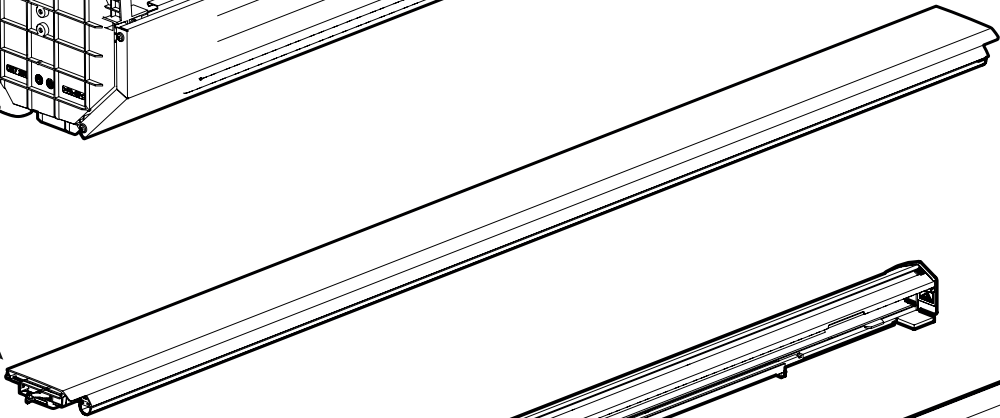

A

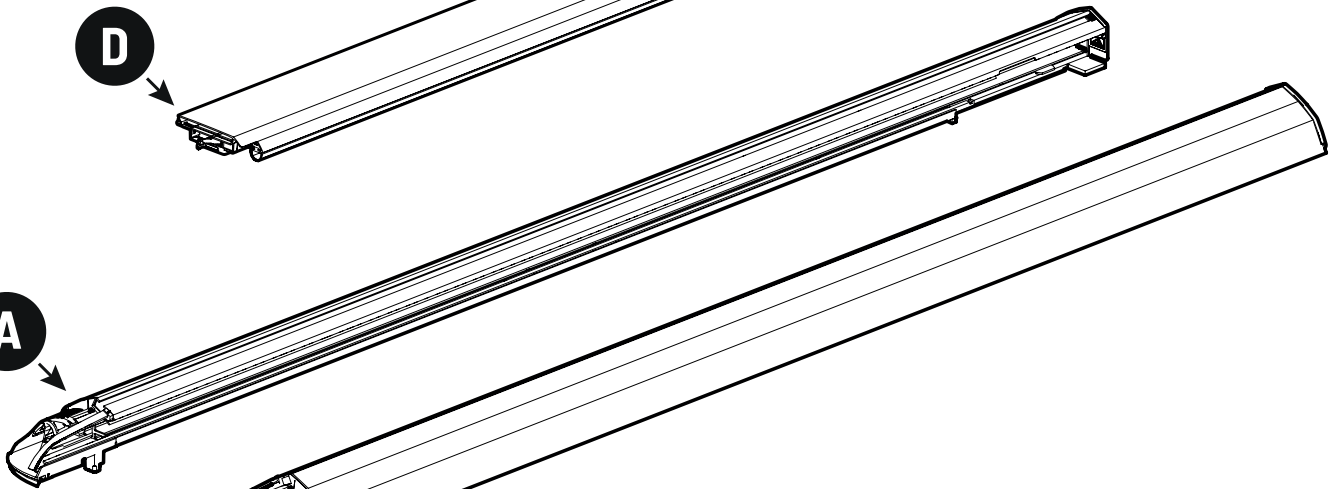


B








Water & sponge

2

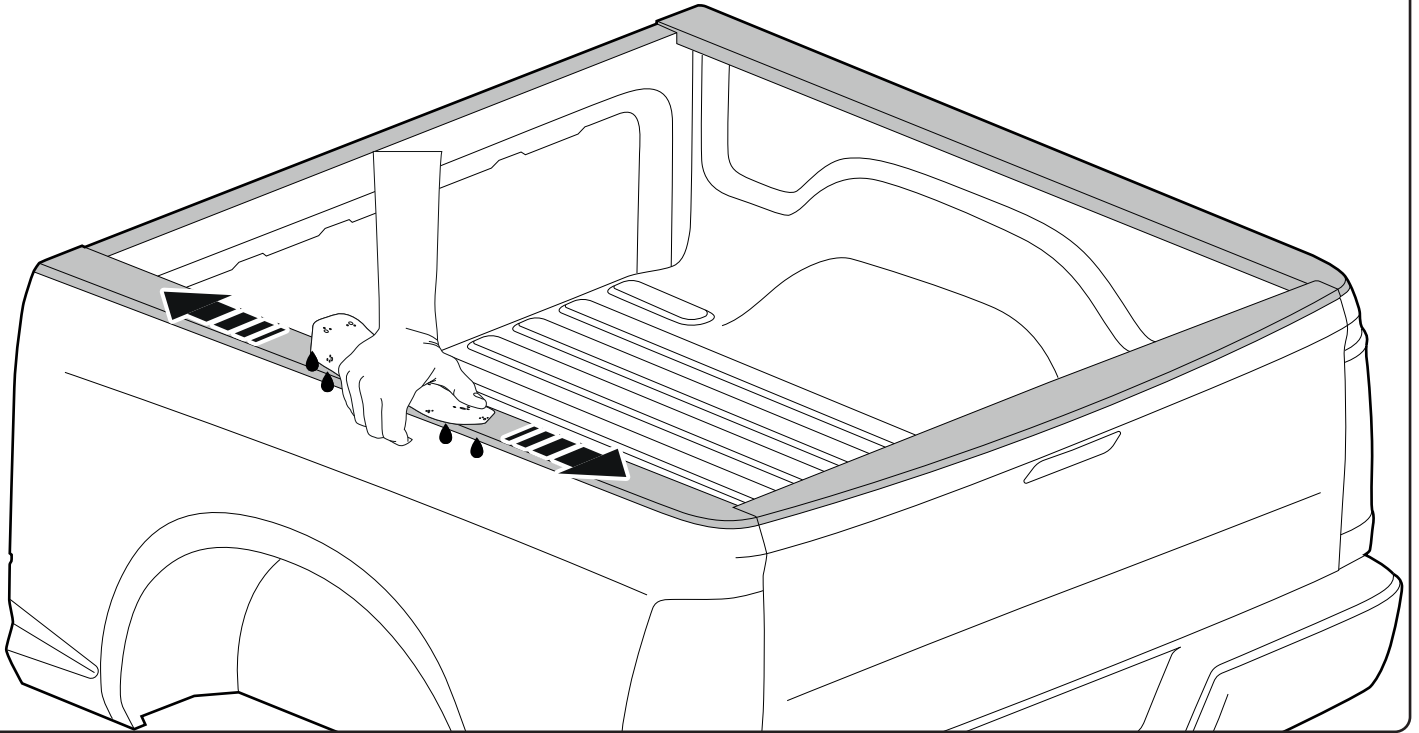


3


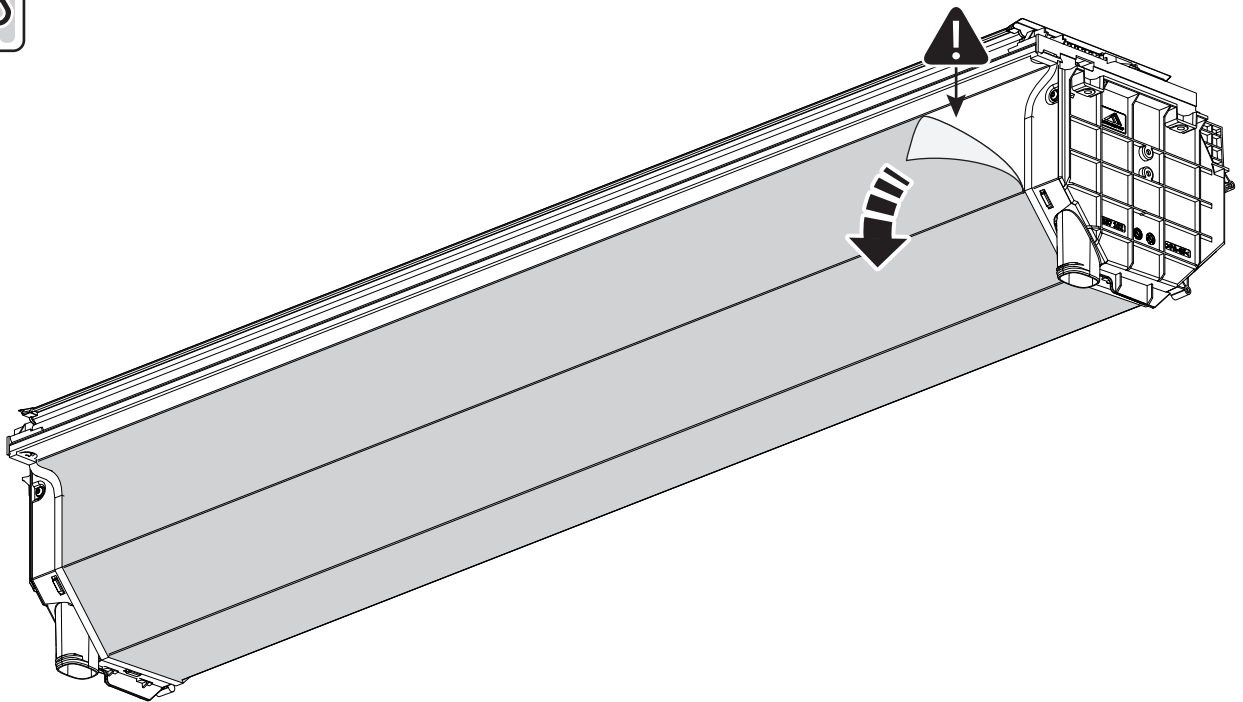


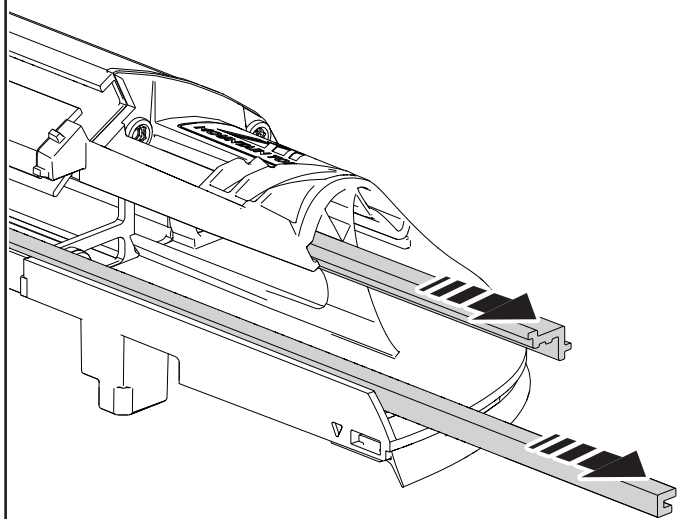
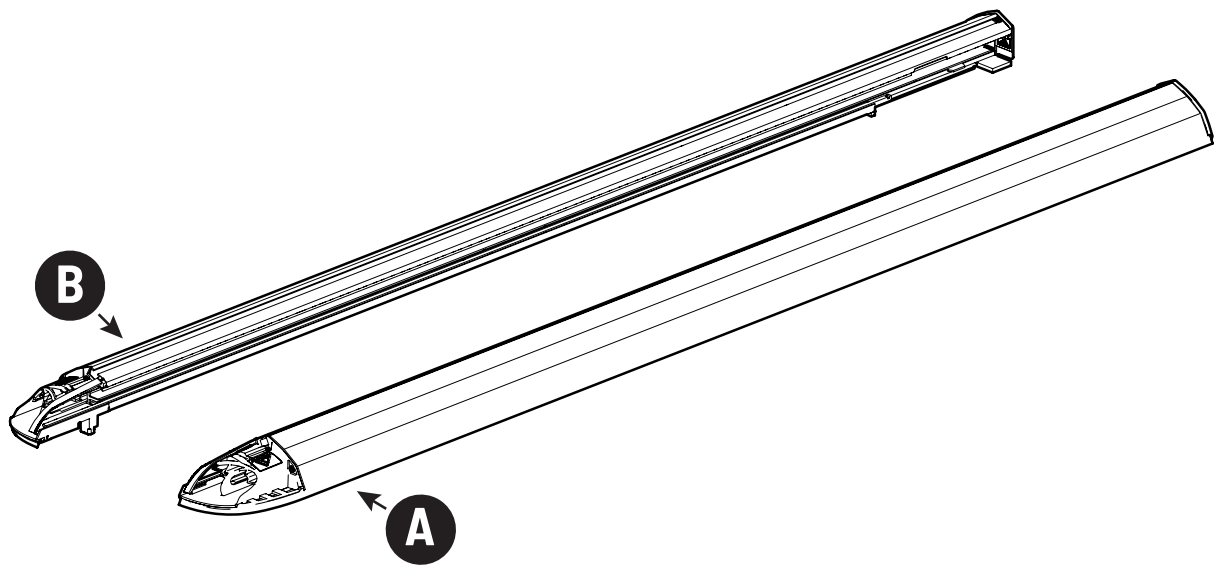




1


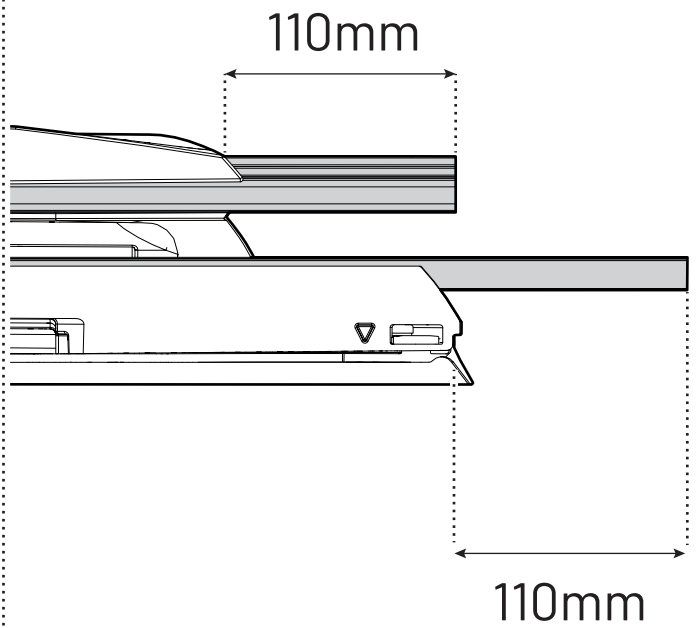




2

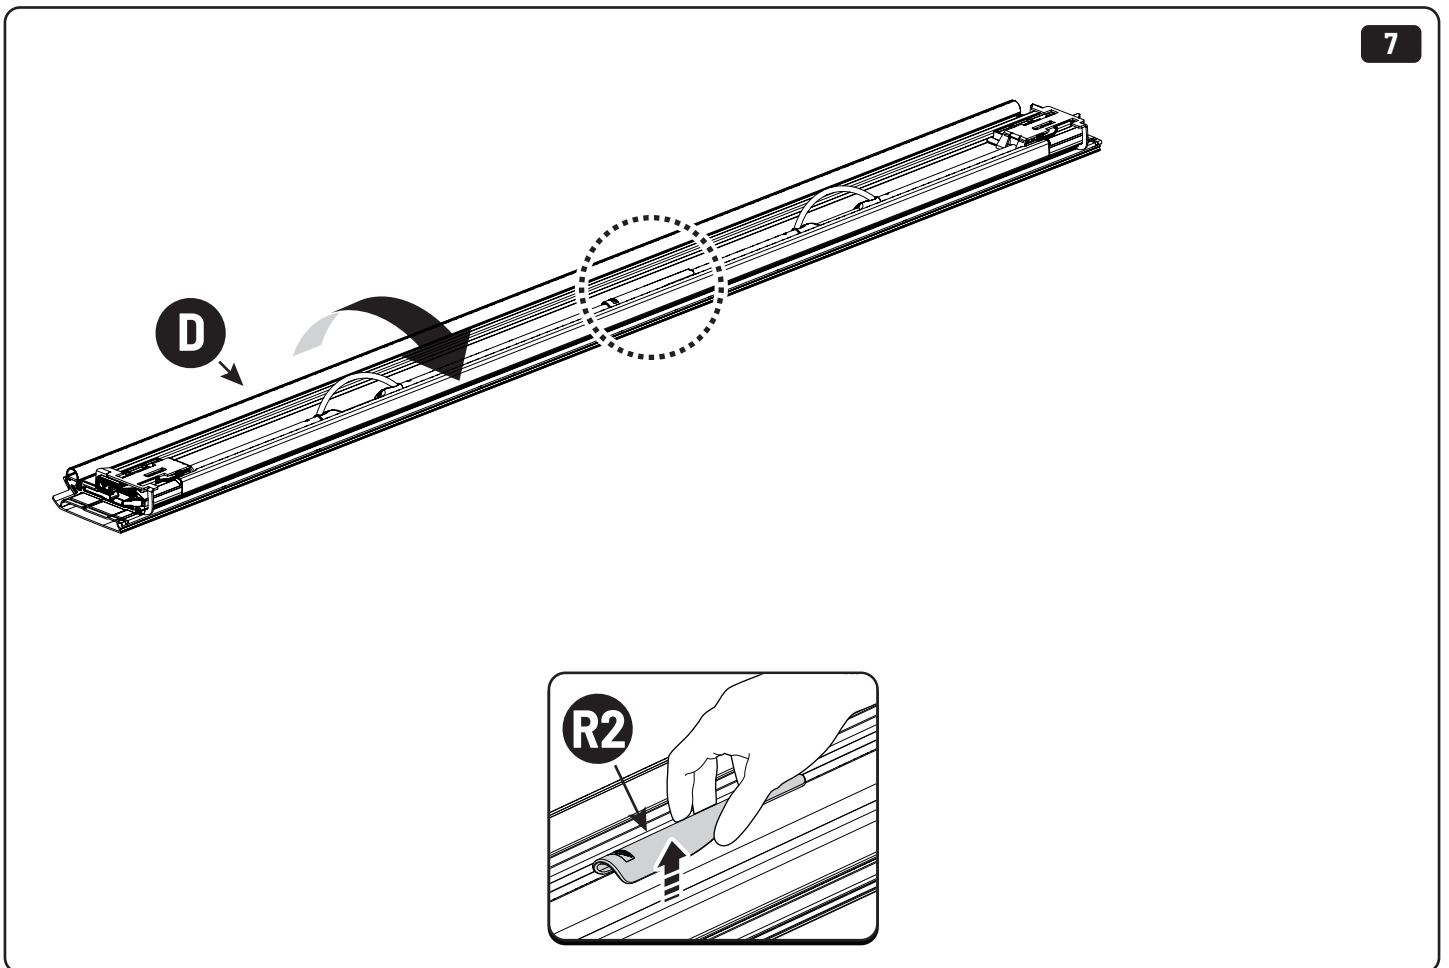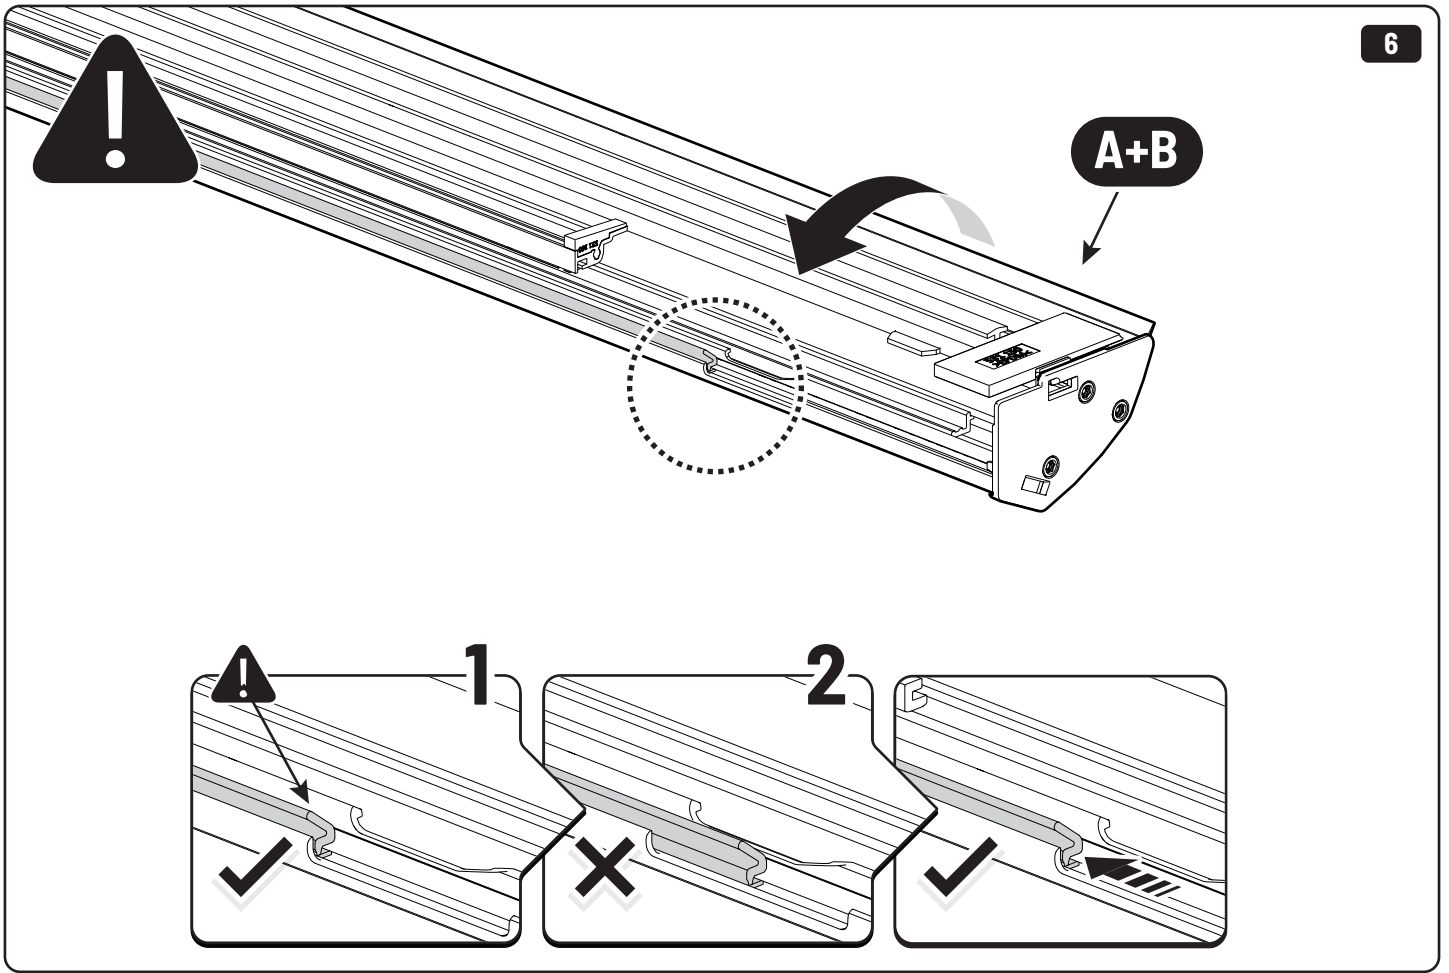

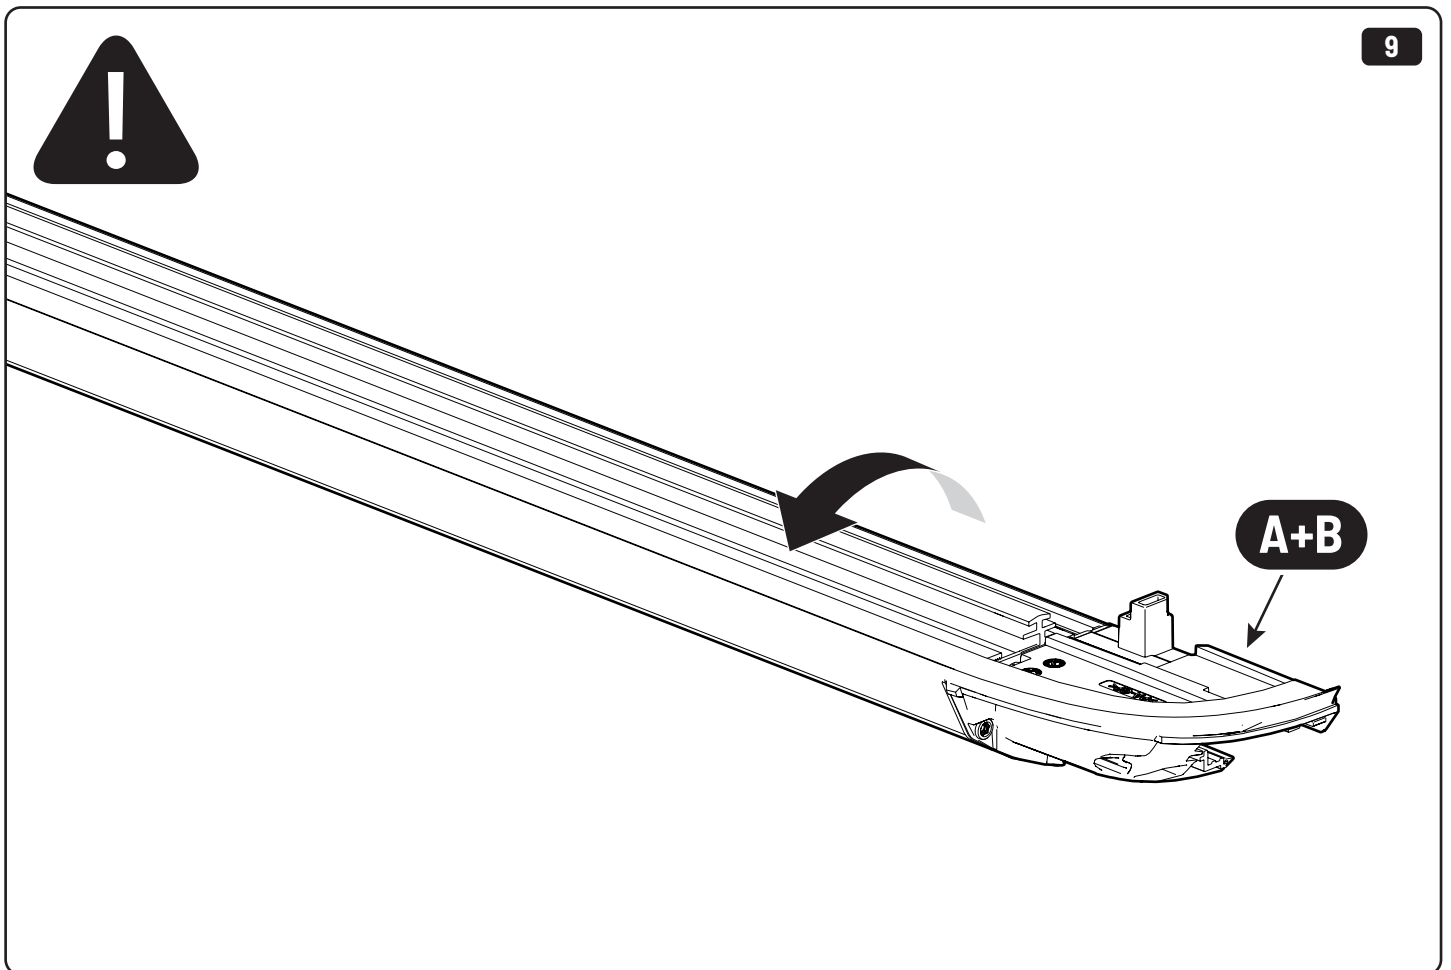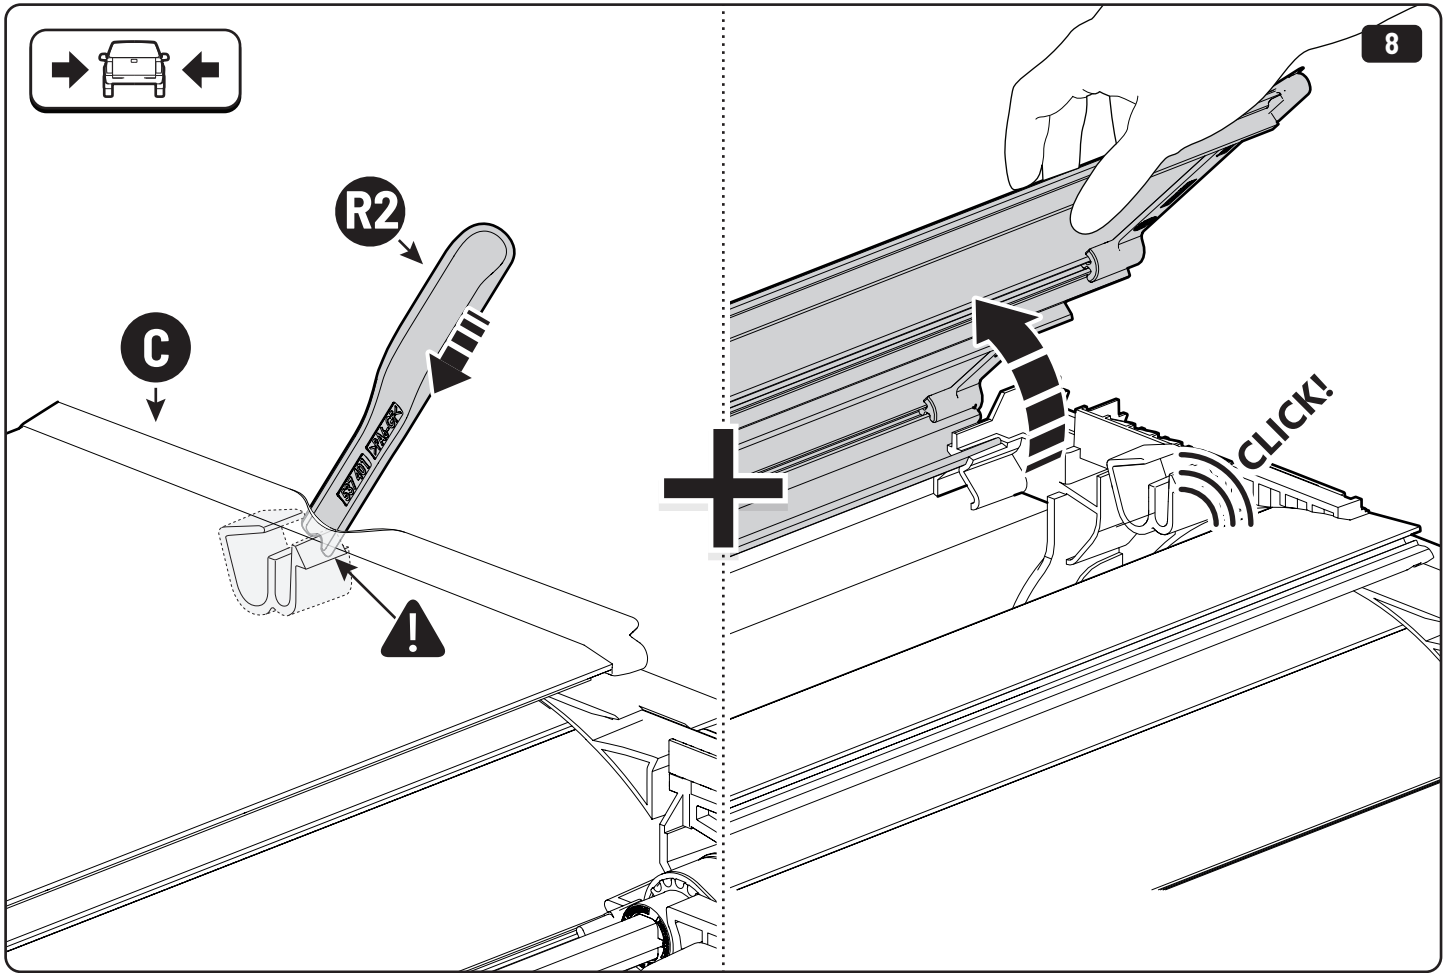


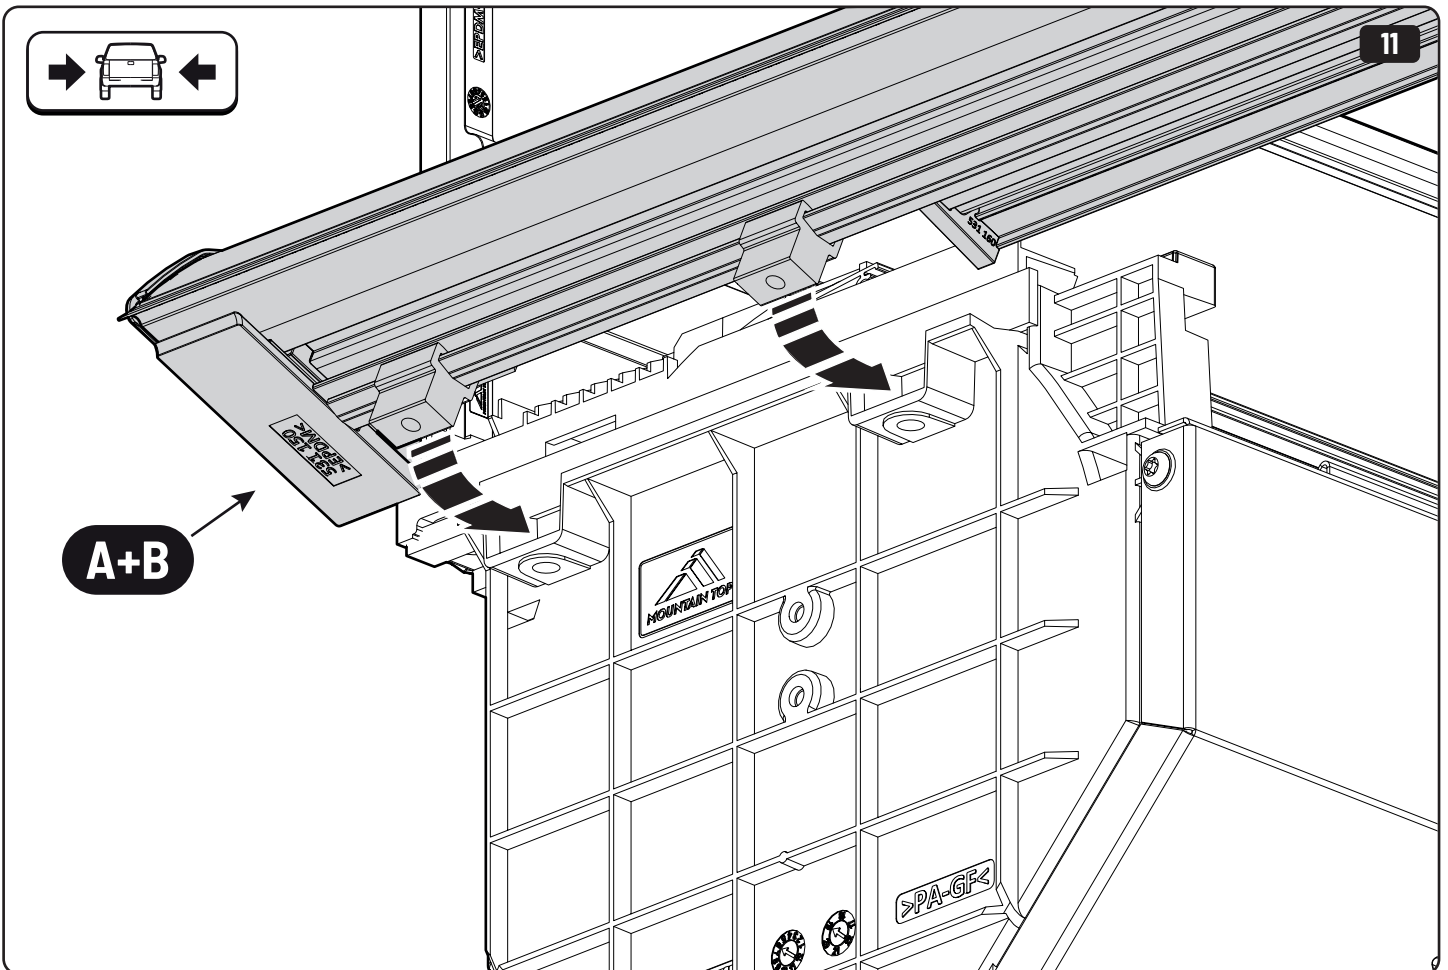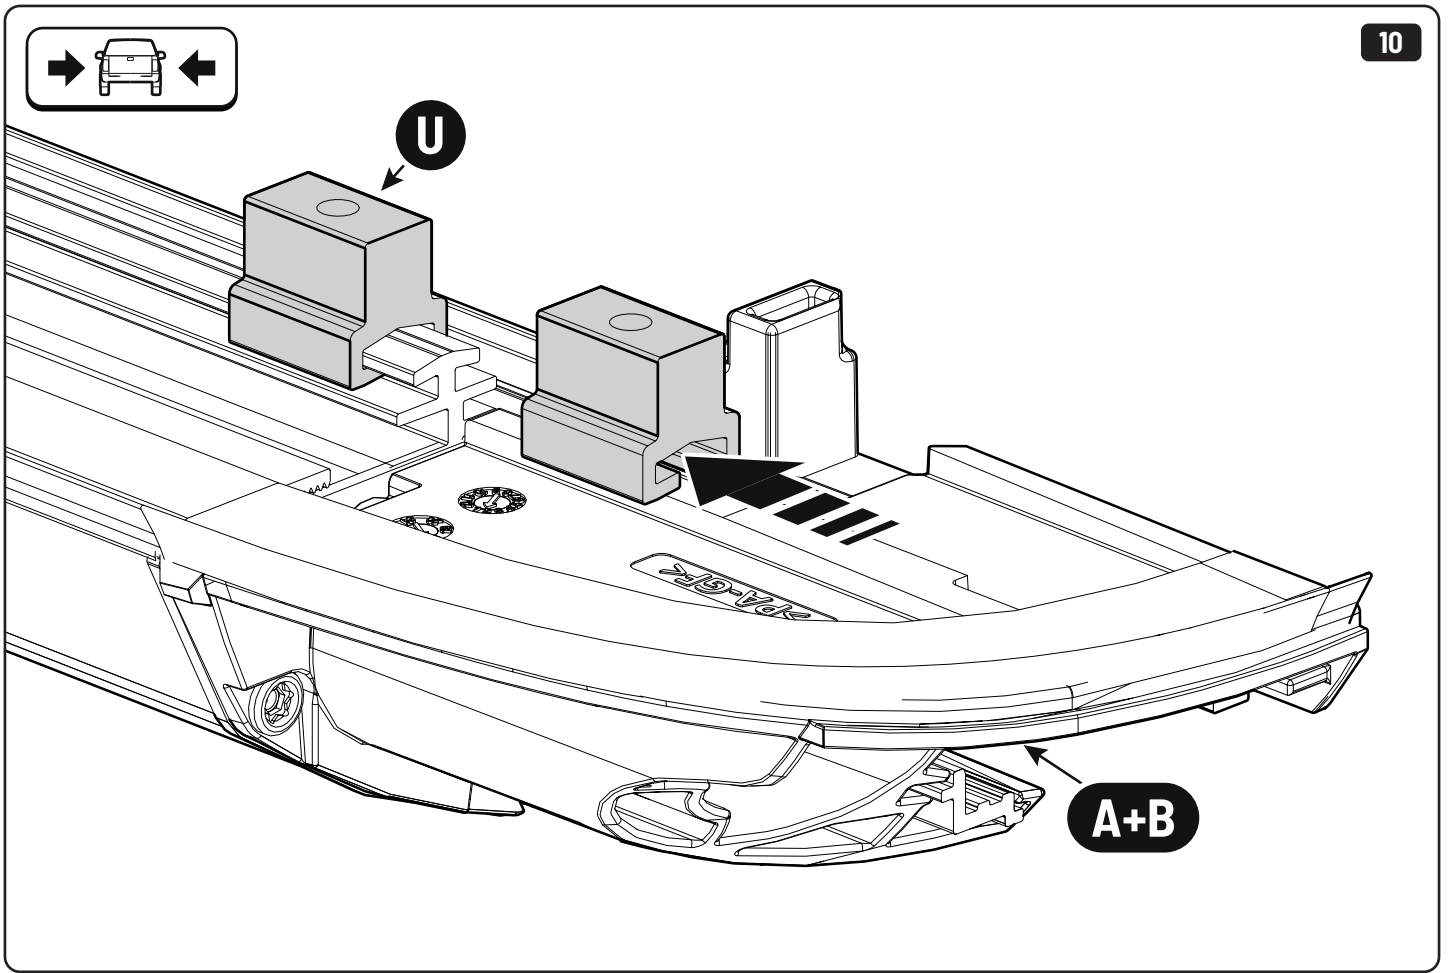

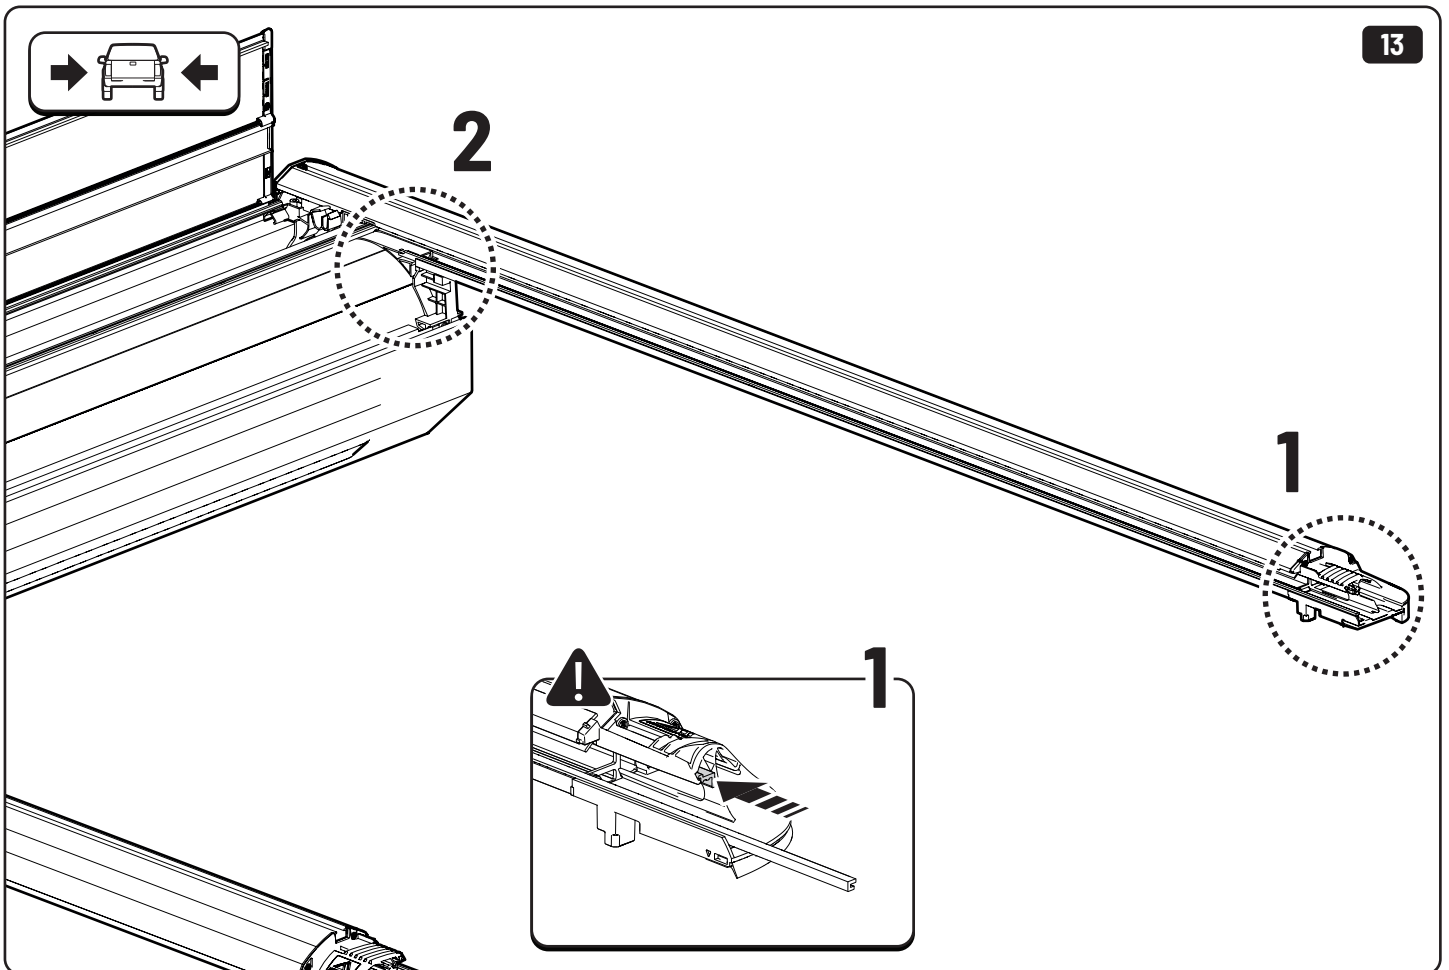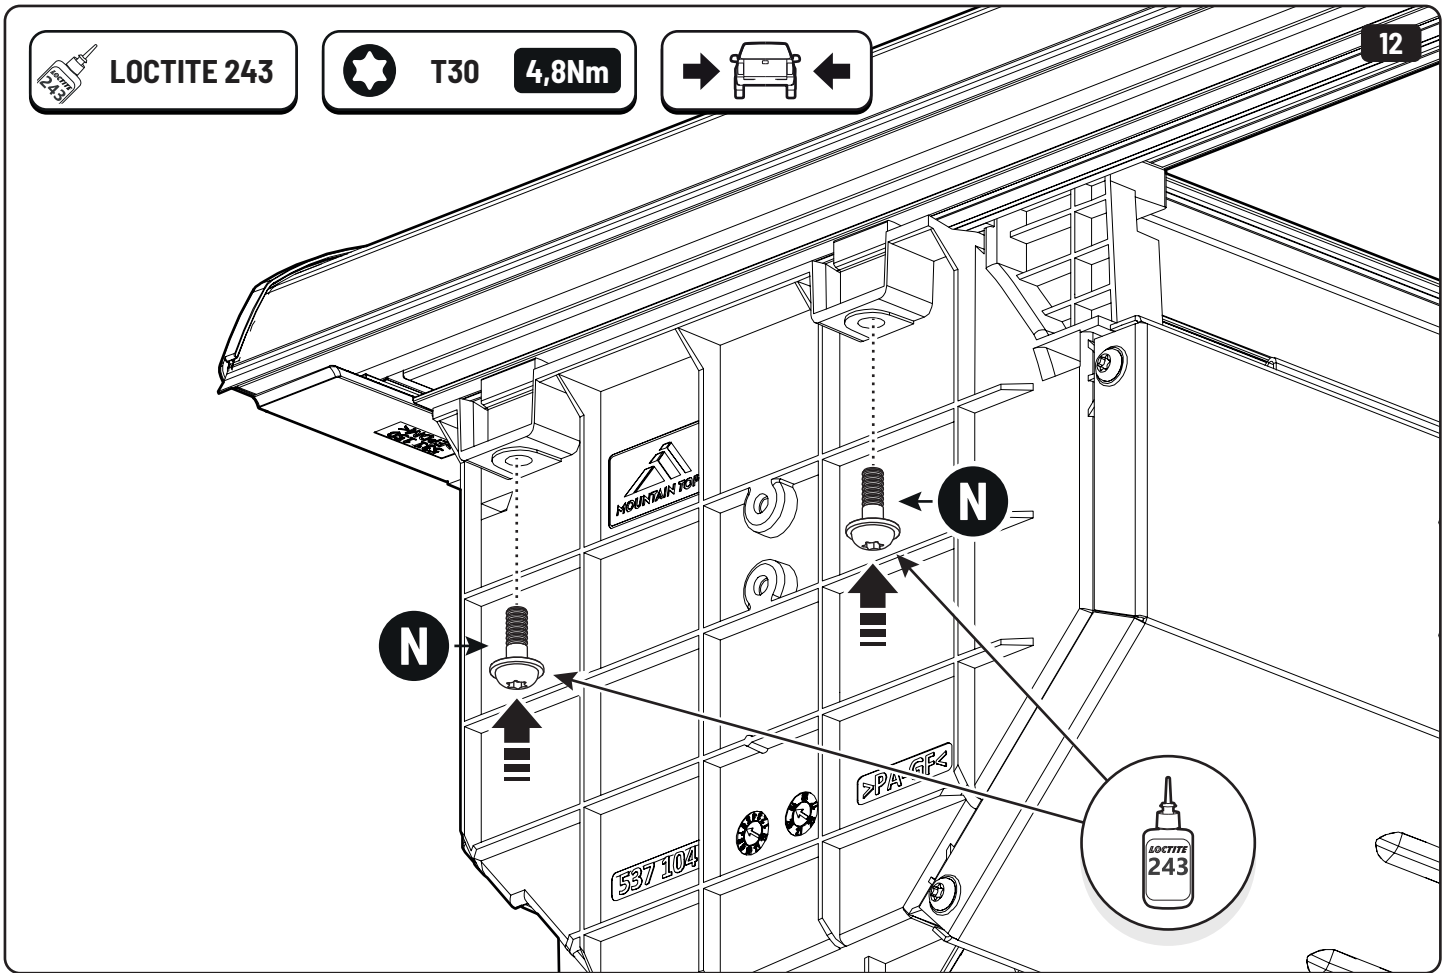


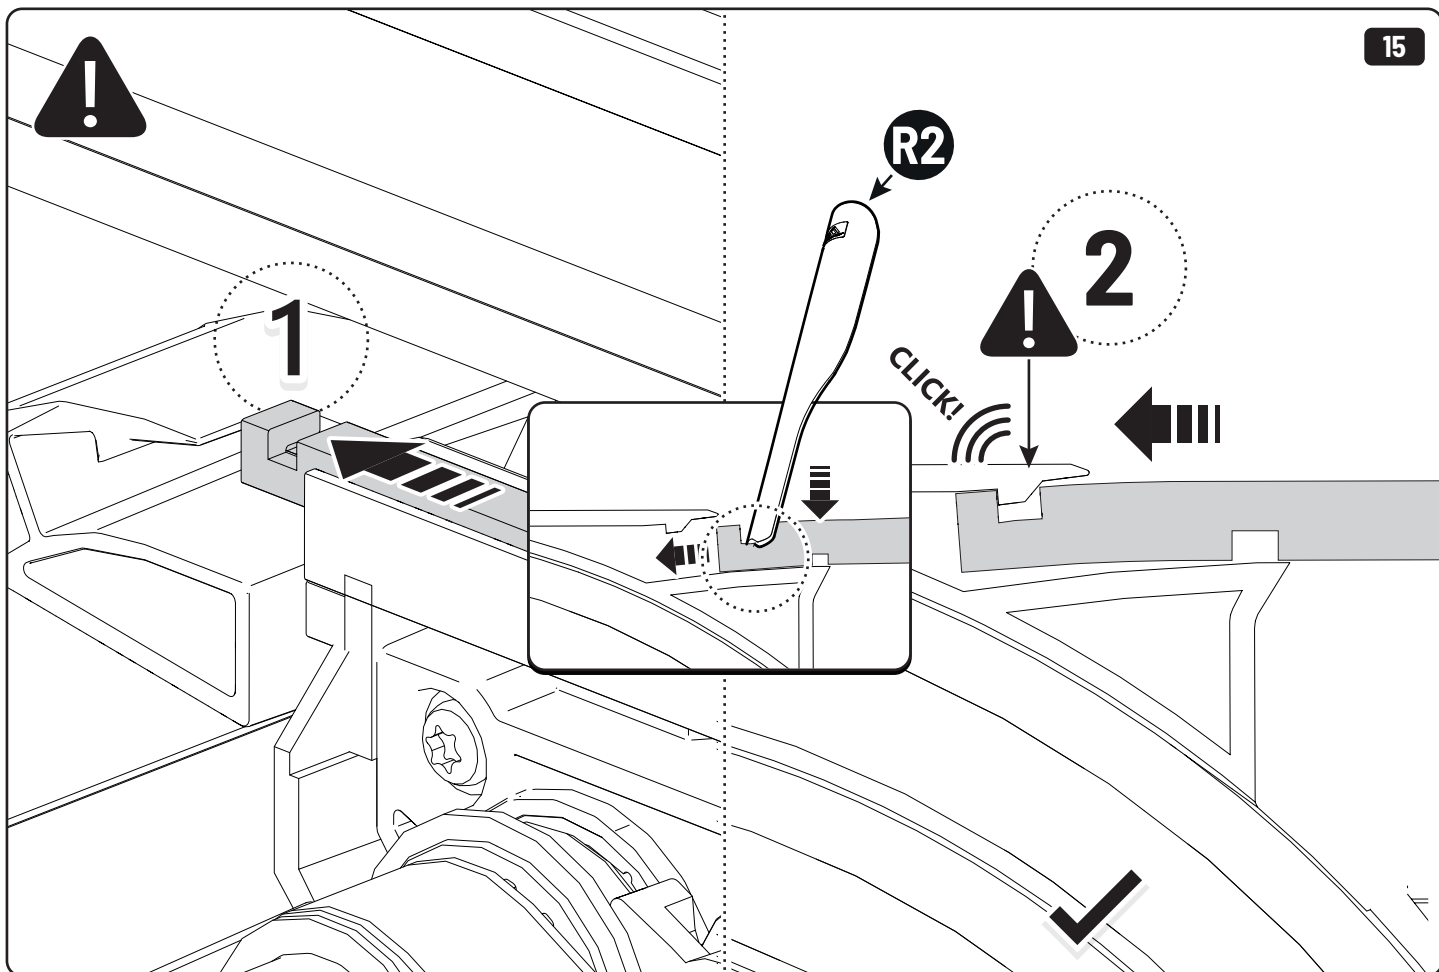
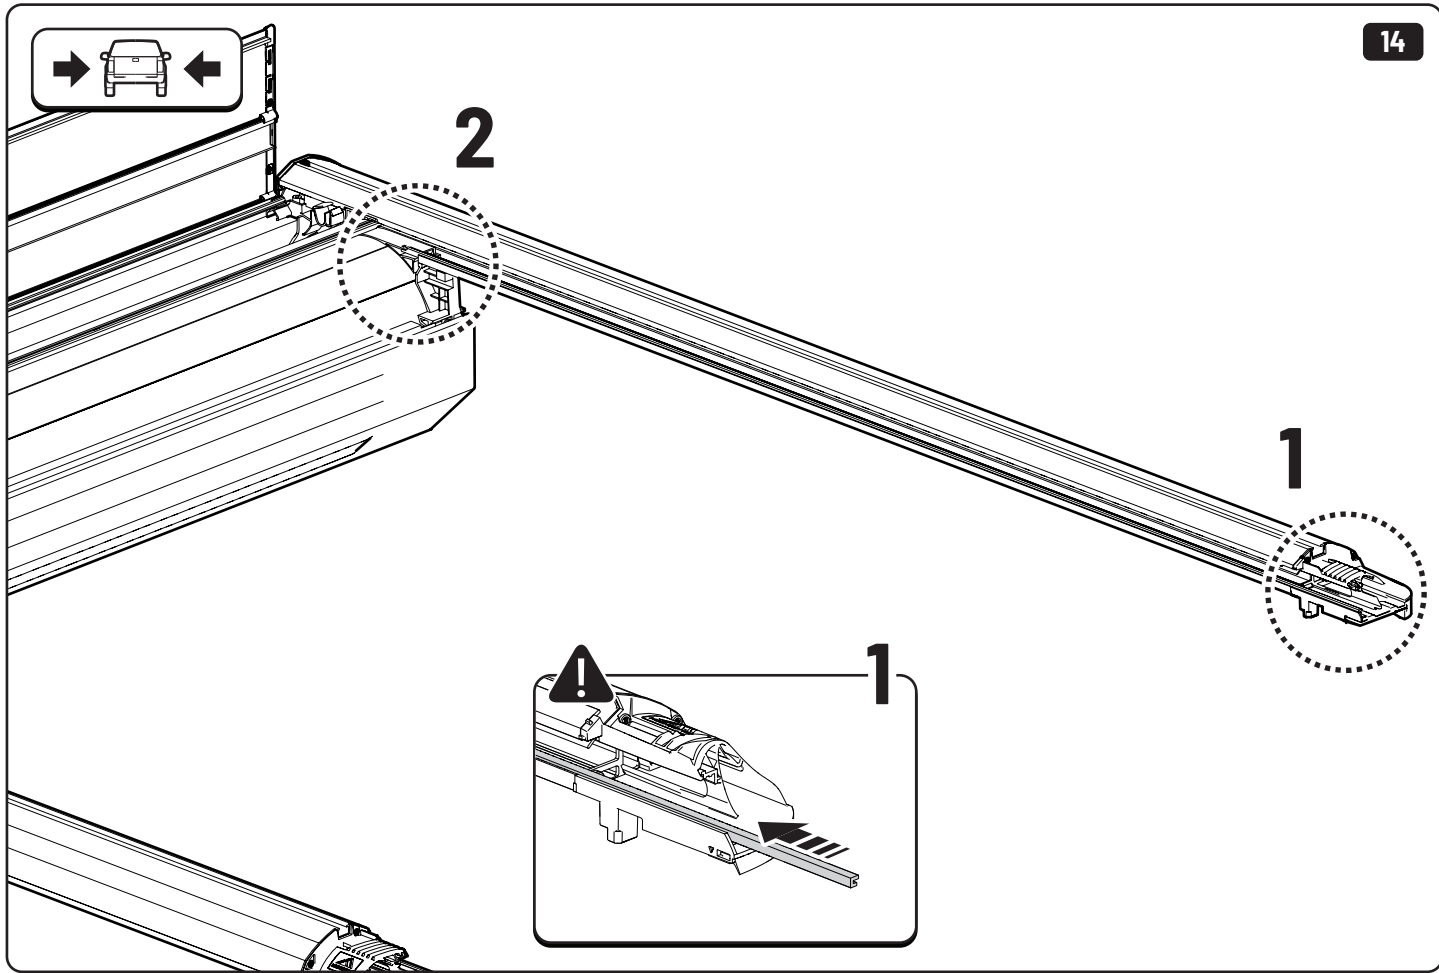




16

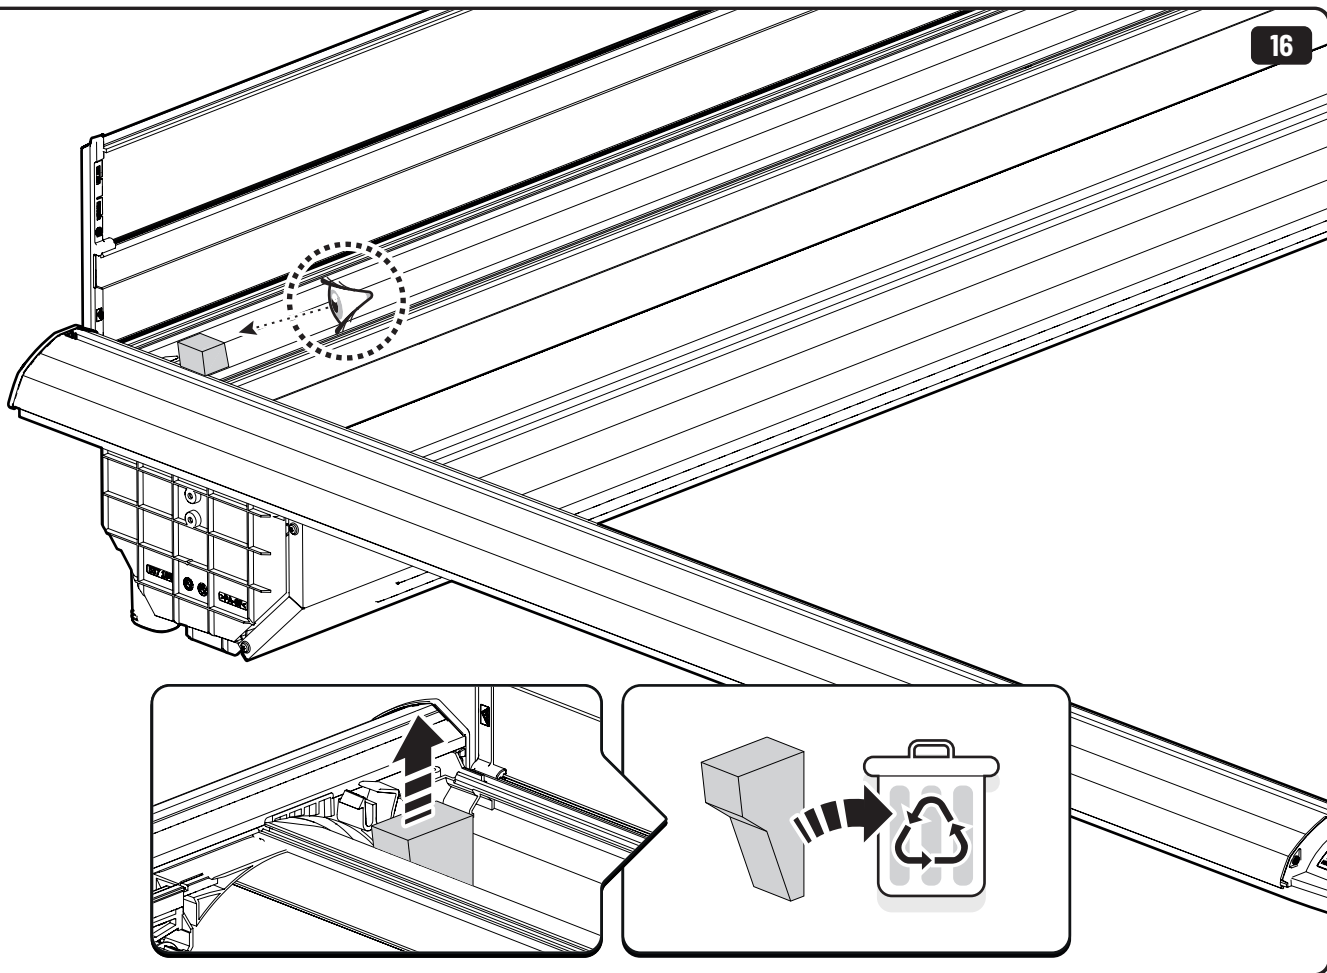


17

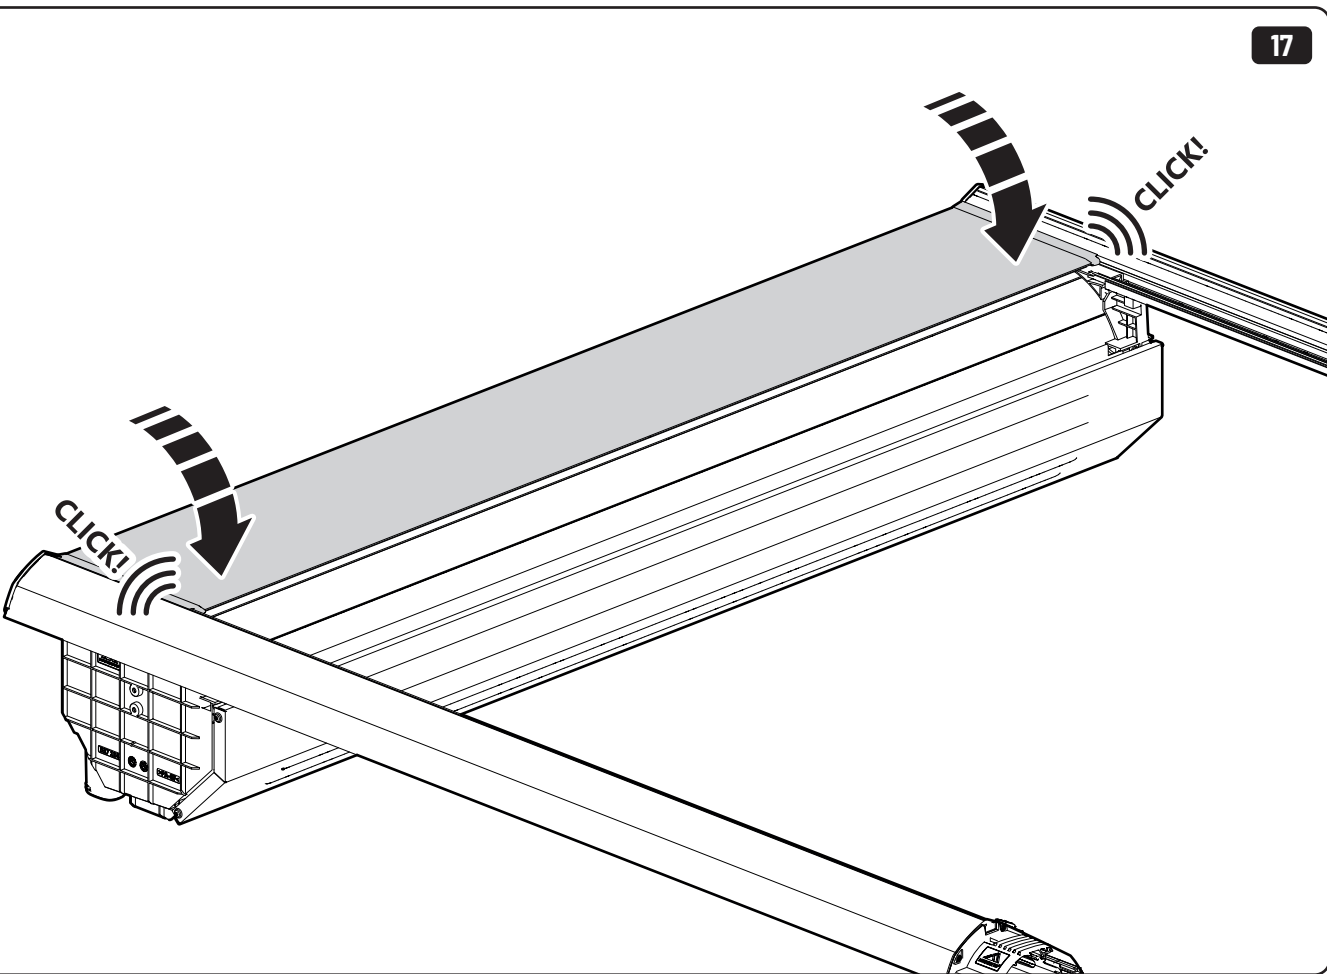


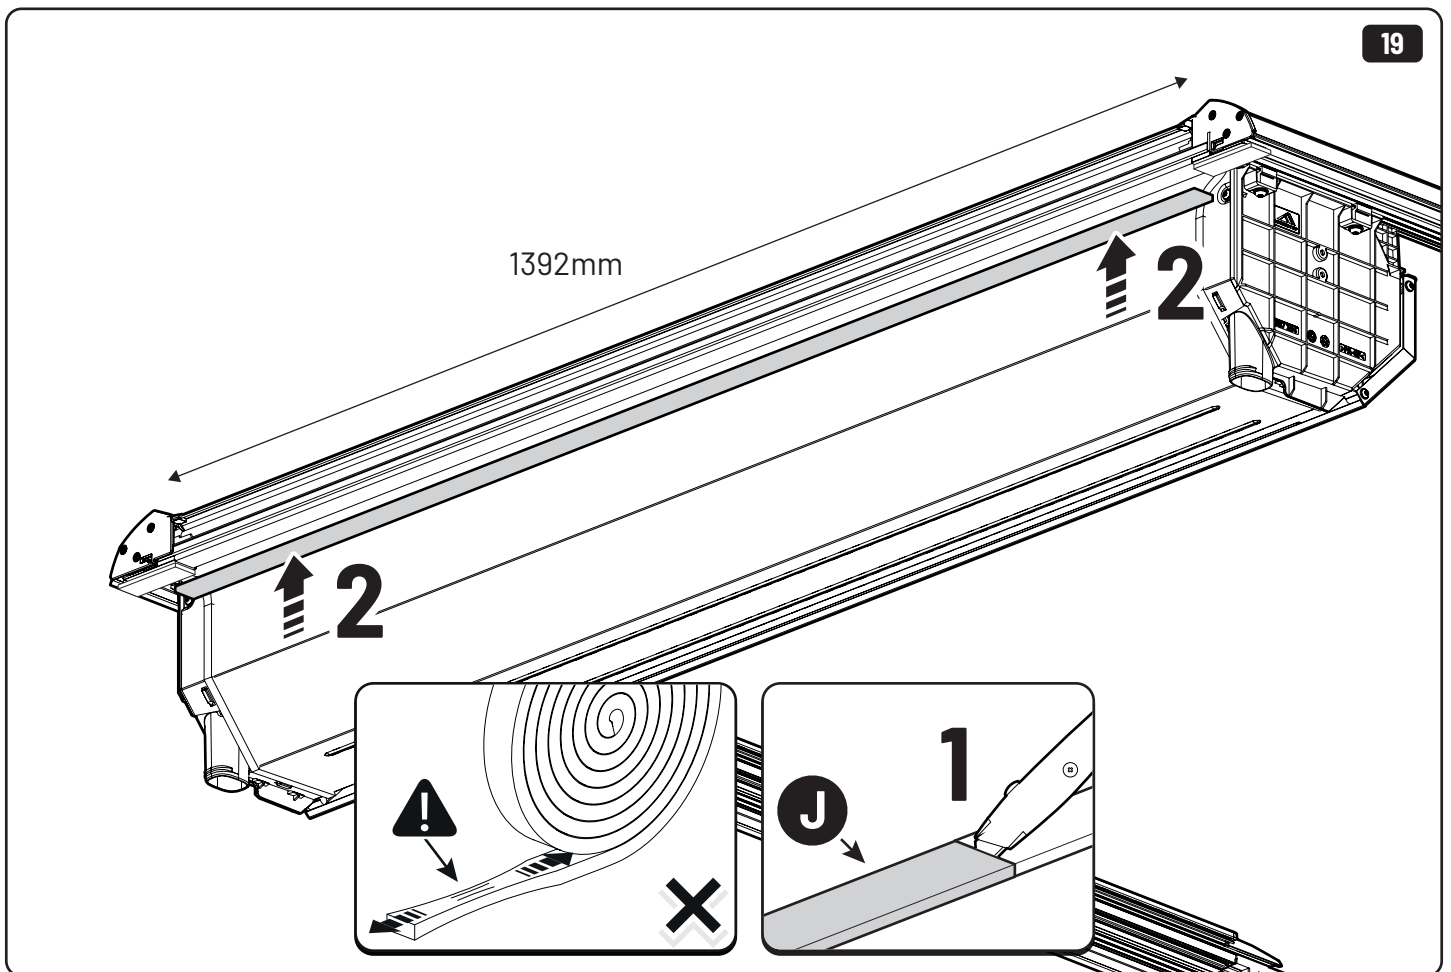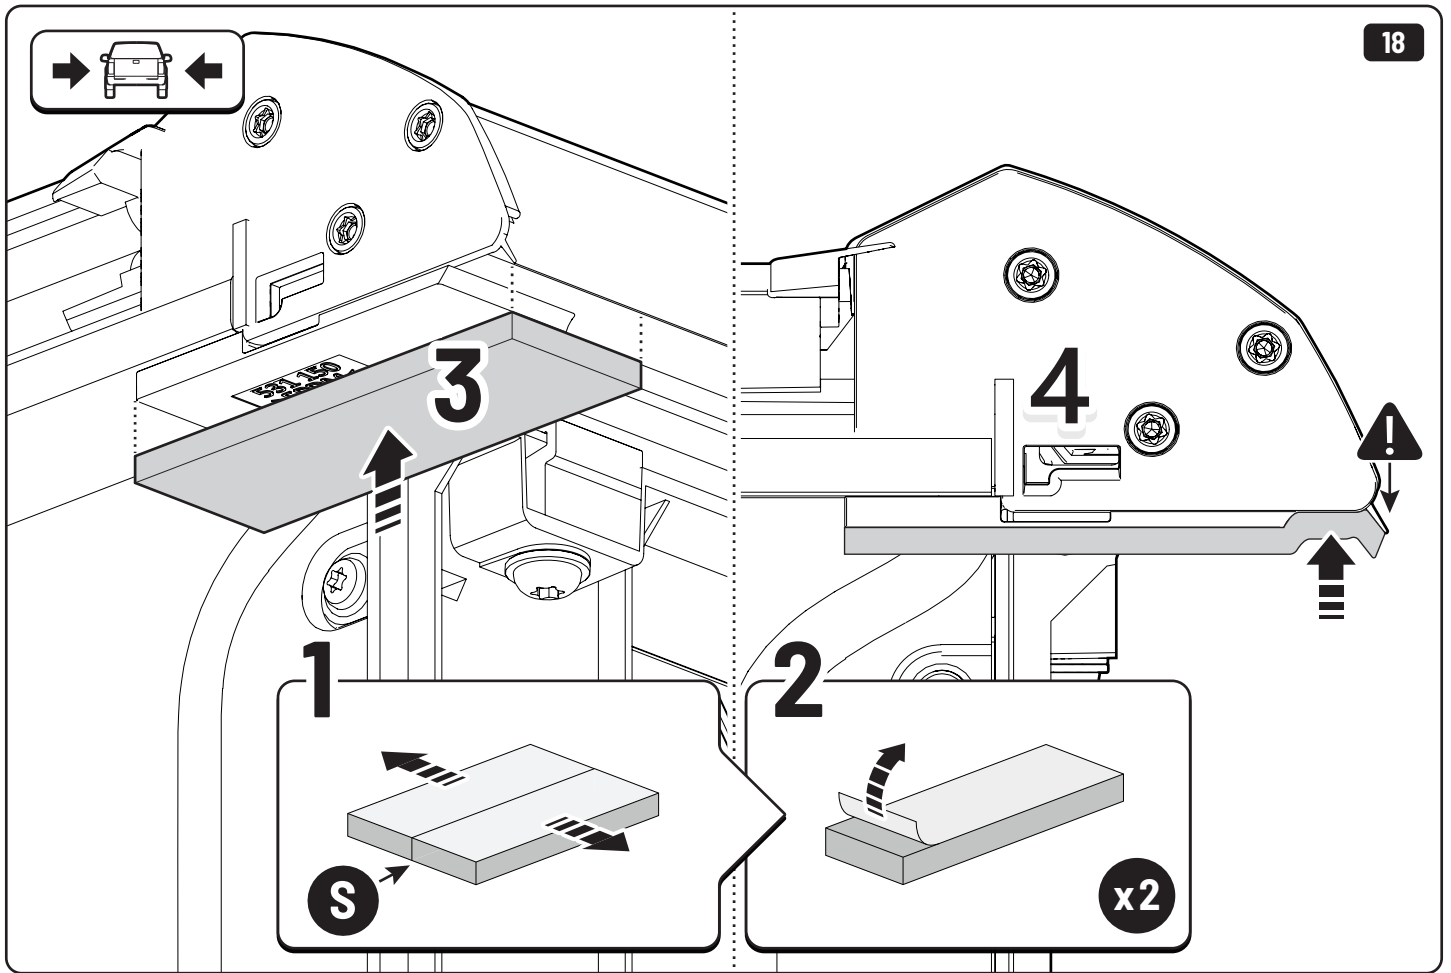

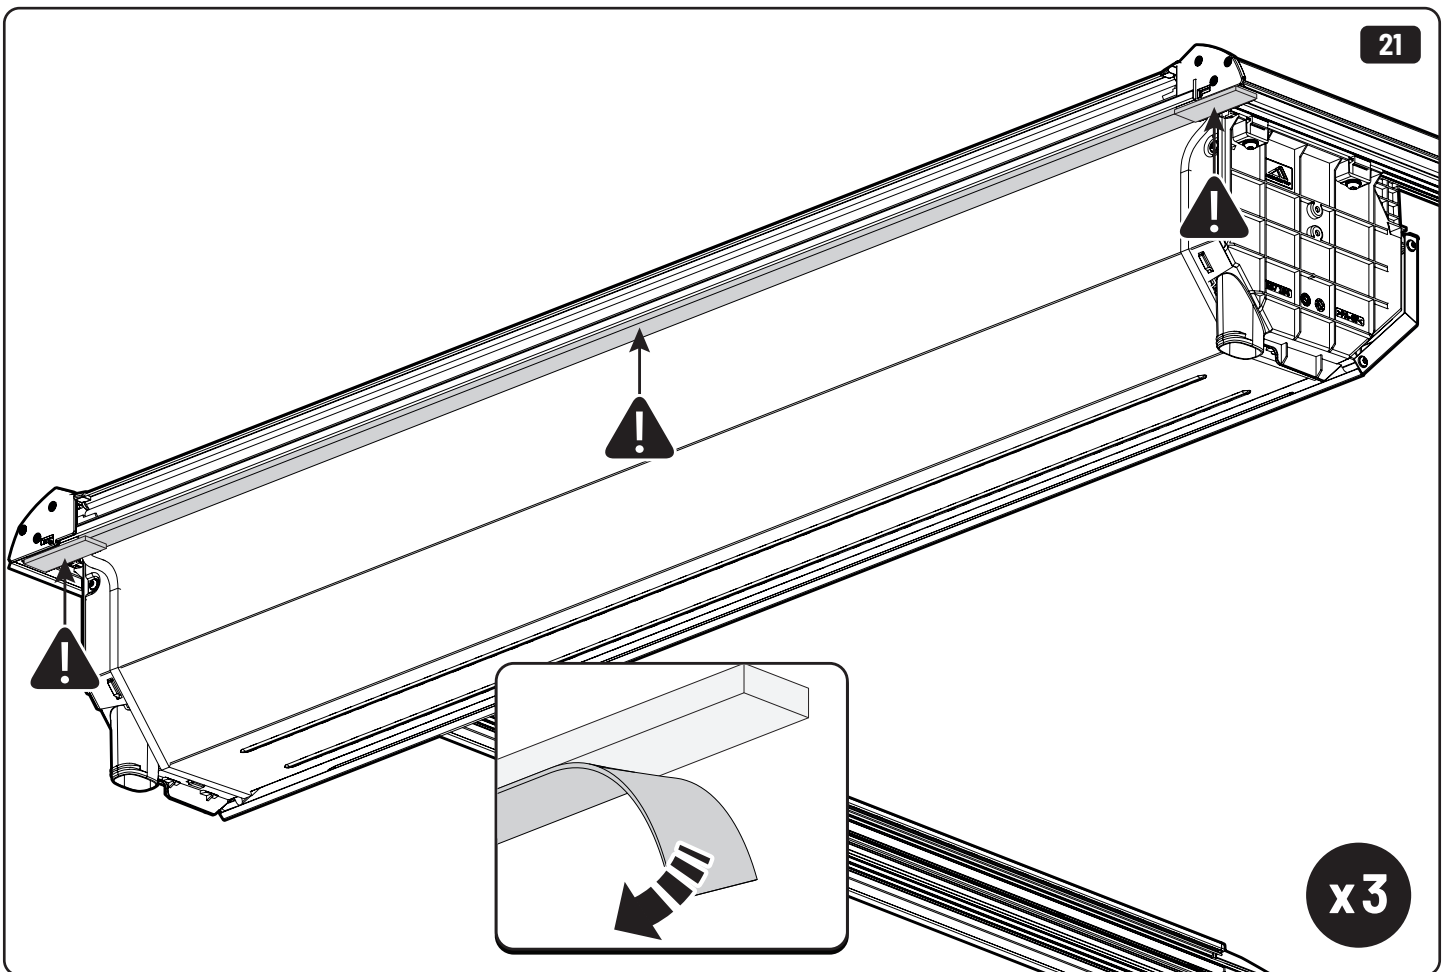
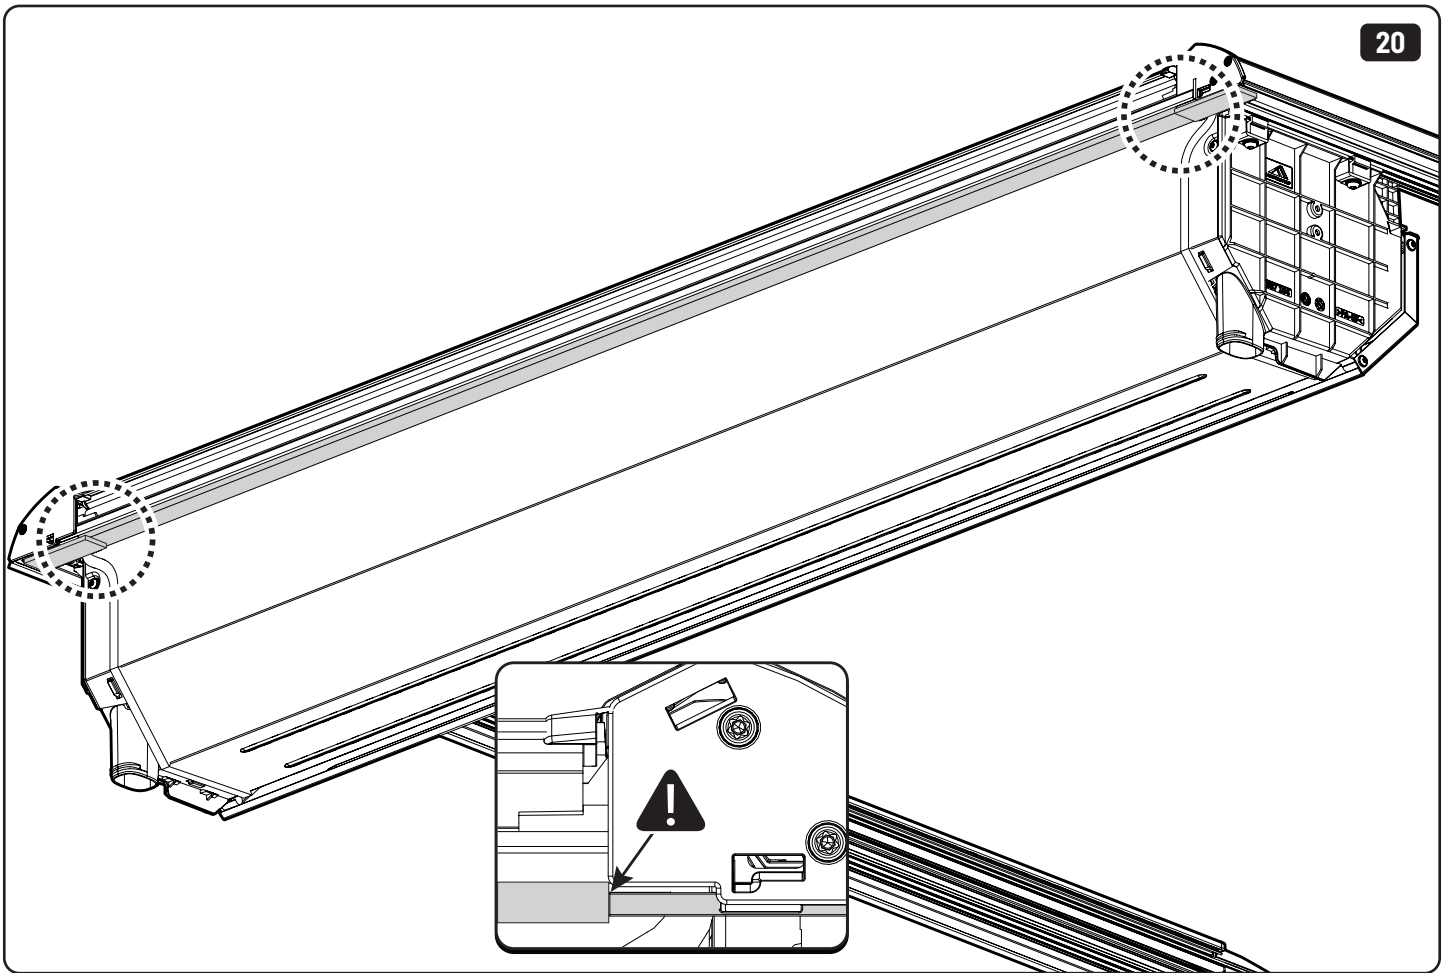




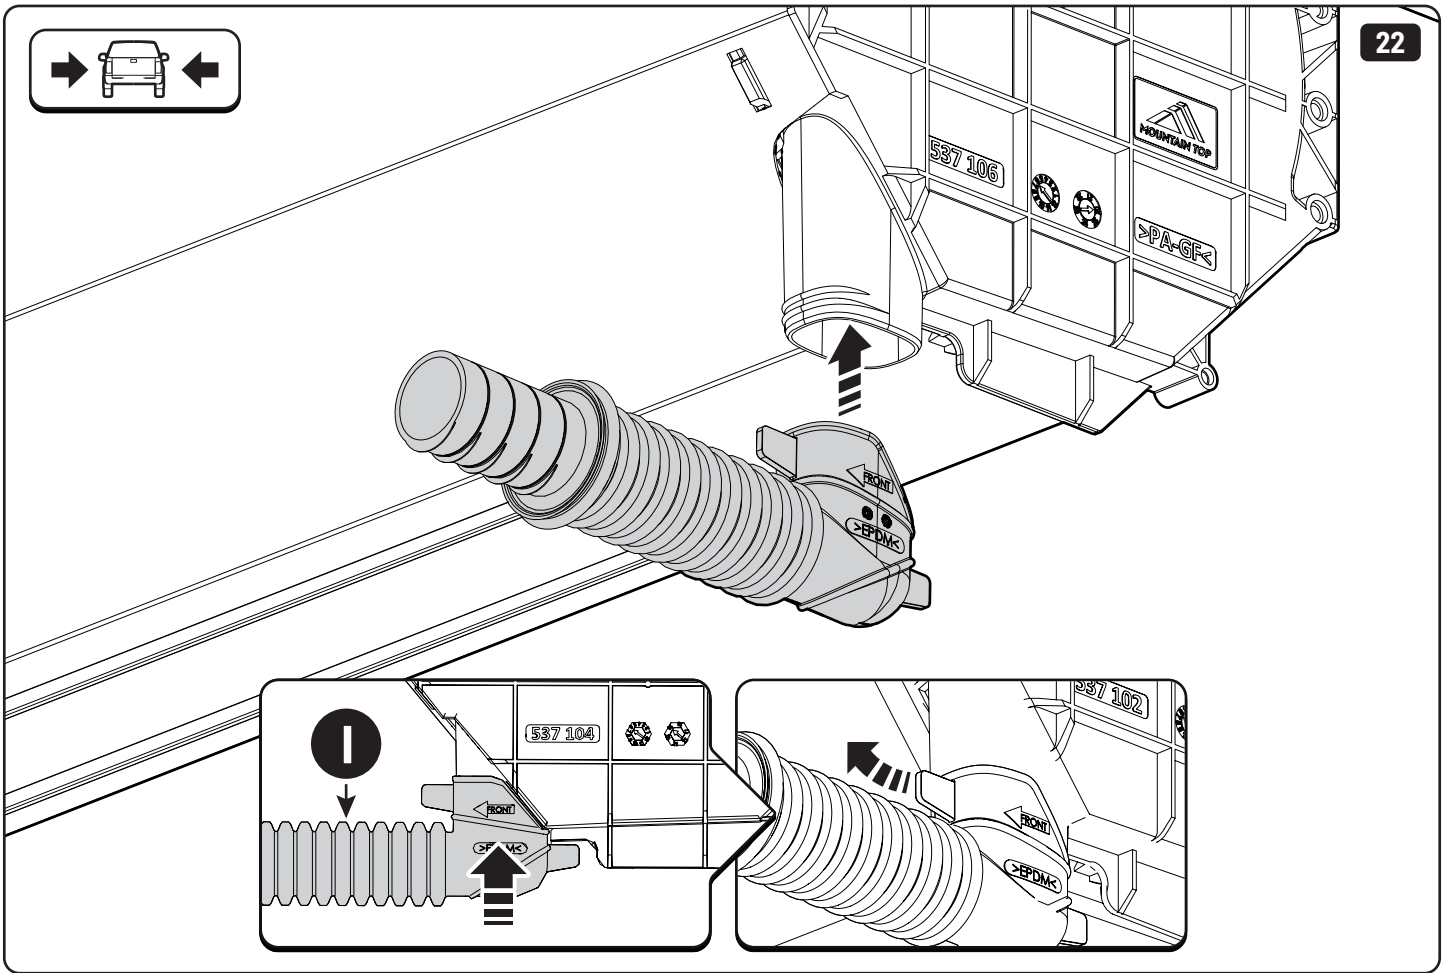




22


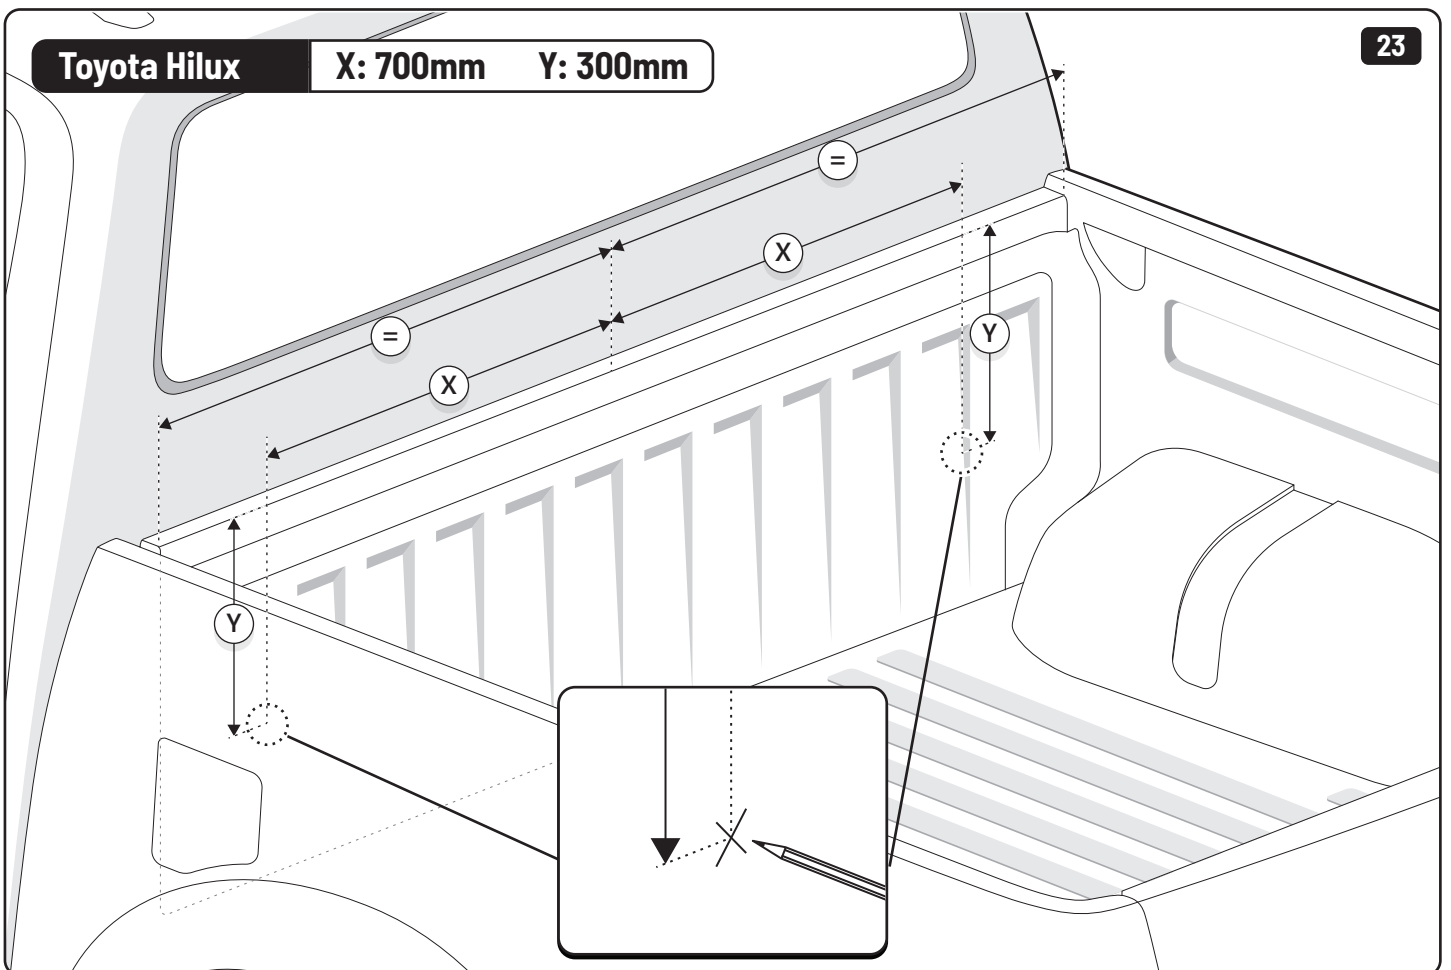



23

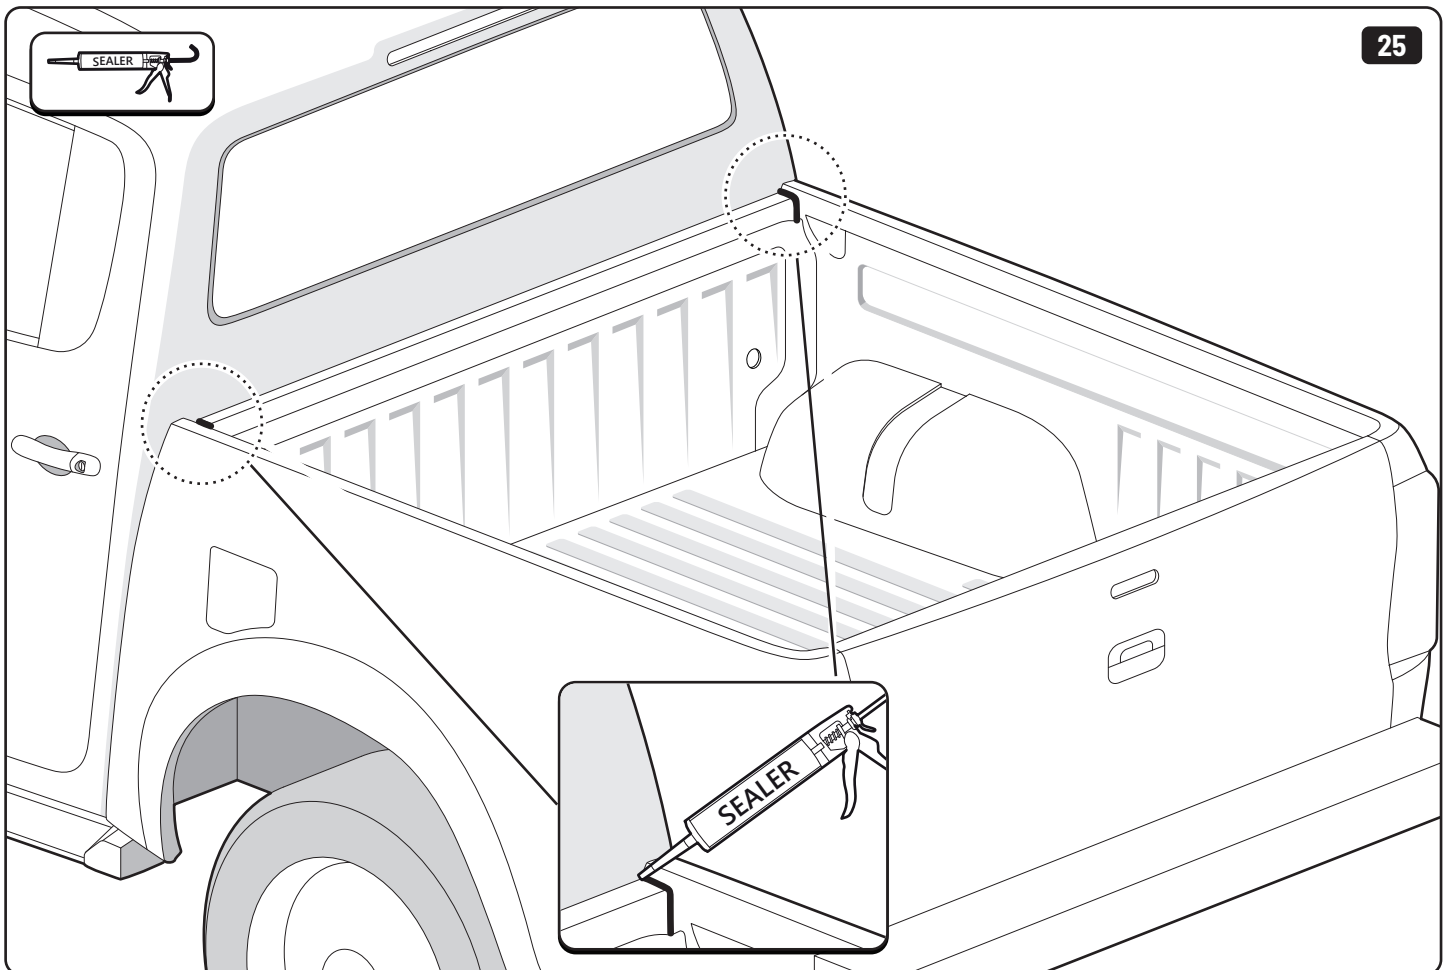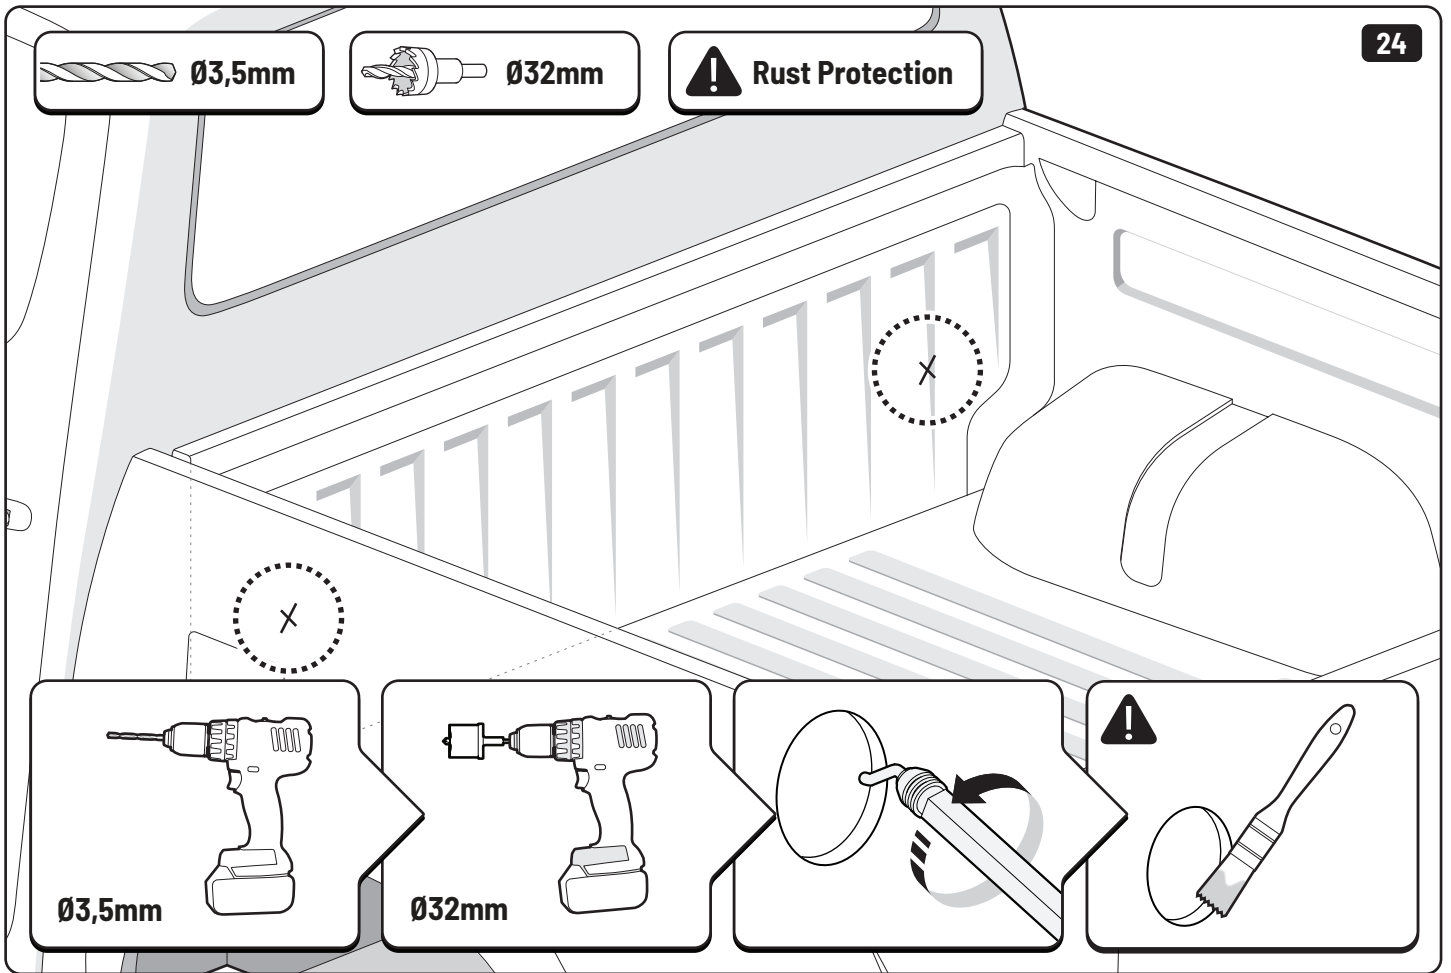

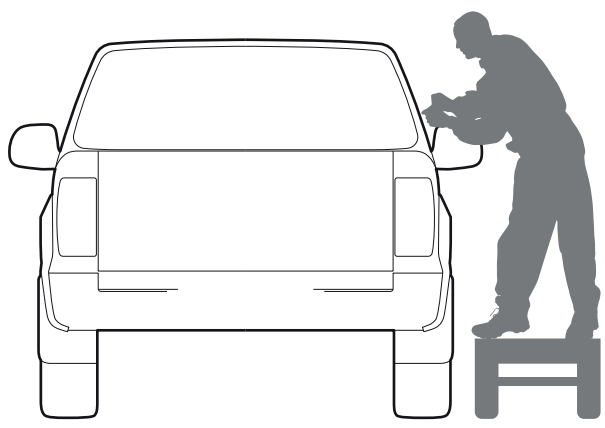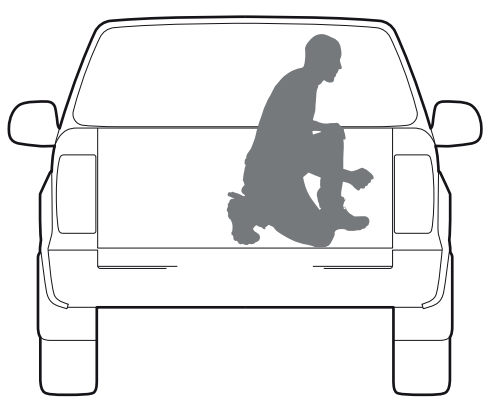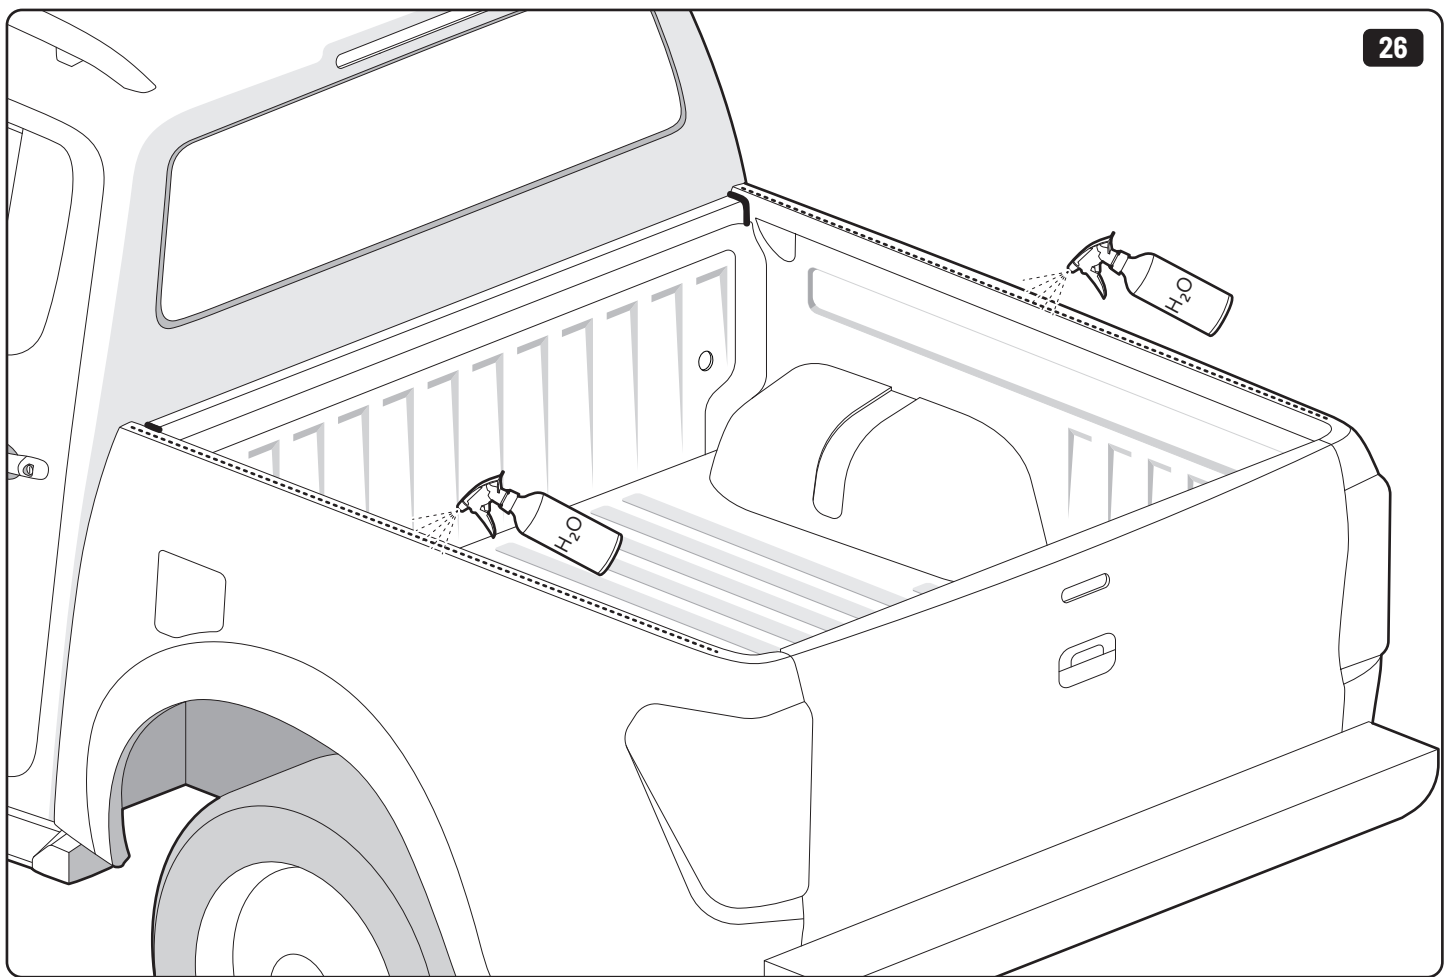



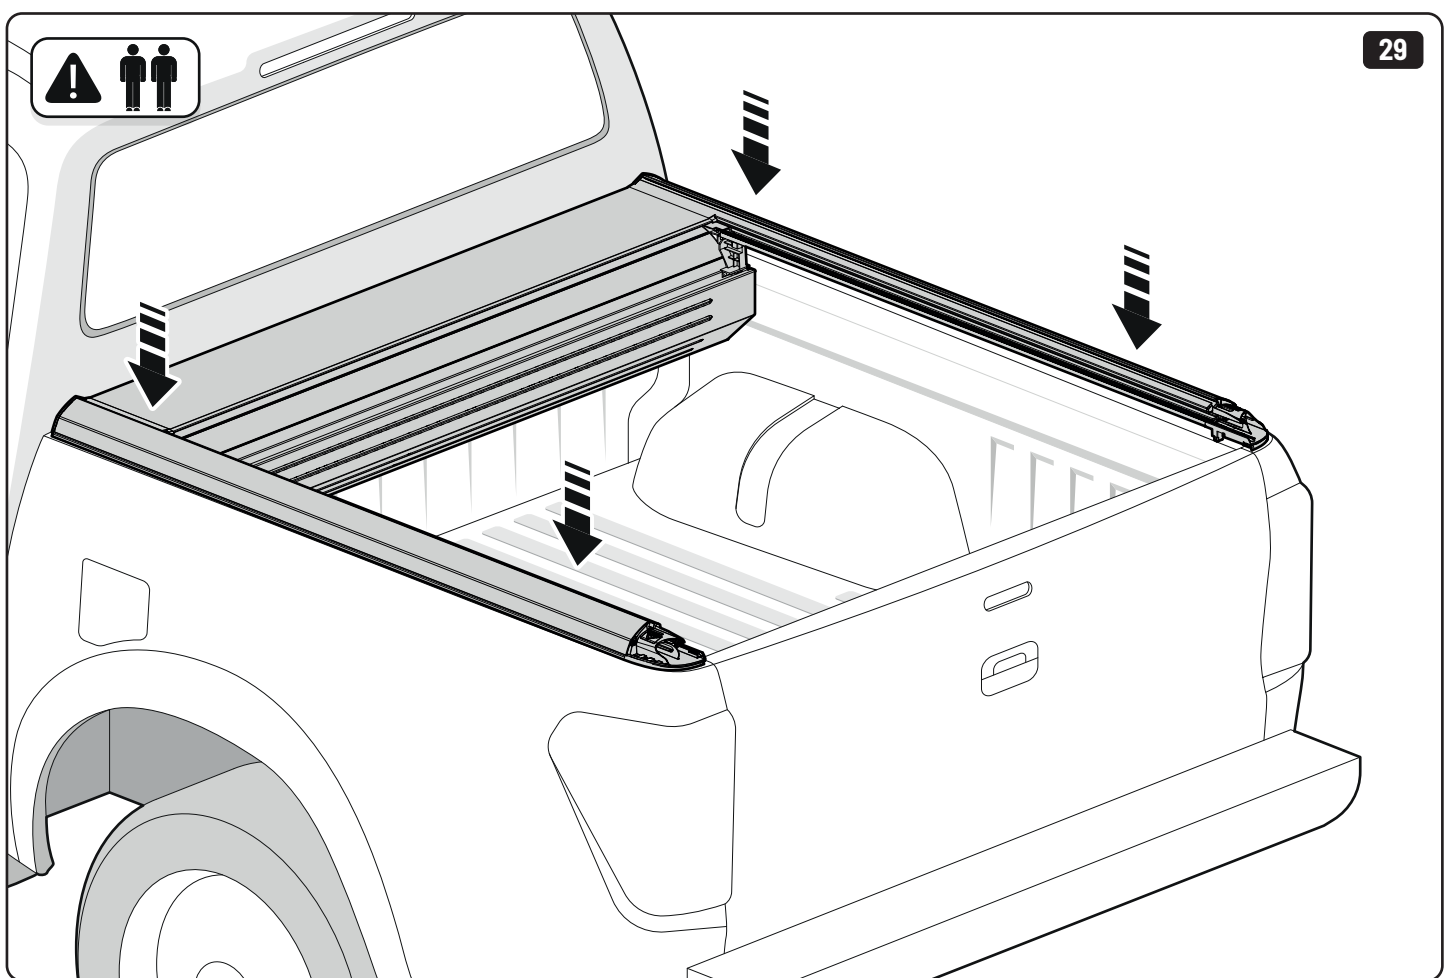
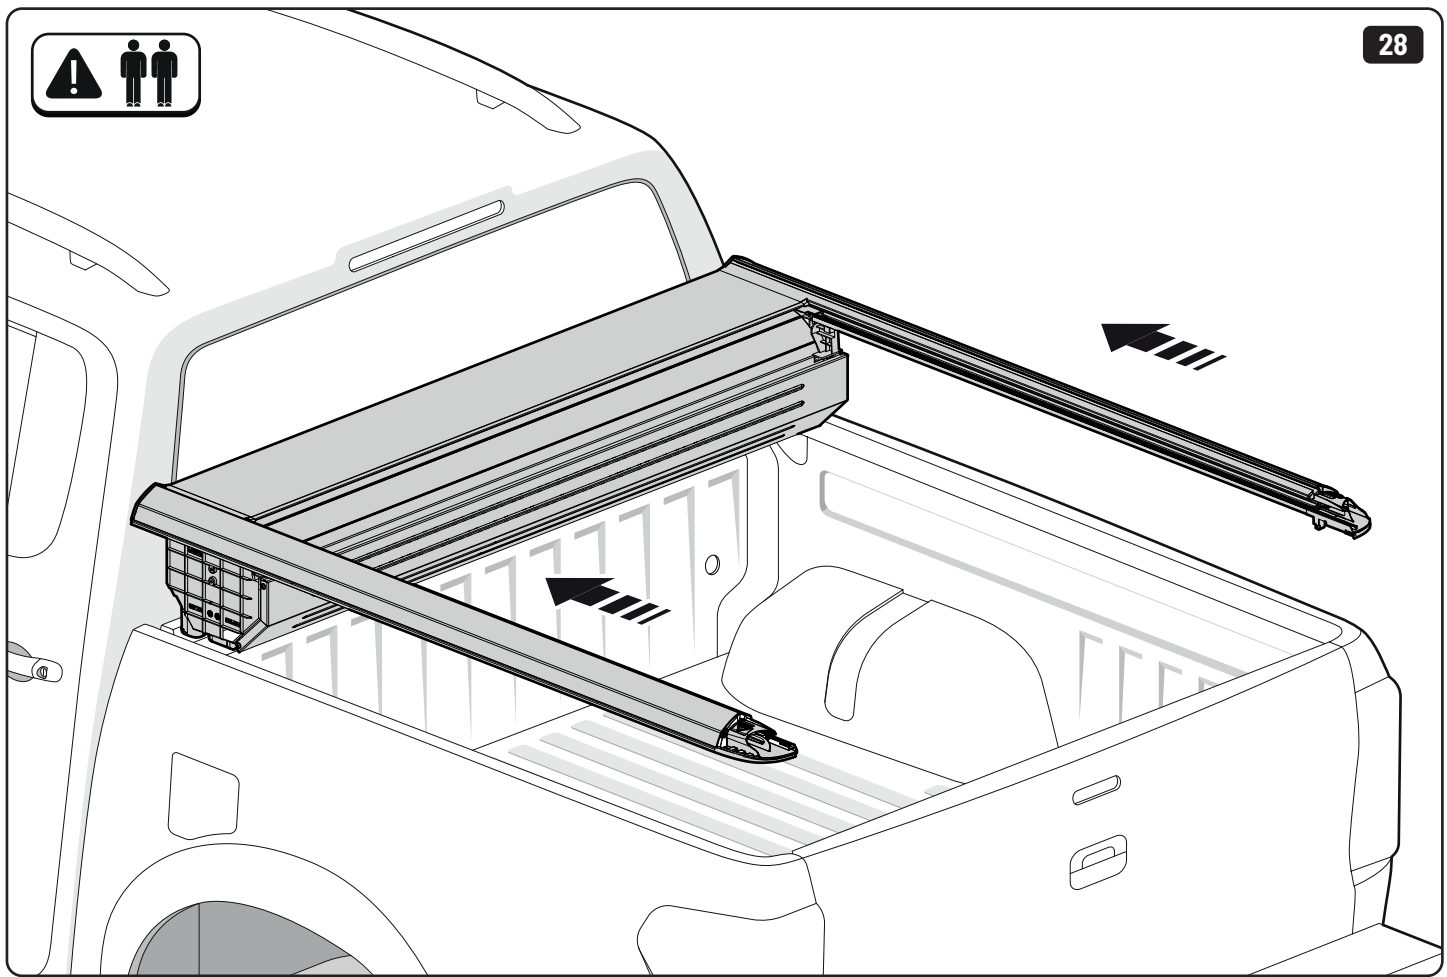


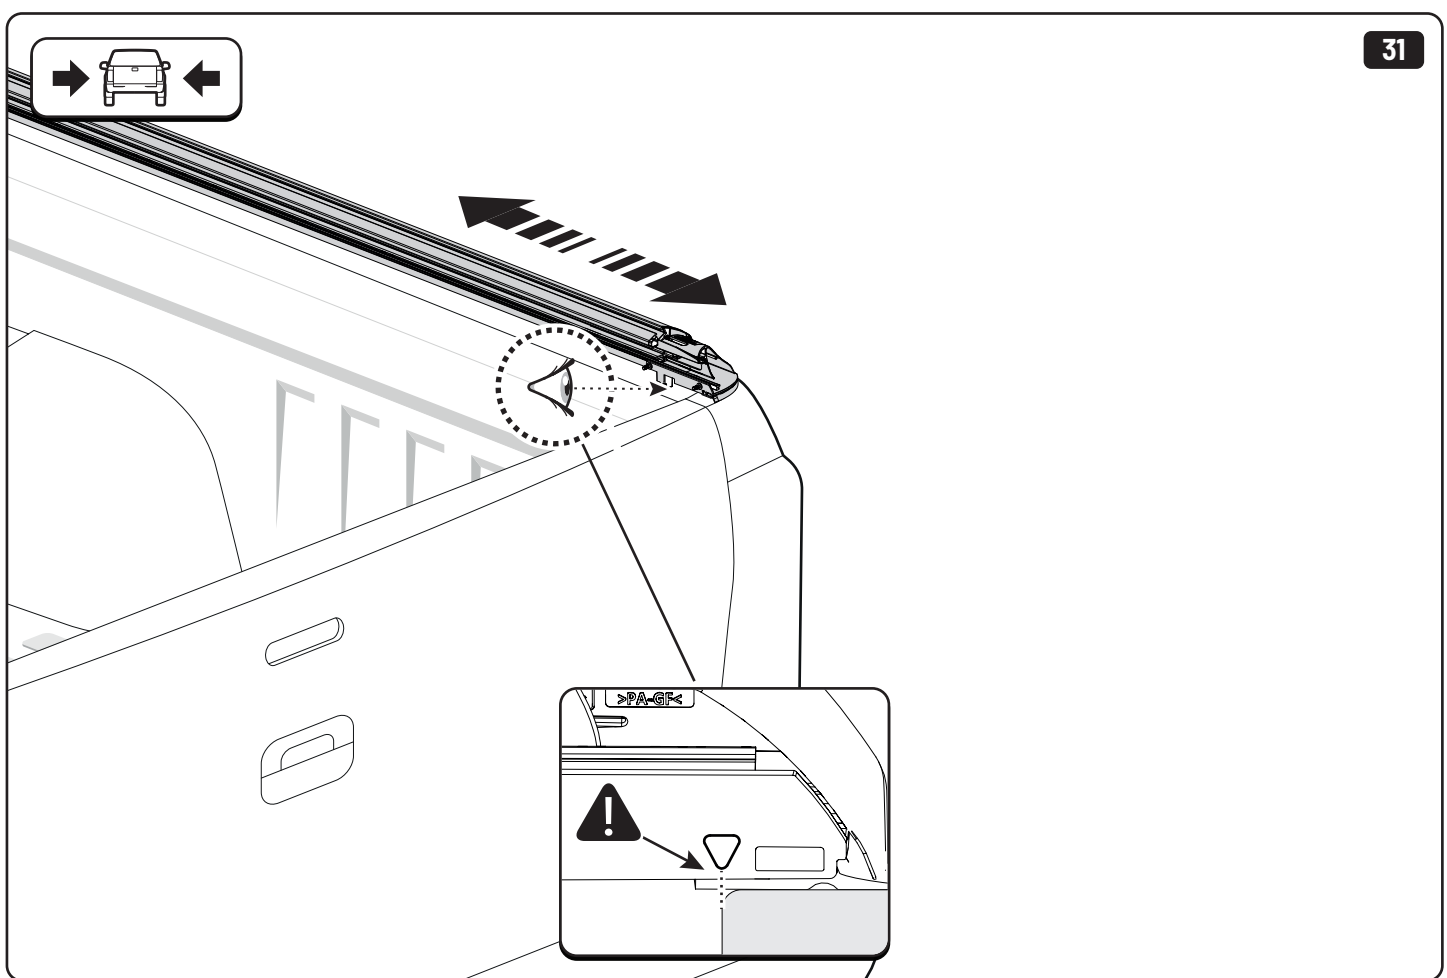
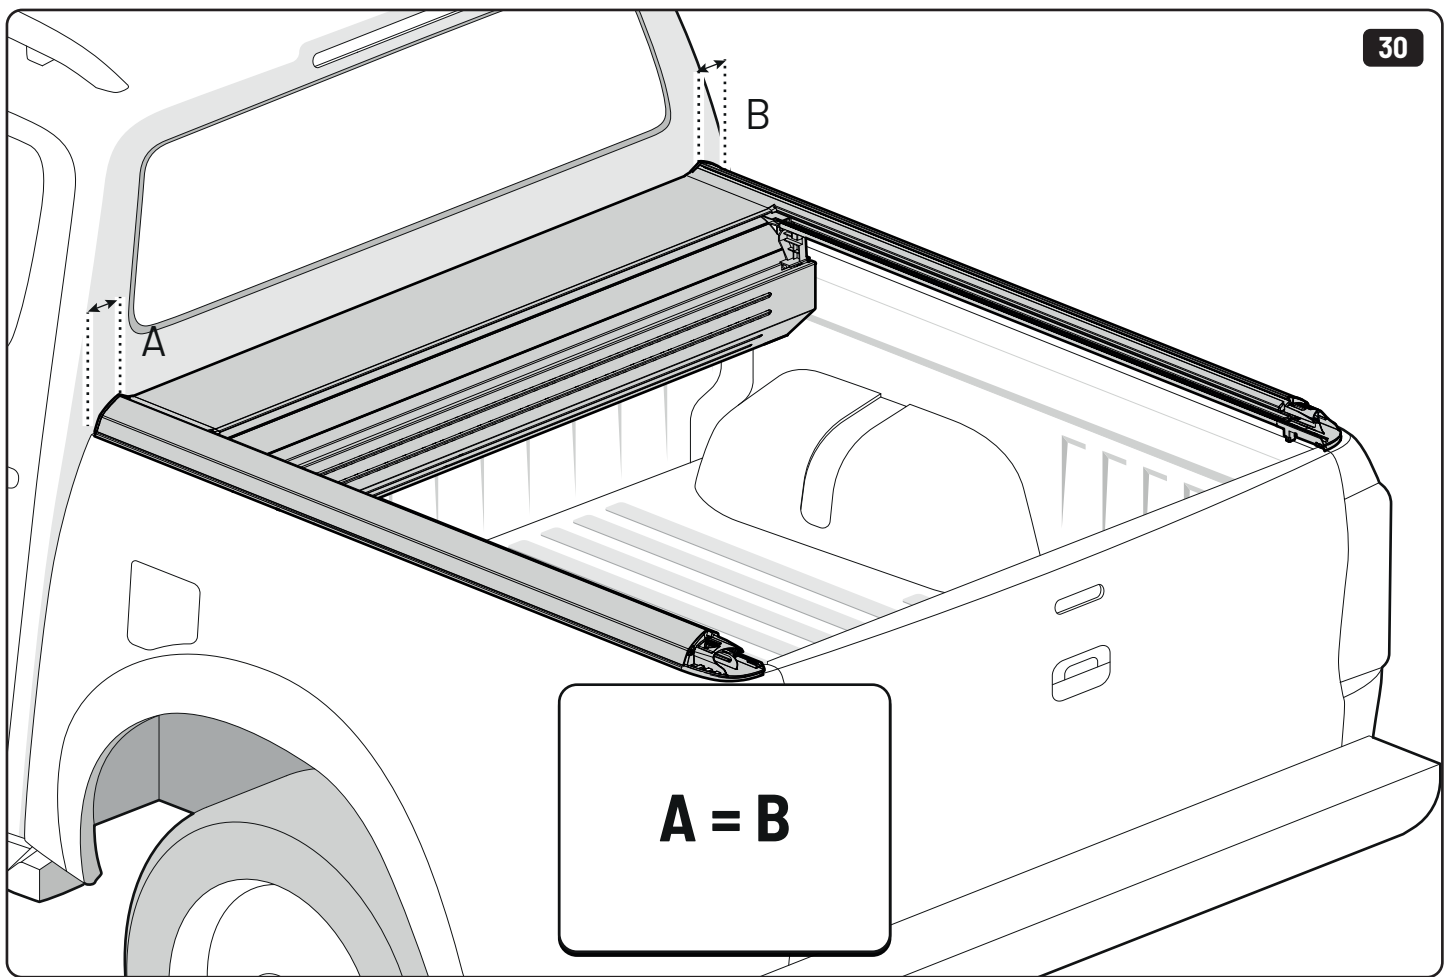



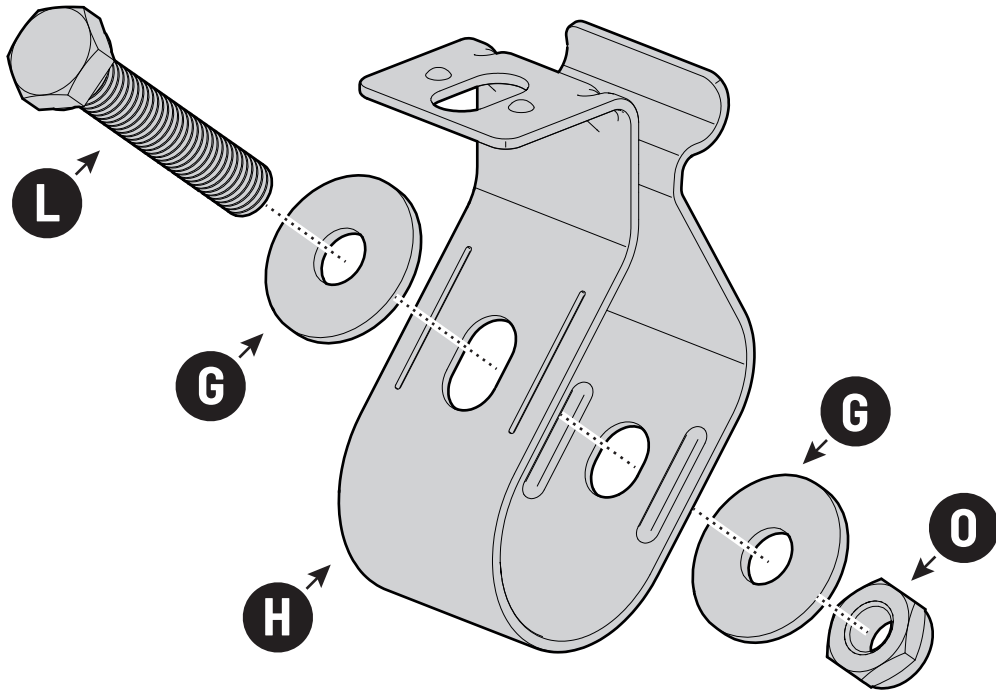




x6


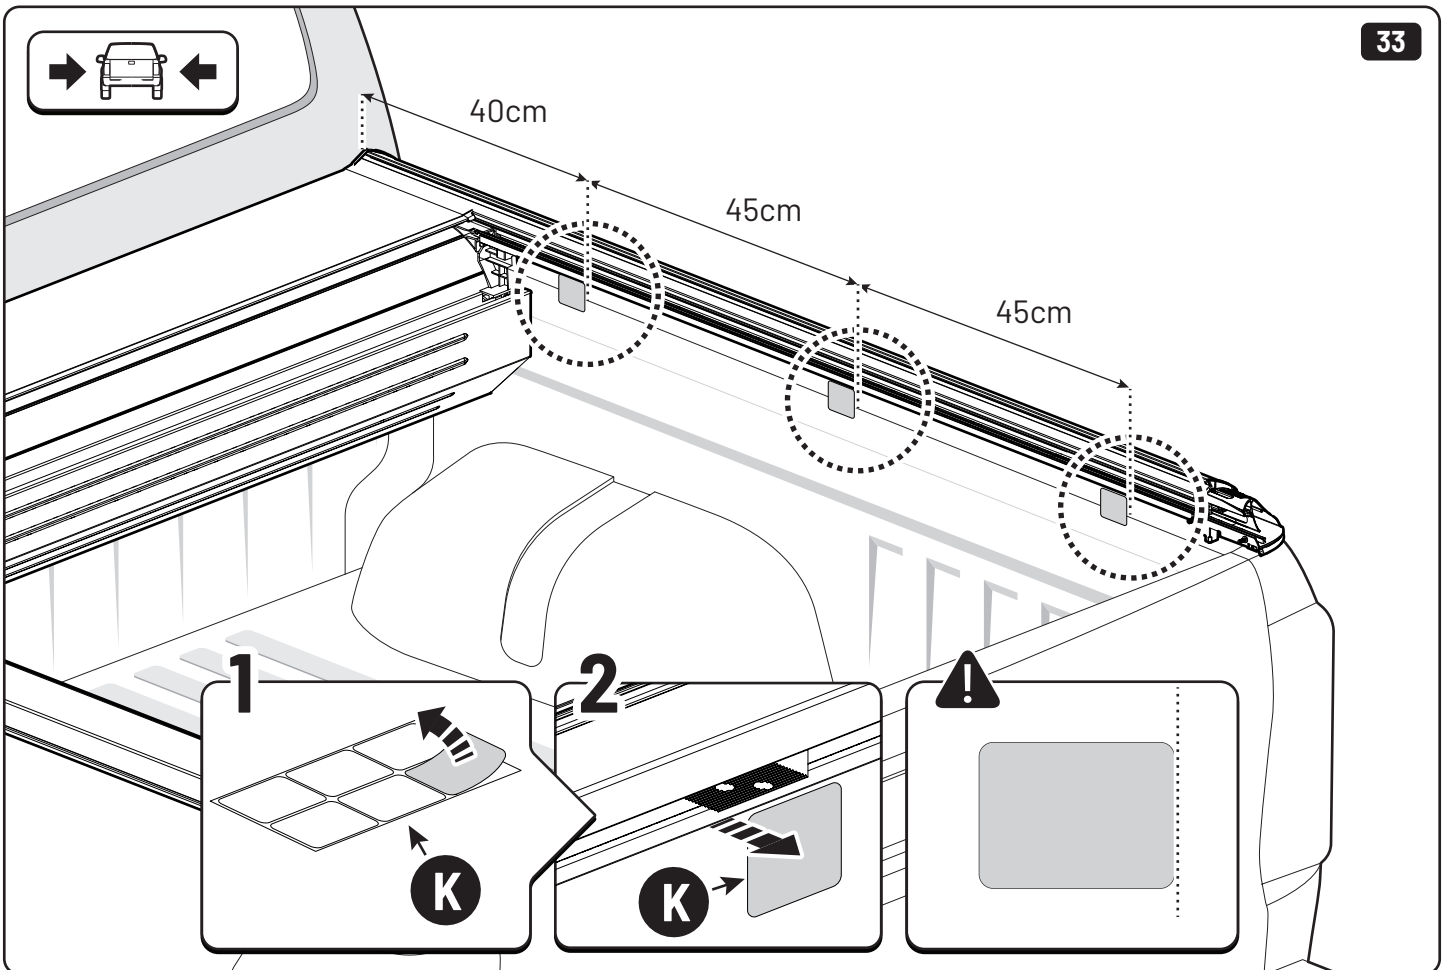



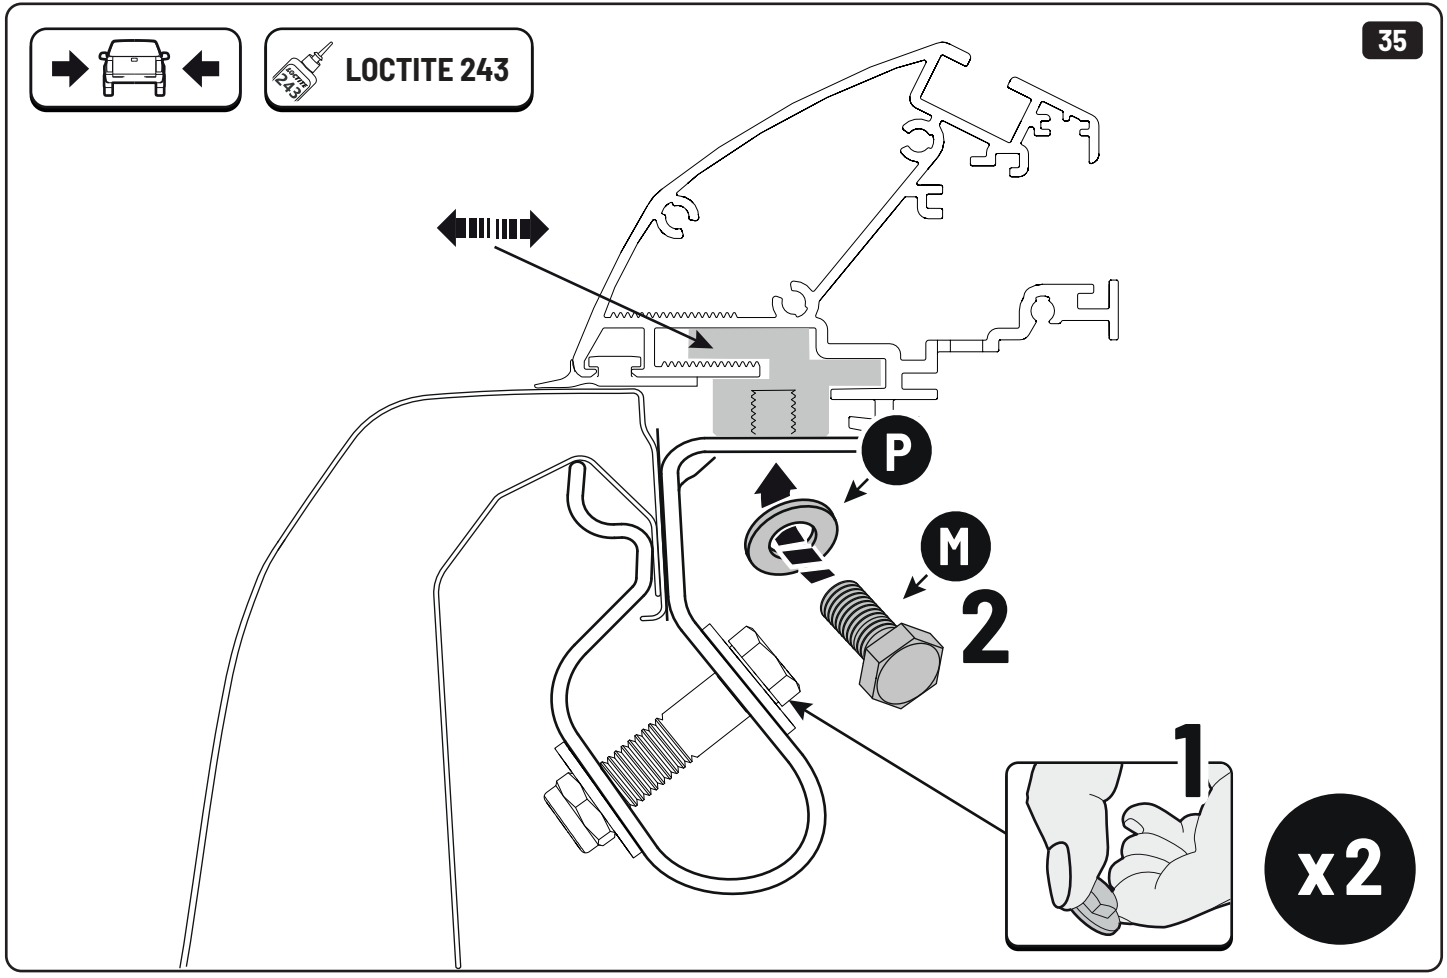

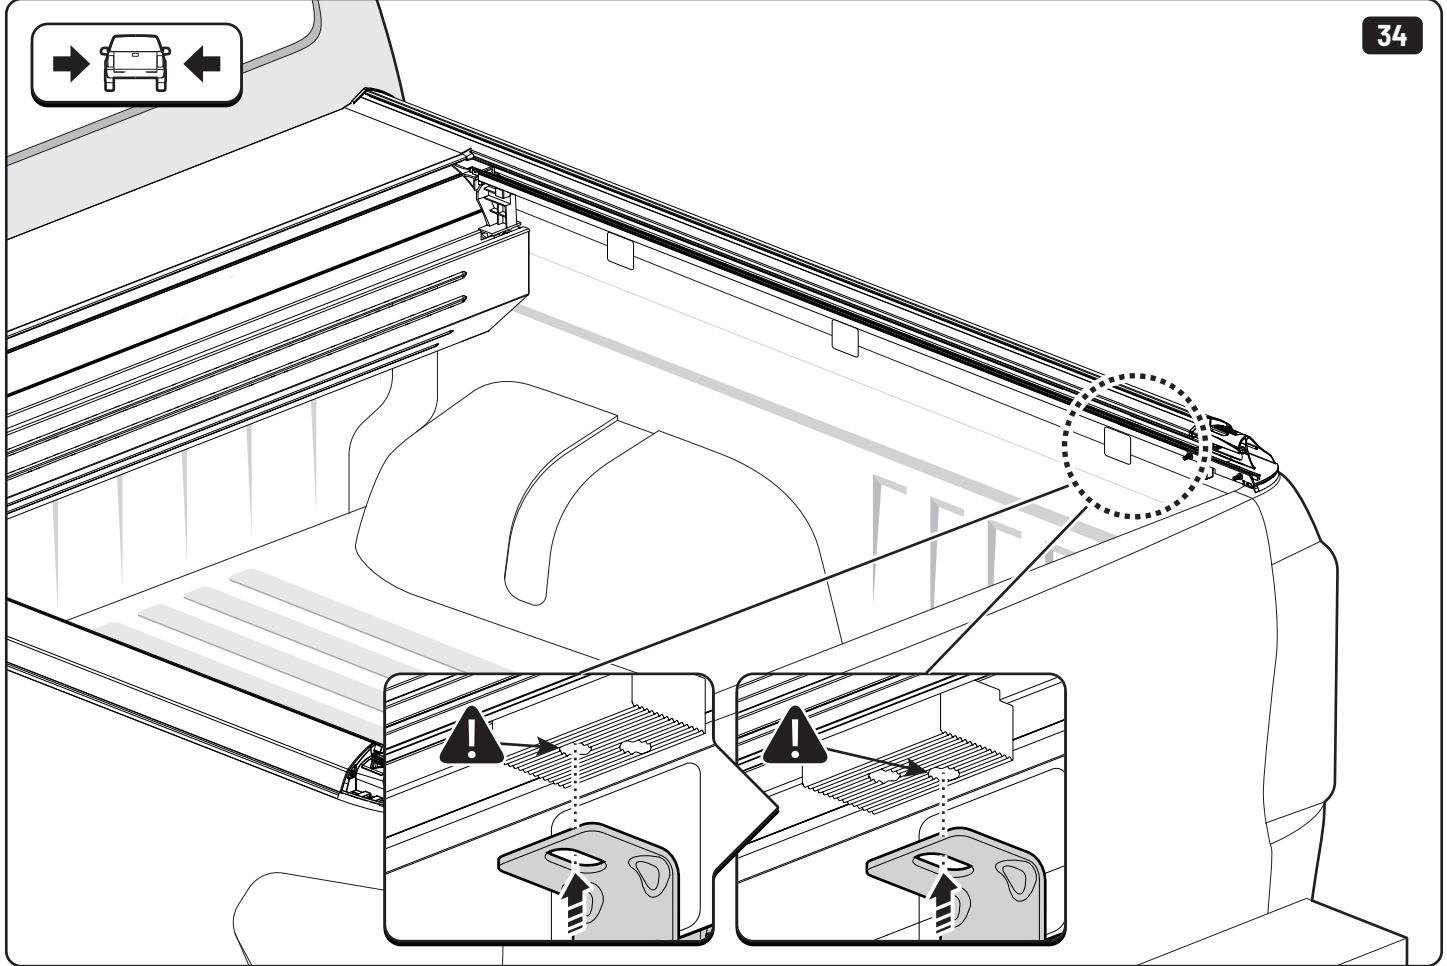


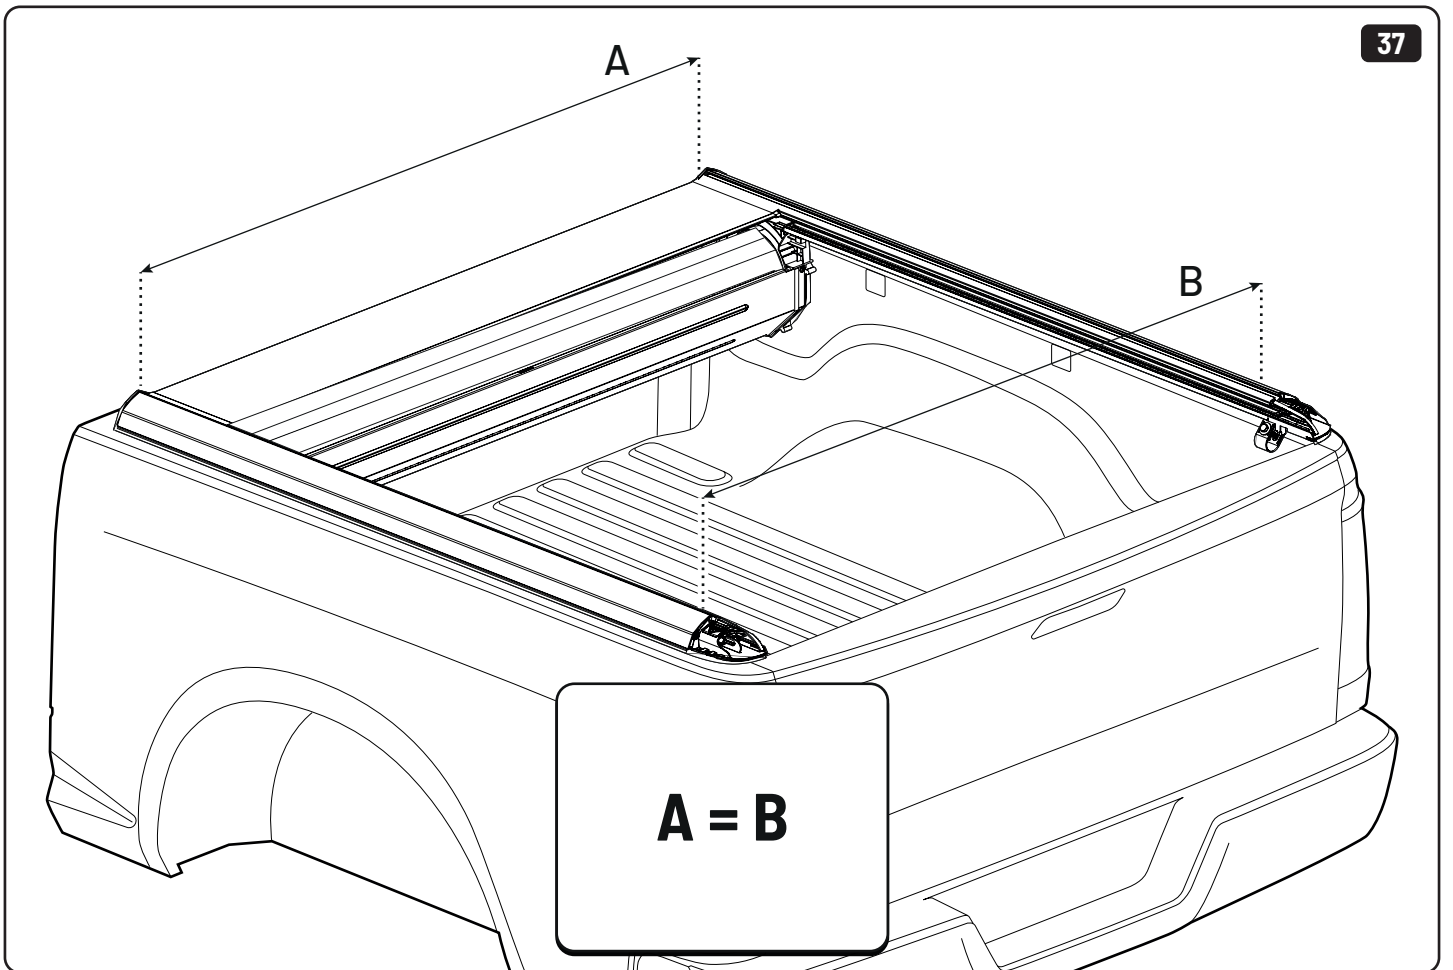
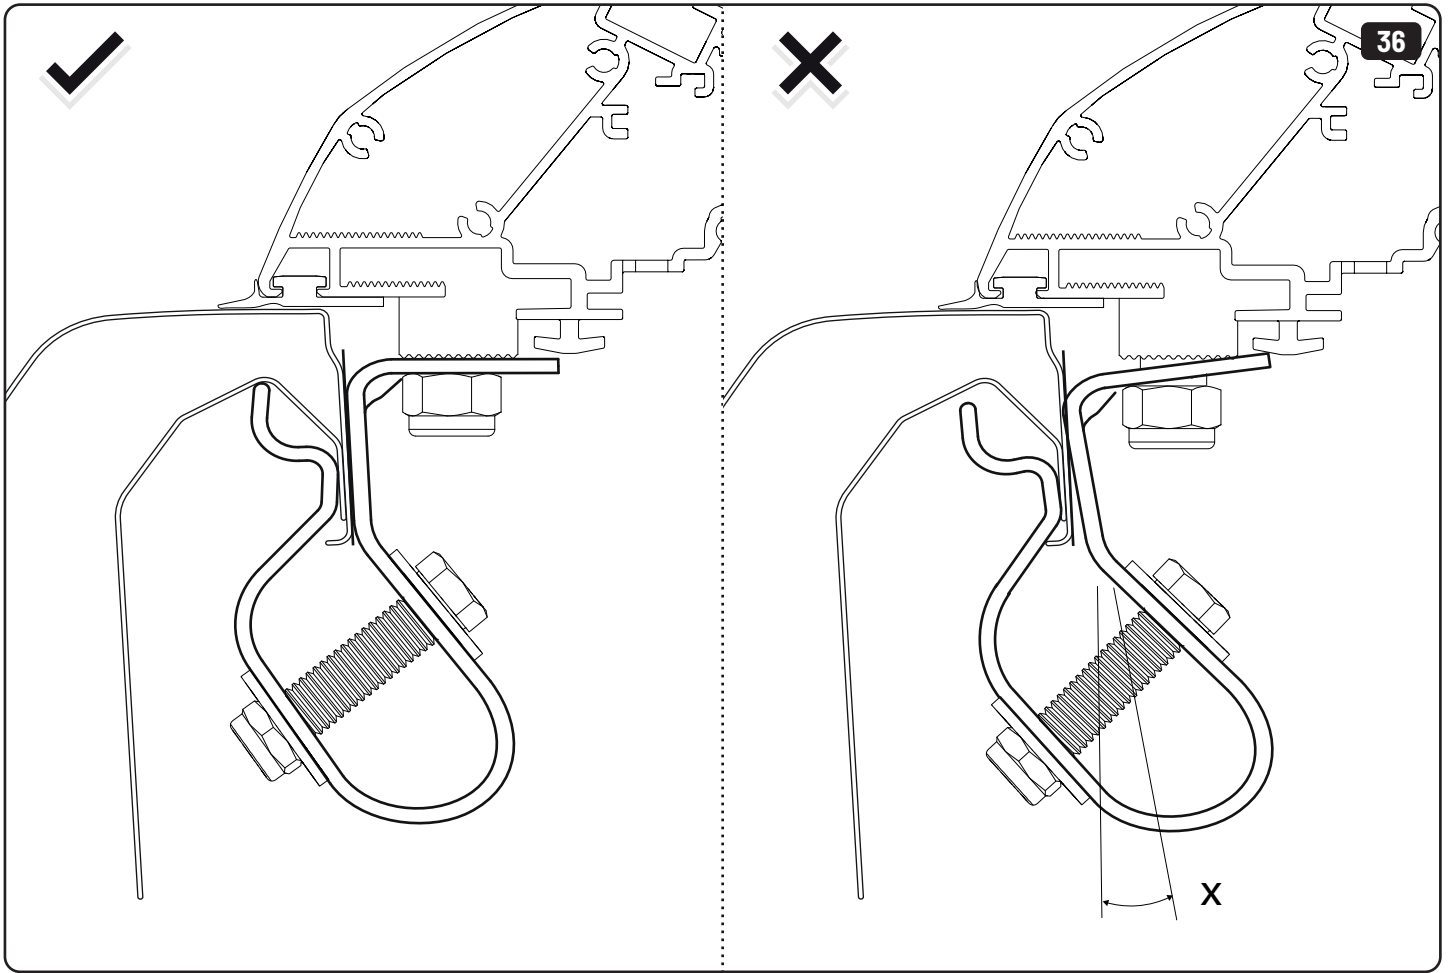


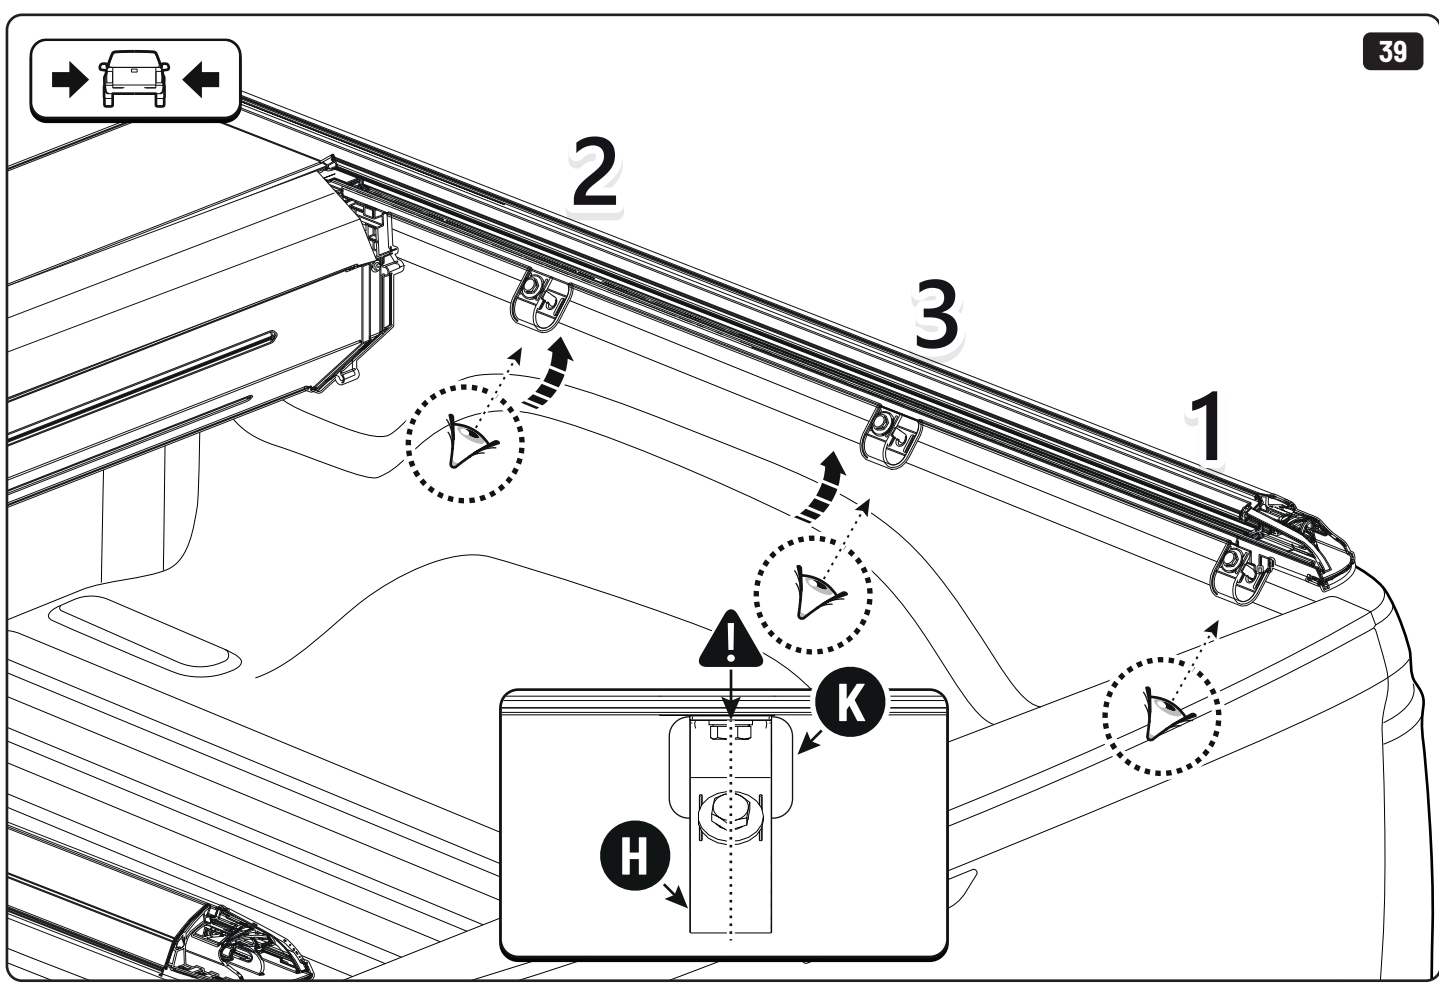
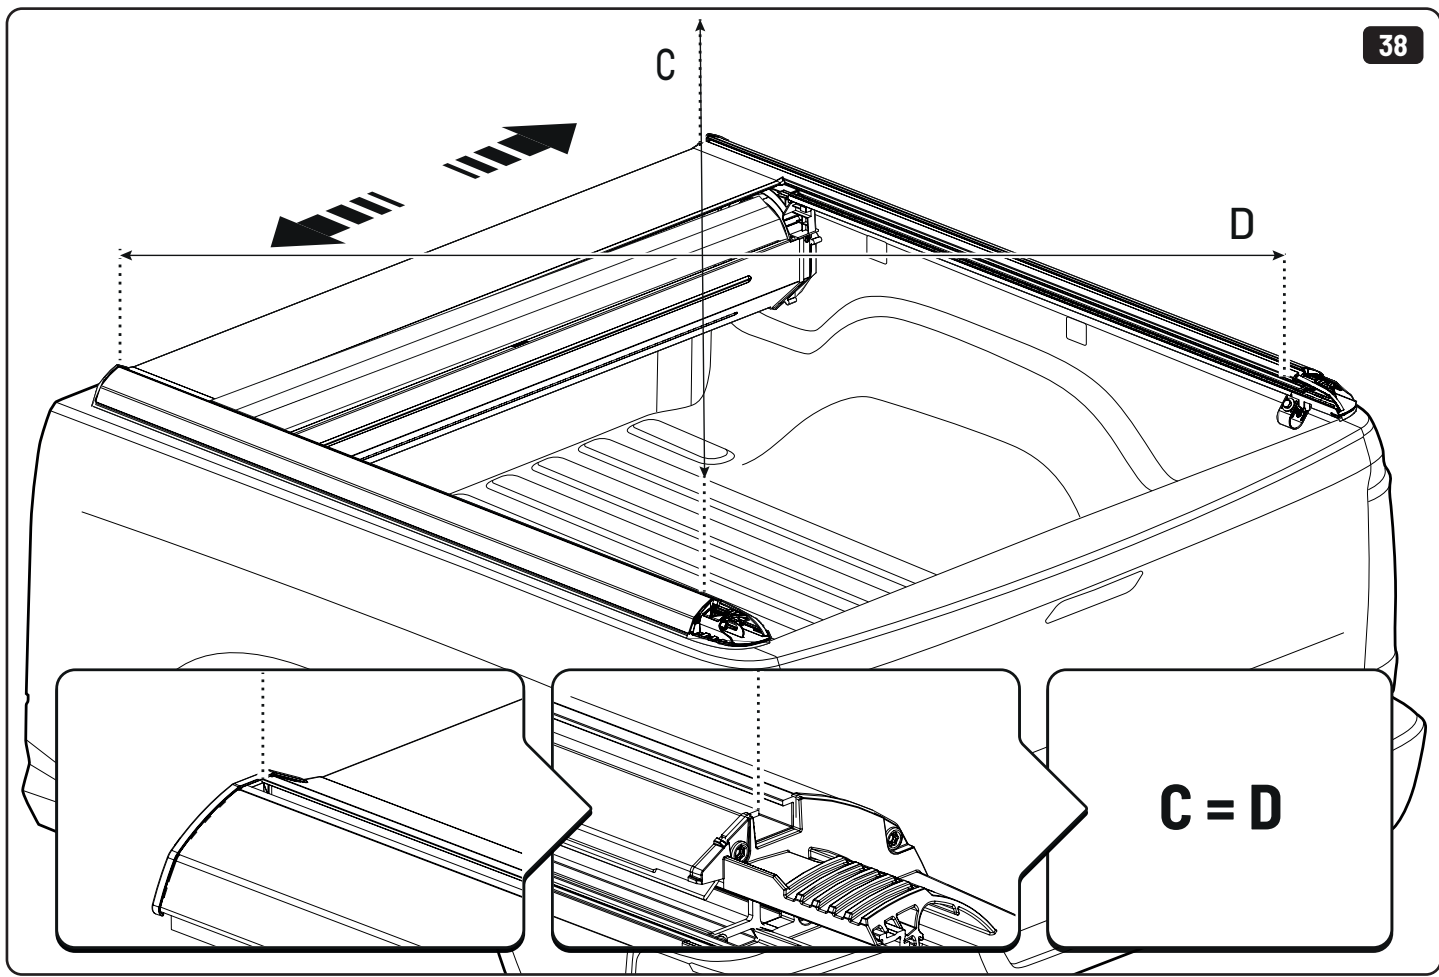


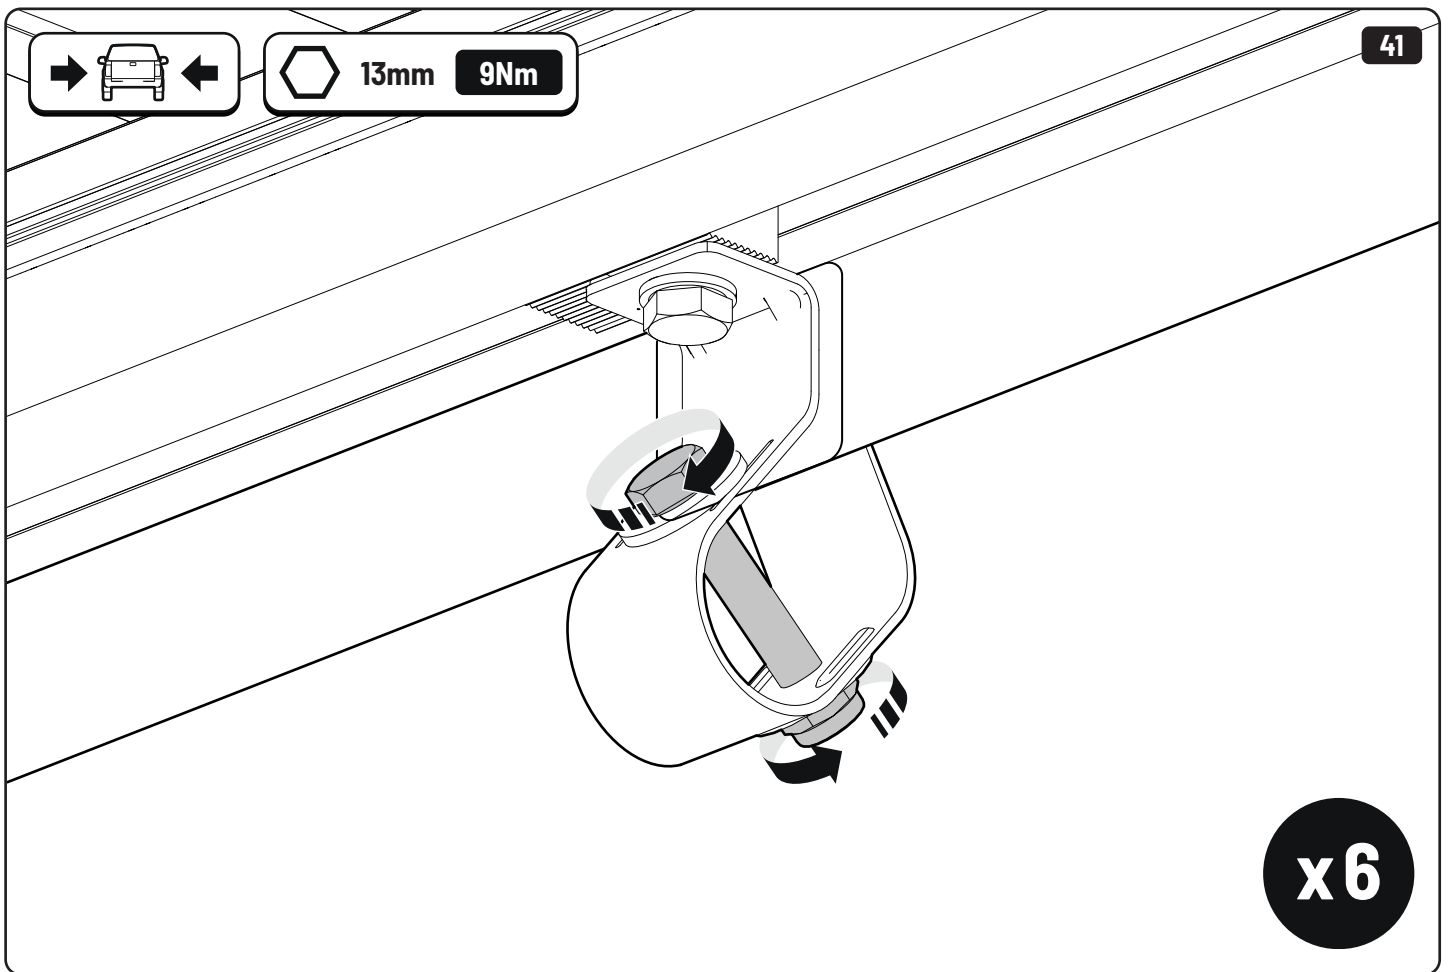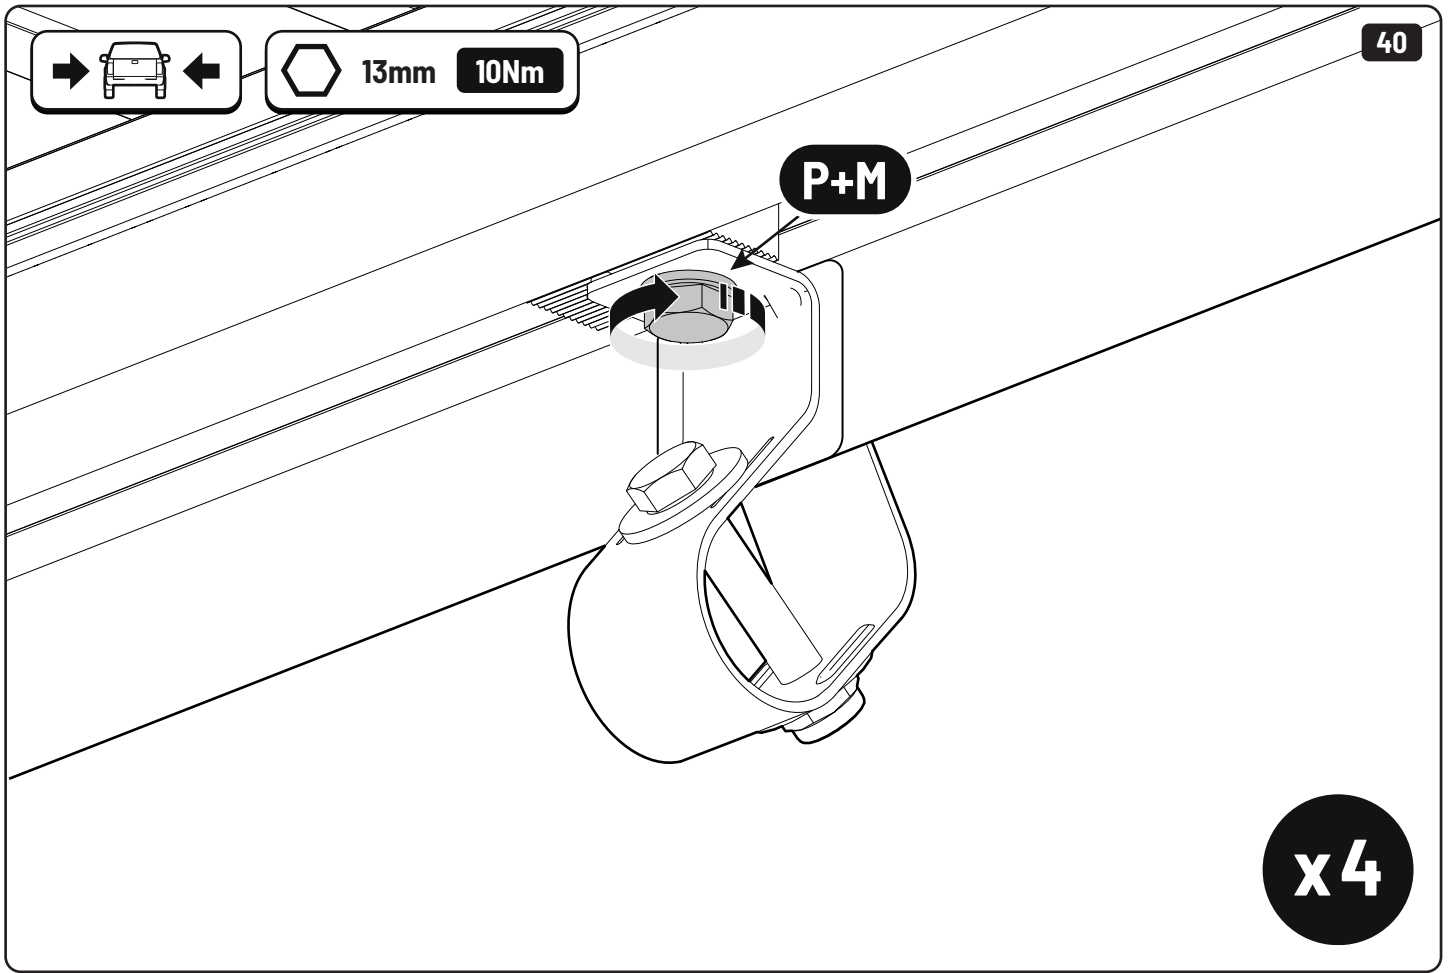


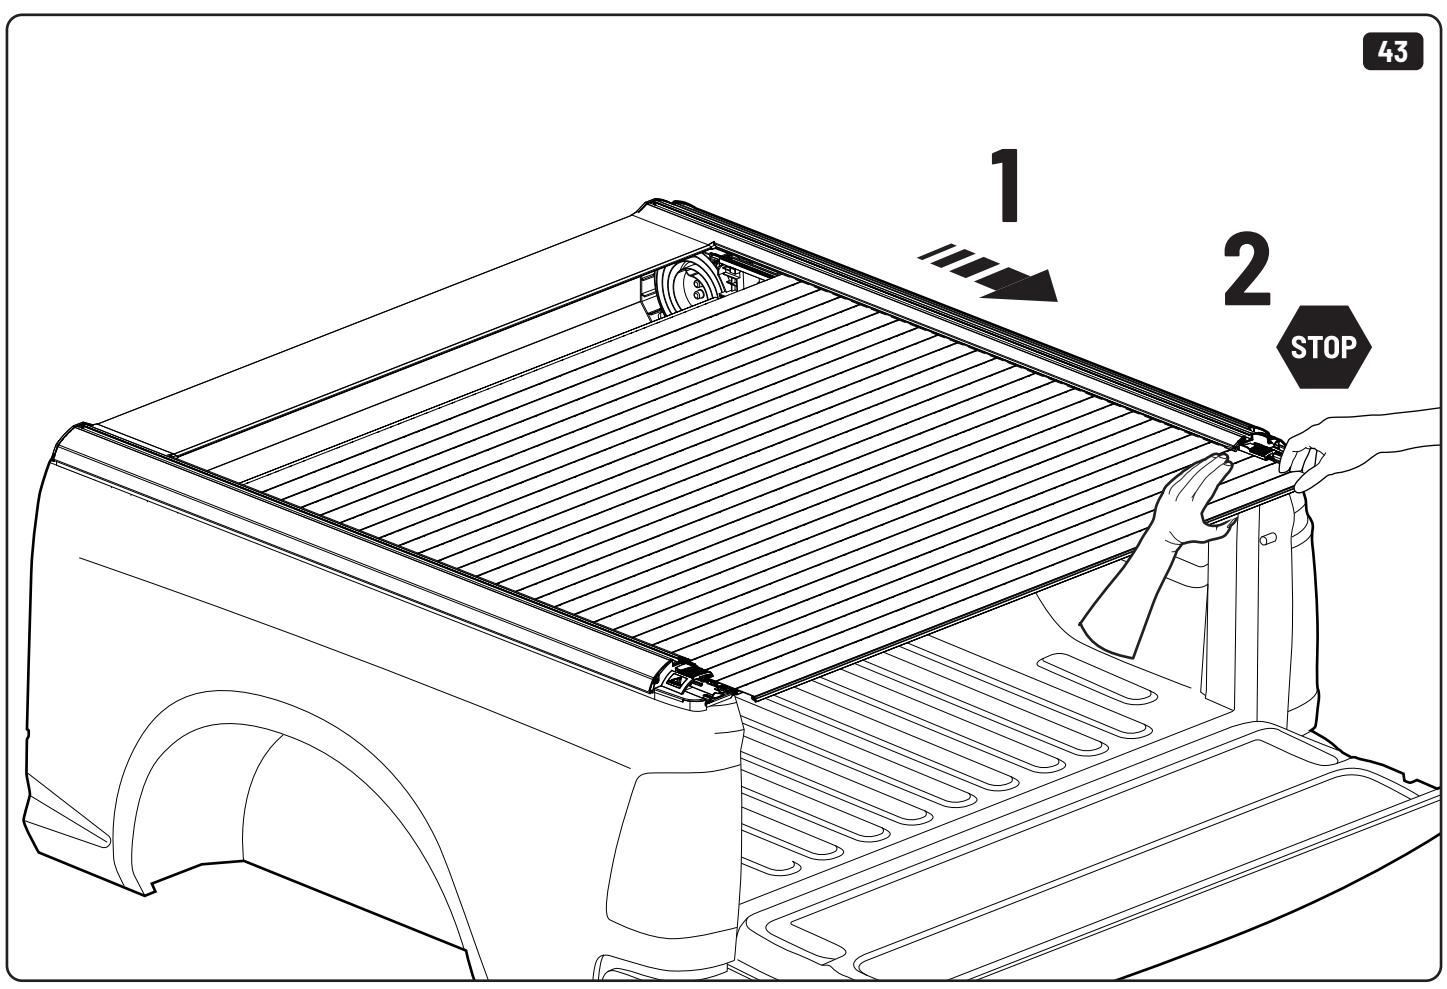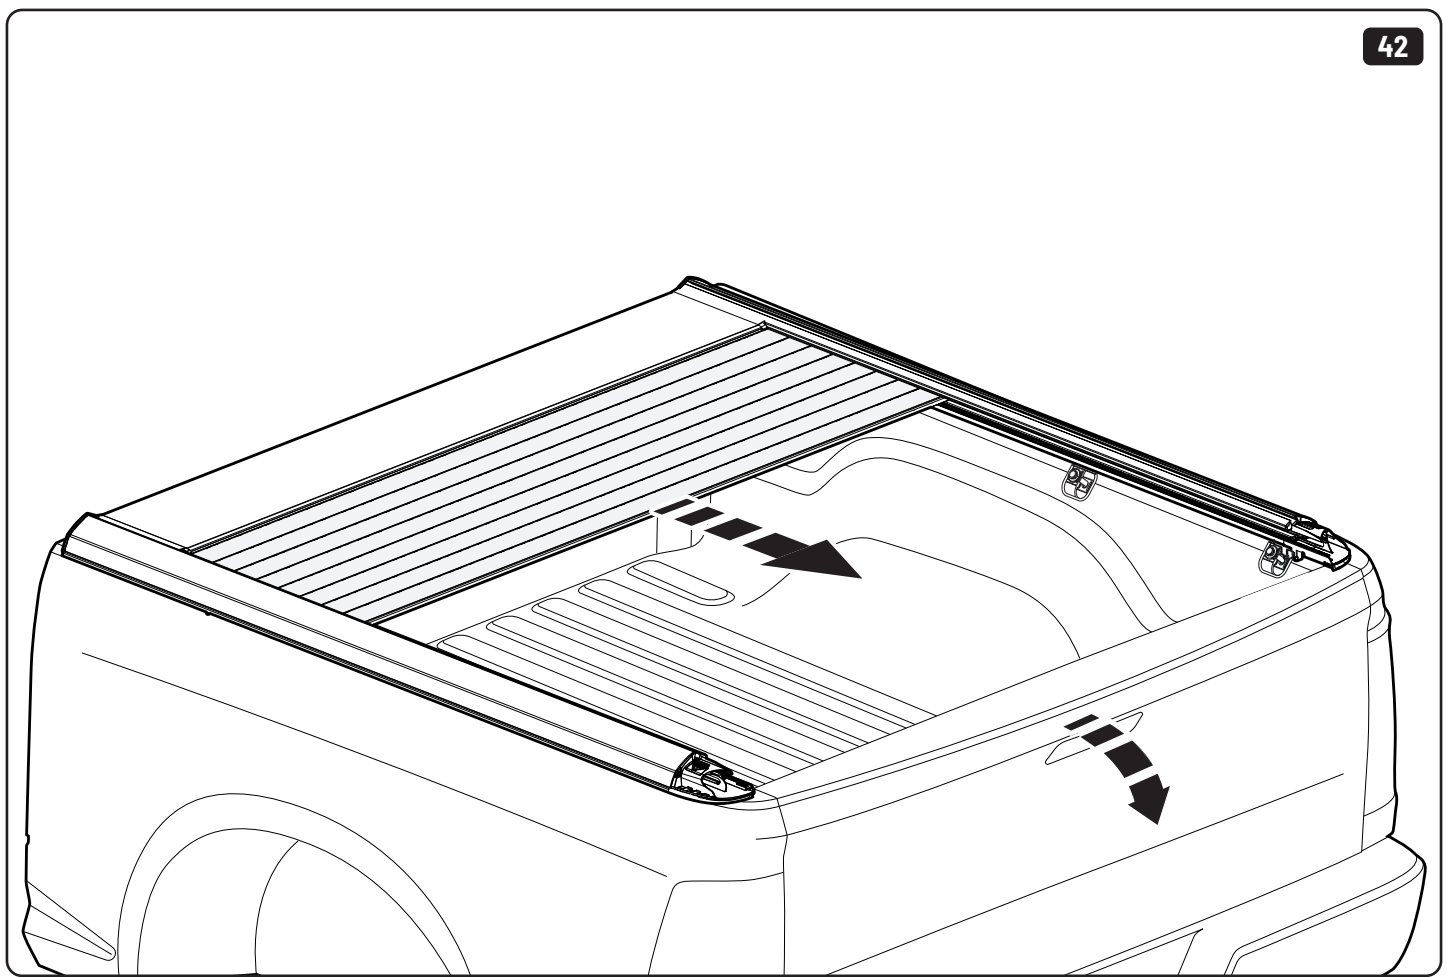


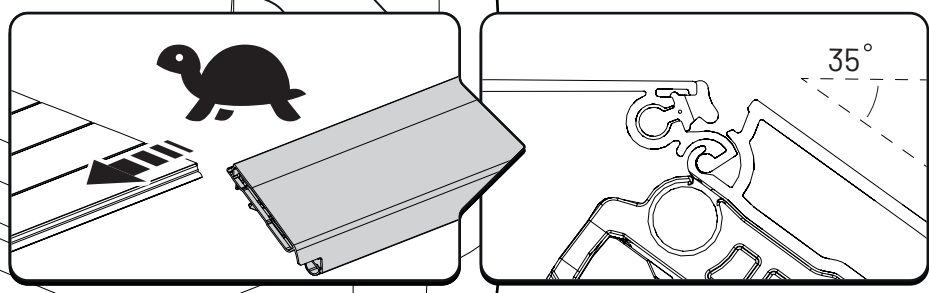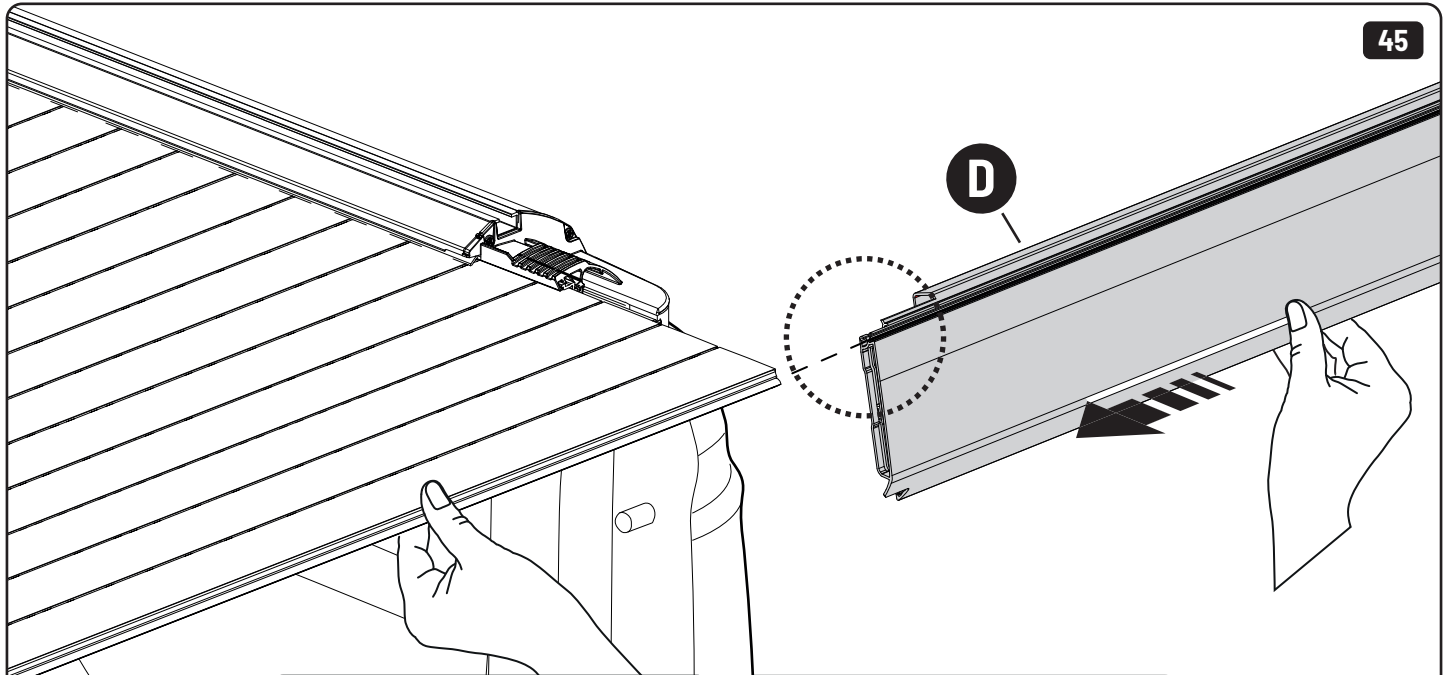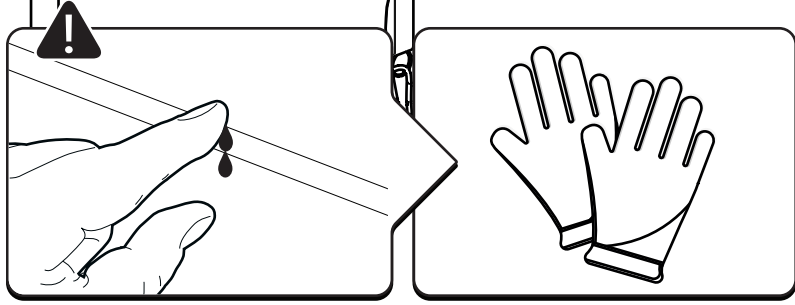
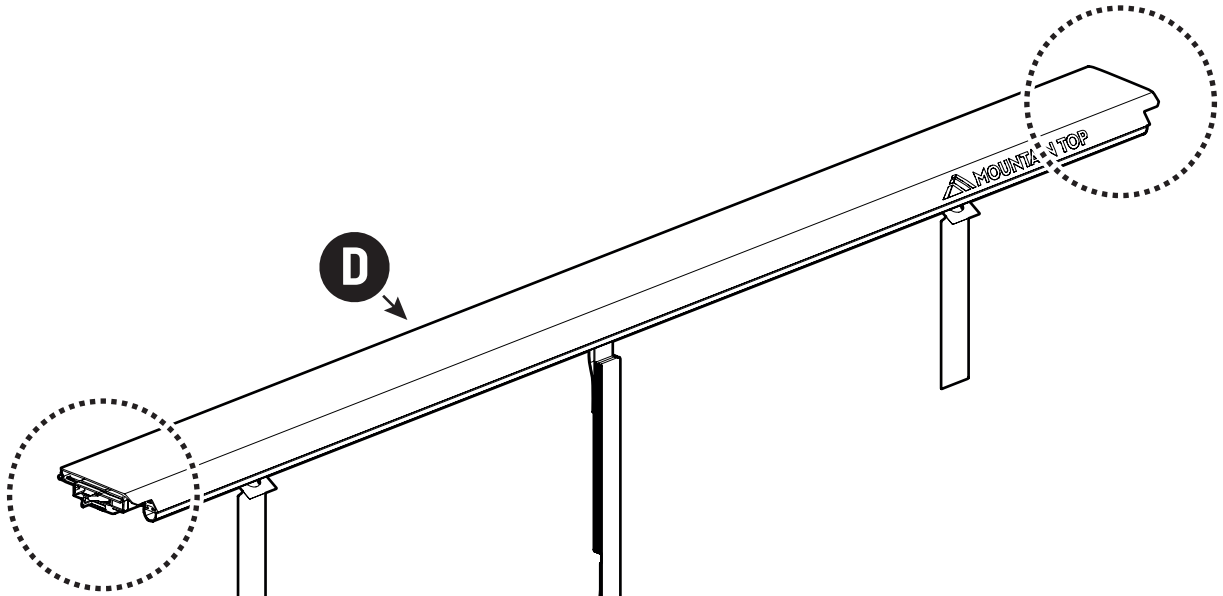


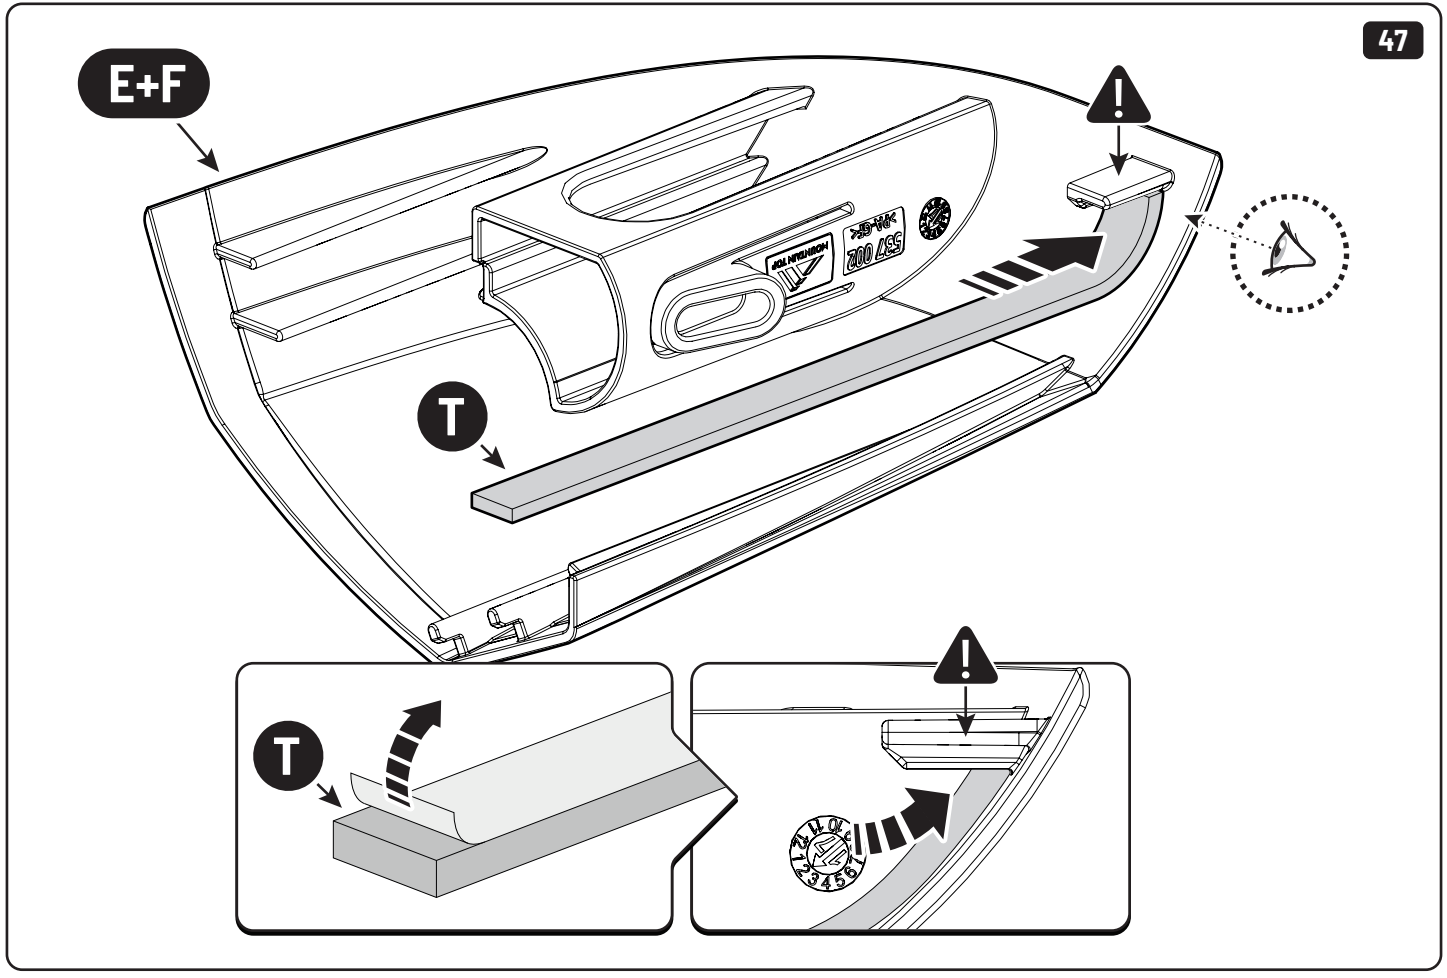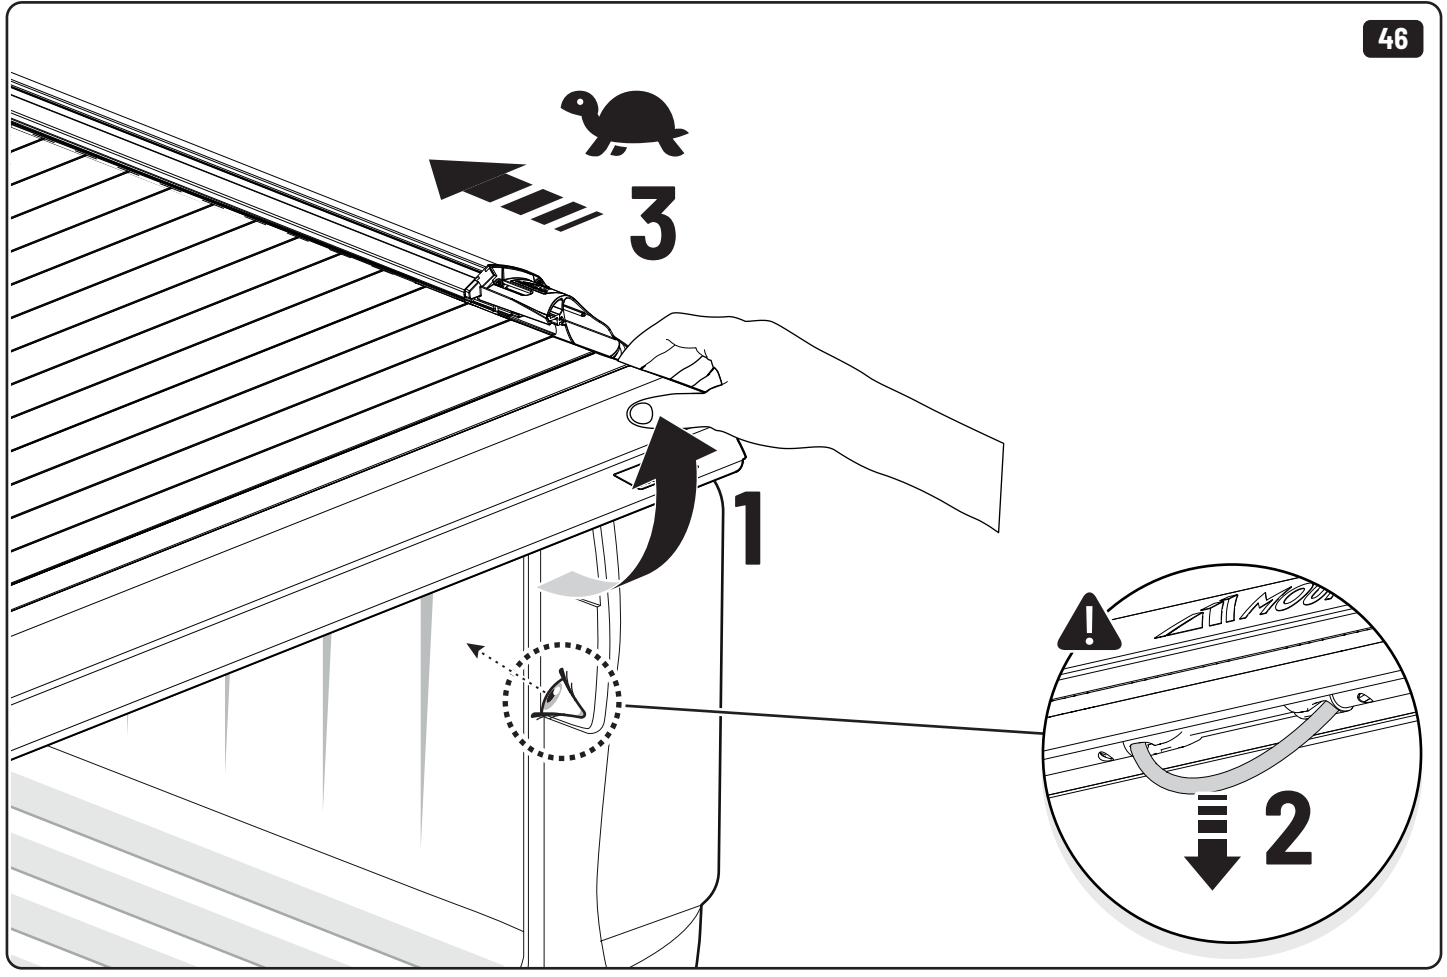


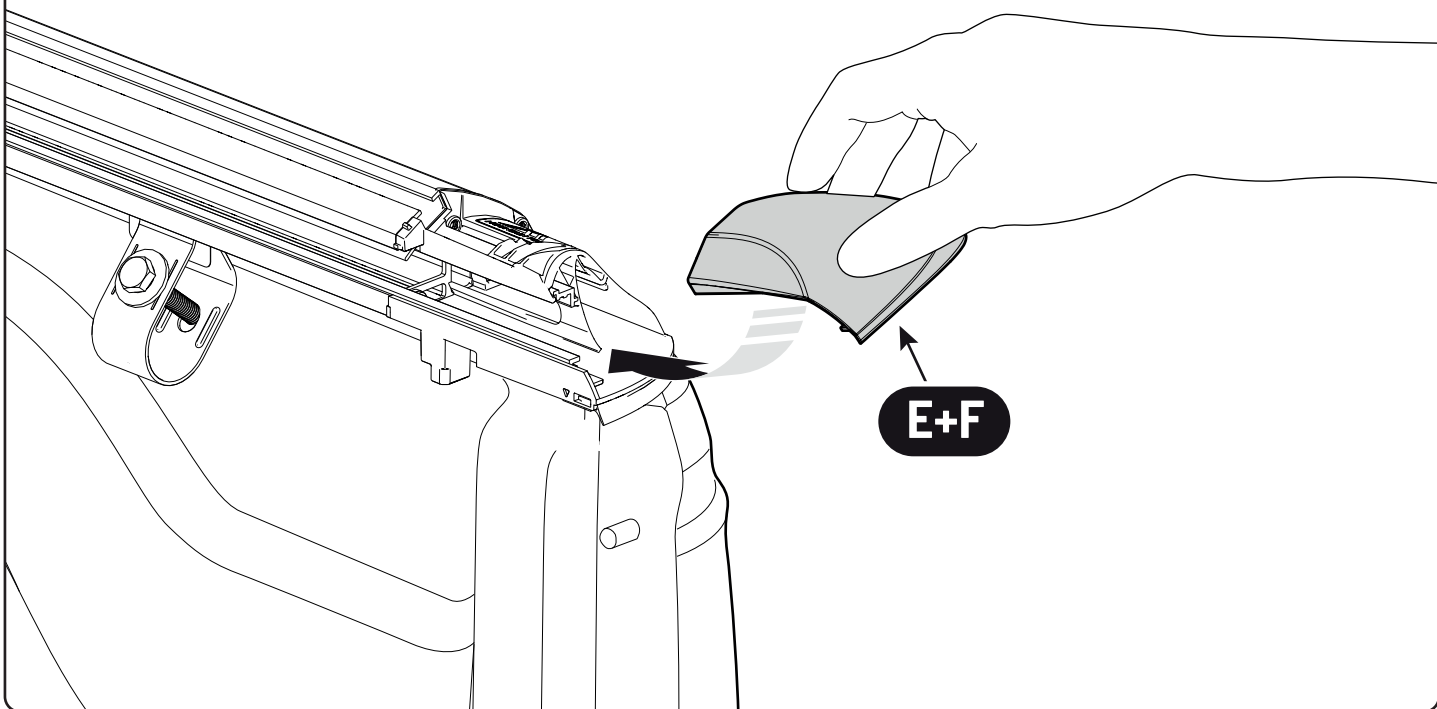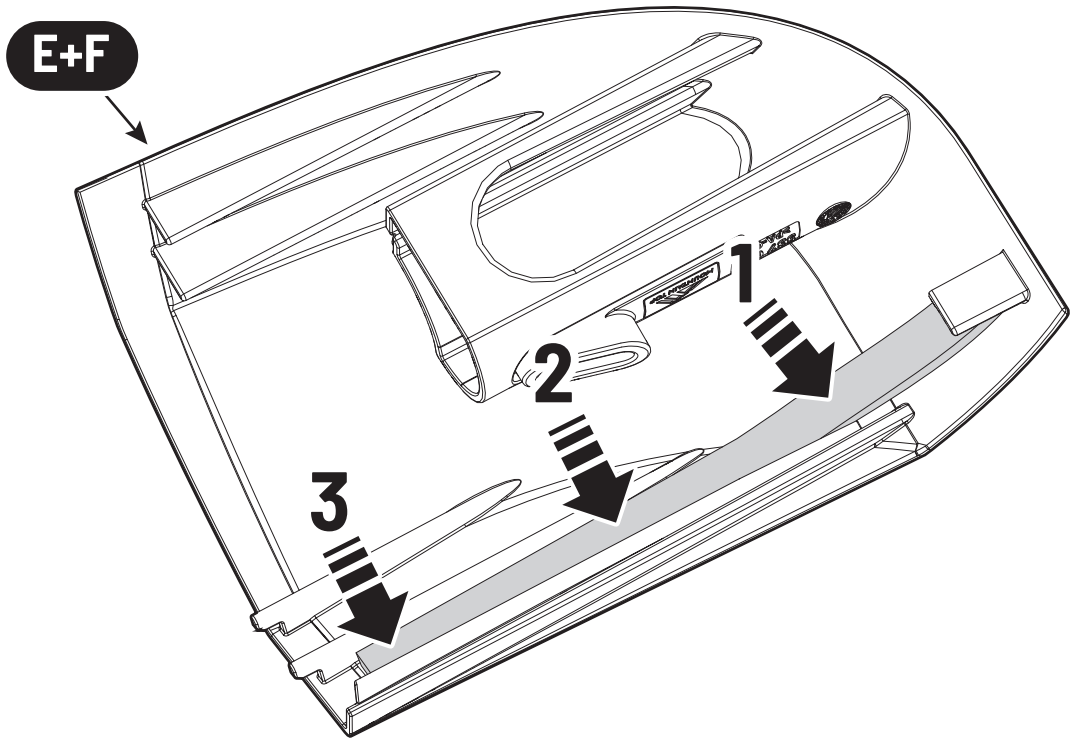

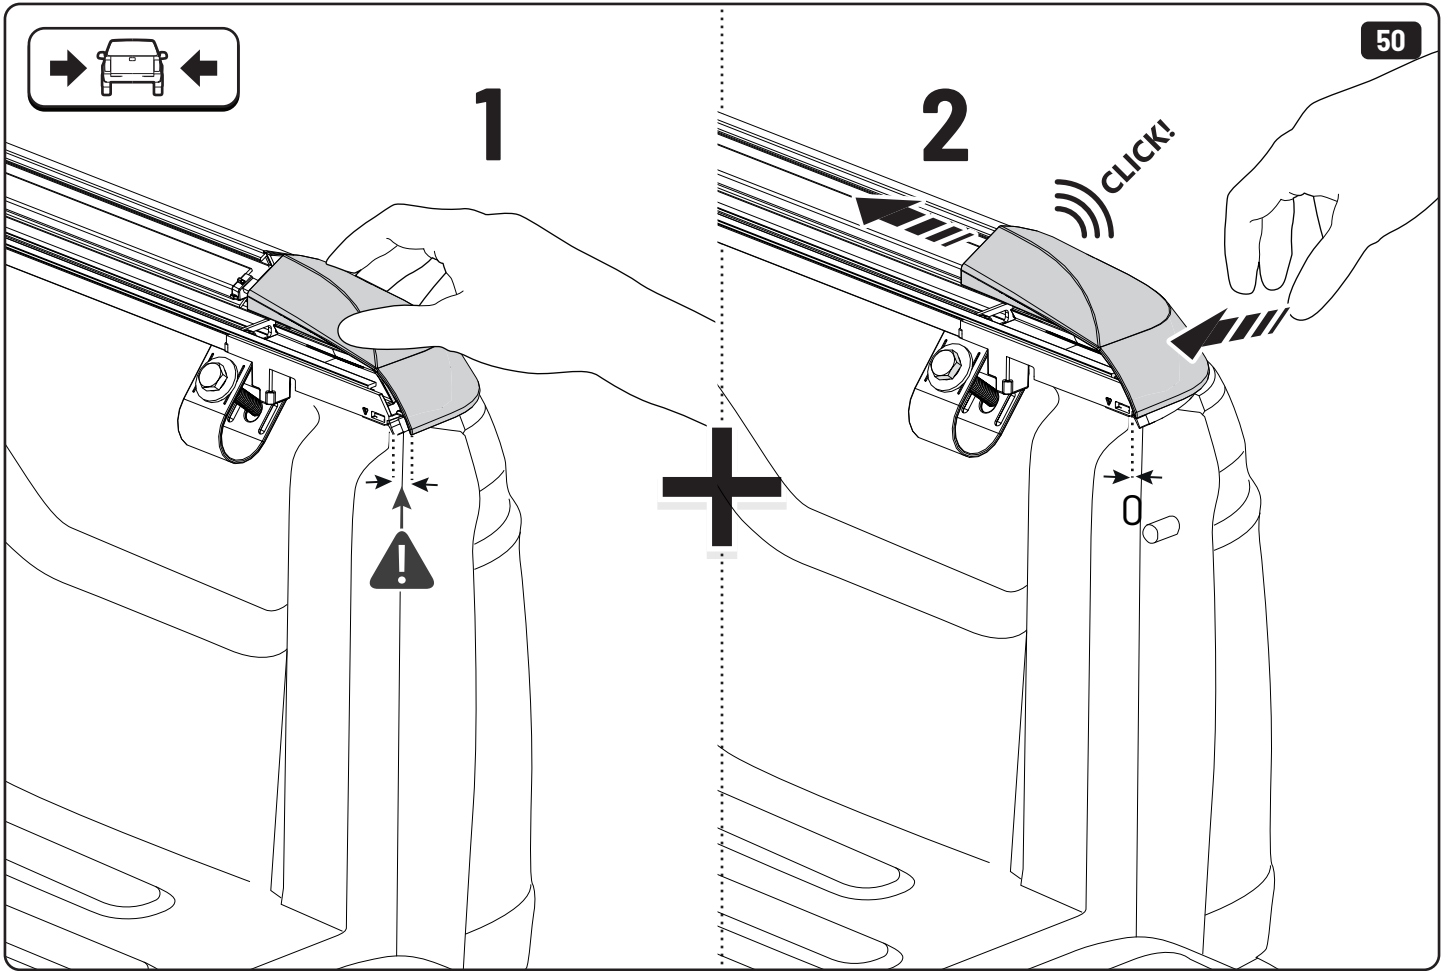

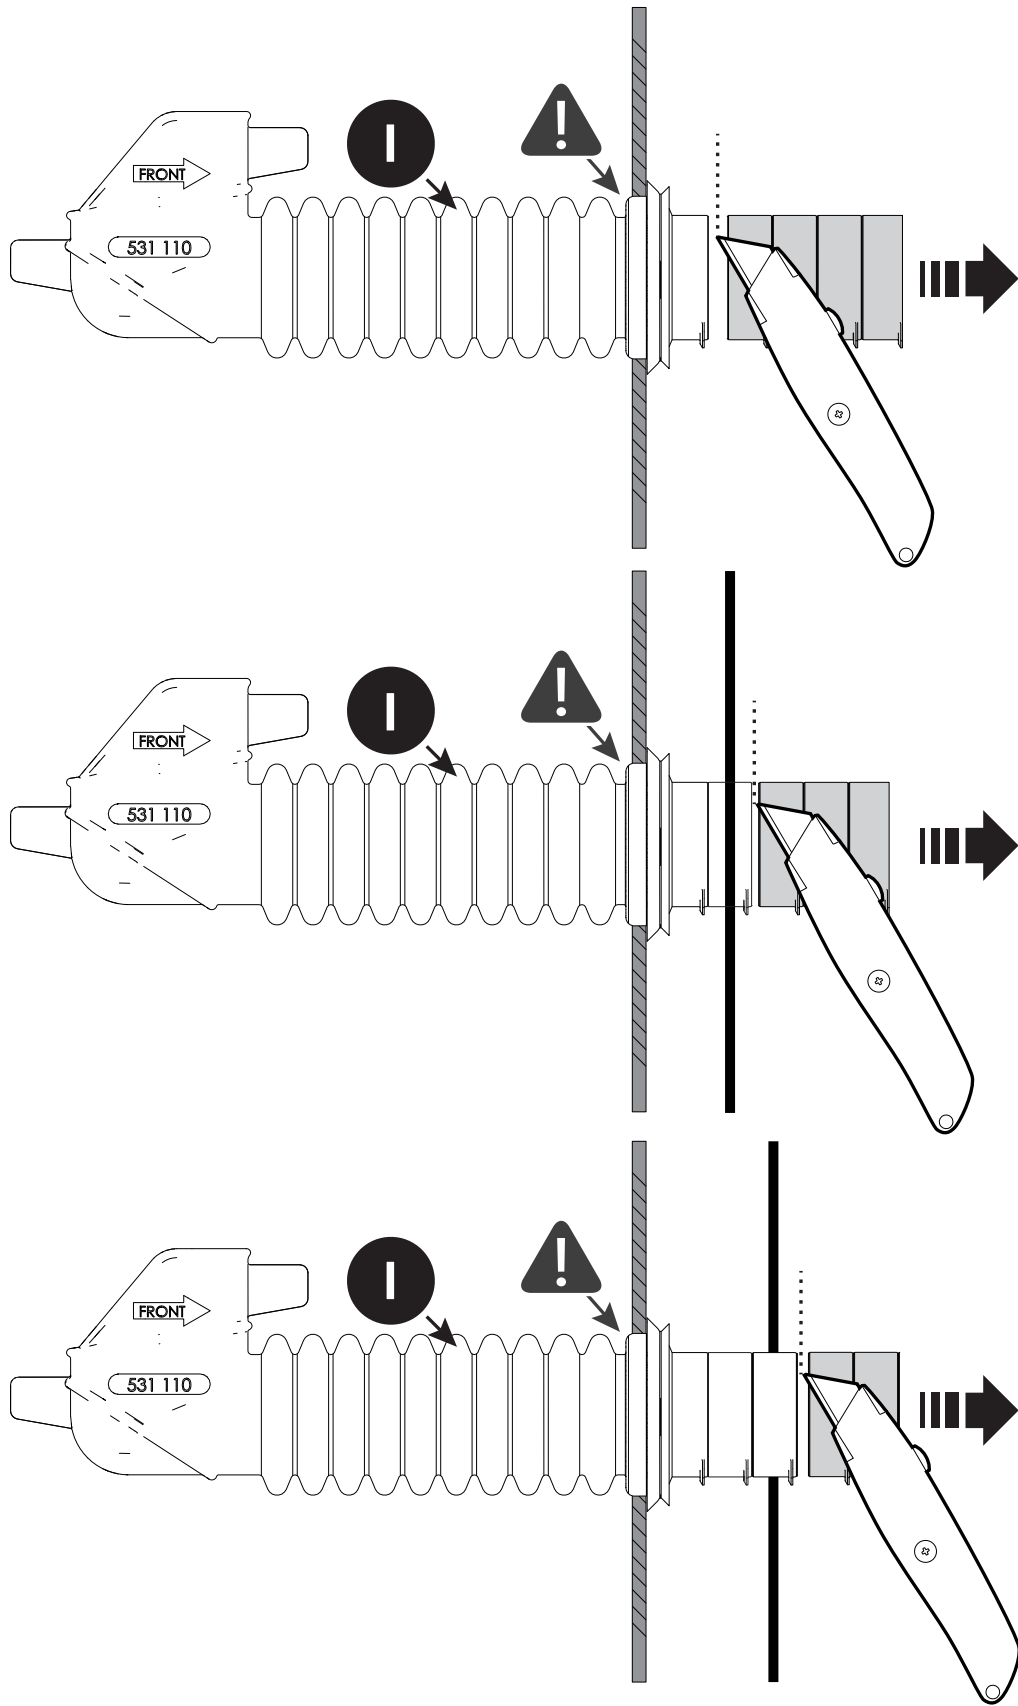

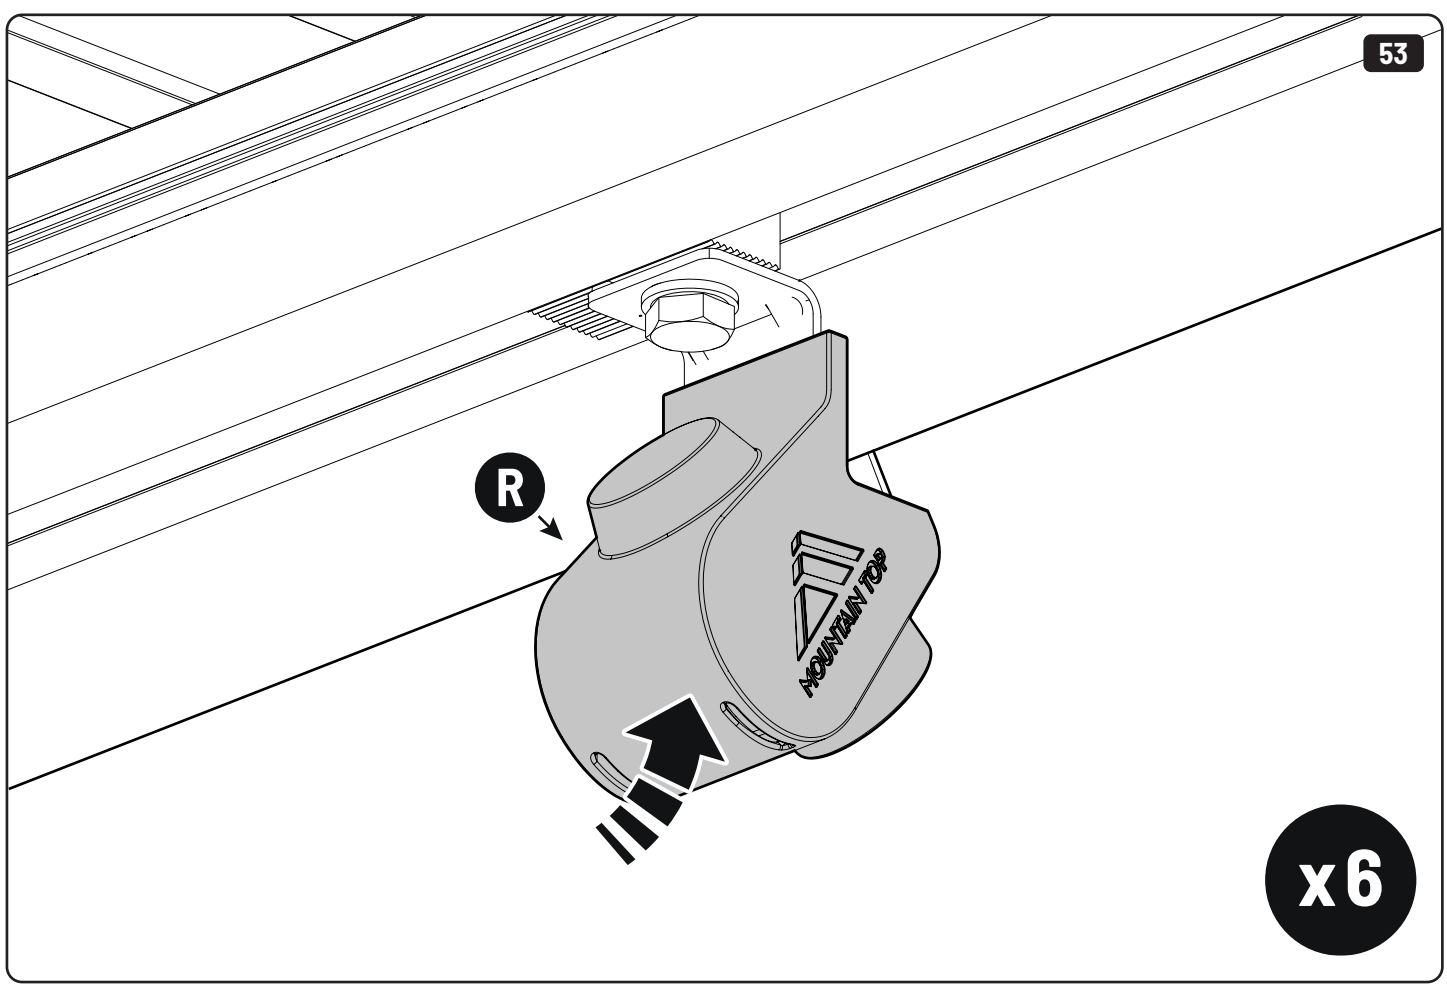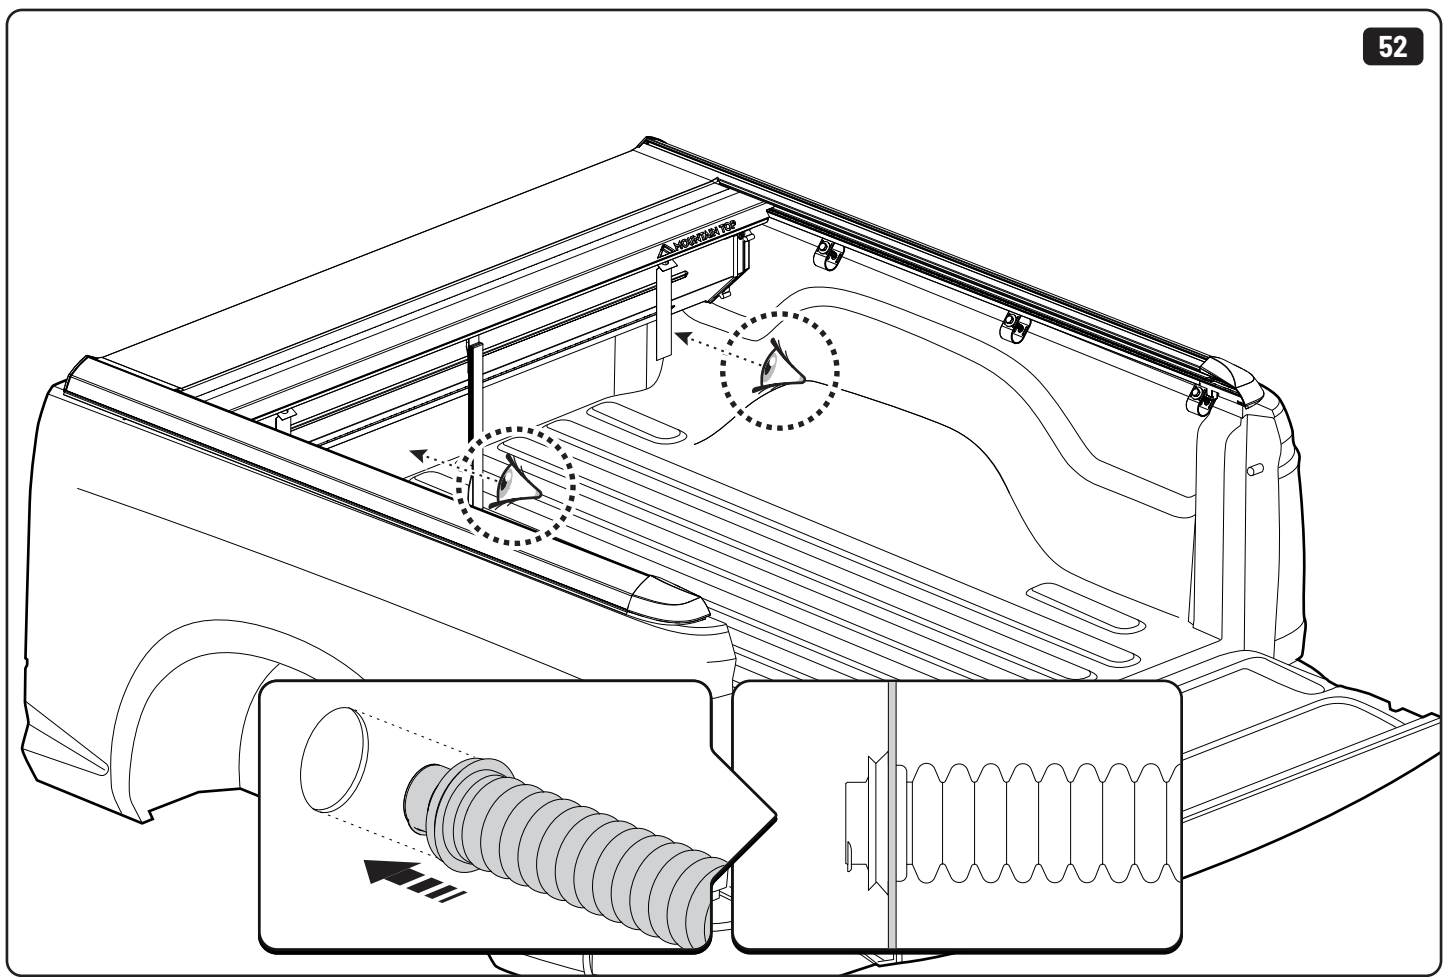

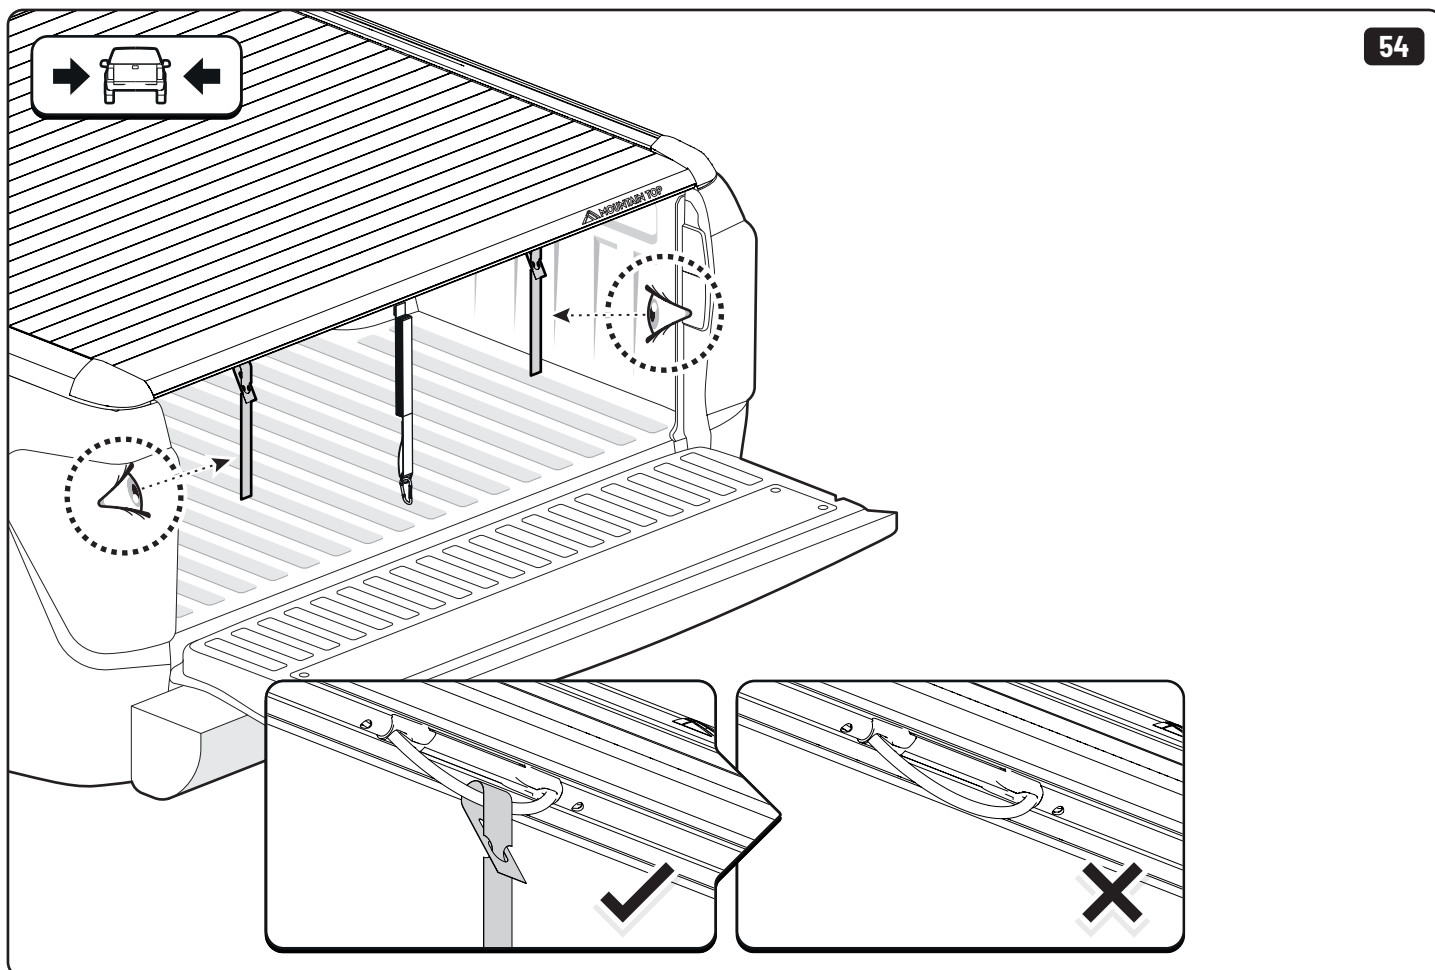

EV0m Installation checklist



Steps	Page	Done by
Mounting gliding rail in canister	12	
Holes for drain	16-17	
Width + Cross measurement	23-24	
Tightening the clamp screw	25	
Mounting drain	32	



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

Part number (s)	Model / Year	Cab type (s)	Installation time	Weight
EV0m T090 AB01	Hilux / 2016 ->	Double Cab	1 hour (s)	29 kg
EV0m T091 AB01	Hilux / 2016 ->	Extra Cab	1 hour (s)	33 kg

GB Installation manual	S Monteringsanvisning	D Einbauanleitung
SF Asennusohje	E Instrucciones de montaje	CZ Návod k instalaci
F Notice de montage	H Szerelési utasítás	I Istruzioni di montaggio
PL Instrukcja montażu	P Instruções de instalação	GR Οδηγίες Εγκατάστασης
NL Installatie-instructies	RUS Инструкция по установке	DK Monteringsvejledning
TR Montaj Talimatı	N Monteringsveiledning	RO Instructiuni de instalare